



SYSTEM 6-A Marine Operations Manual



Terminale GNL Adriatico S.r.l.

TABLE OF CONTENTS

S	ignature	e Page	1
R	evision	History	2
T	able of (Contents	3
1	Intro	duction 1	0
	1.1	Using This Document	1
	1.2	Code of Safe Working Practices1	4
	1.3	Industry References and Guidelines1	4
	1.4	Exceptions, Updates, and Management of Change1	4
2	Gene	ral Information	5
	2.1	Vessel Types1	6
	2.2	Marine Support Operations, Position Titles, Key Responsibilities1	7
	2.3	Marine Resources and Reviews2	0
3	Vesse	el Selection and Contracting	1
	3.1	Requisition	3
	3.2	Vessel Operator Pre-Qualification	6
	3.2.1	Identifying Potential Bidders2	6
	3.2.2	Vessel Operator Pre-qualification Process2	6
	3.2.3	Safety Performance2	7
	3.2.4	Use of OCIMF OVMSA	7
	3.2.5	Qualification Criteria2	9
	3.2.6	Gap Closures2	9
	3.3	Technical Bid Package	9
	3.4	The Technical Evaluation	0
	3.5	Vessel Inspections	1
	3.6	Spot-Hire Vessels	3
	3.7	Fuel Barge or Tanker Hire3	3
	3.8	Contactor Interface	3
	3.9	Tools	4
N		nspection for Small Workboats	
4		y, Security, Health, and Environment5	
	4.1	Safety Management Systems5	
	4.2	Crew Manning and Training6	0

	4.3	Personal Protective Equipment (PPE)	62
	4.4	Risk Management	63
,	4.5	Health Management	65
,	4.6	Pollution Prevention	68
	4.7	Incident Reporting and Investigation	69
	4.8	Emergency Response	71
	4.9	International Ship and Port Facility Security (ISPS) Code	72
5	Marii	ne Operations	74
	5.1	Communications	76
	5.2	Onboard Documentation Requirements	81
	5.2.1	Local Coast Guard Offices and Port Requirements	83
	5.2.2	Passage Planning and Navigation	84
	5.3	Vessel Voyage Log System (VLS)	86
	5.3.1	VLS Logging Requirements	86
	5.4	Operations Near the Terminal and in the Safety Zone	88
	5.5	In Port or Shore Base & Alternative landing point Operations	93
	5.6	Tank Cleaning and Enclosed Space Entry	94
	5.7	Engine Room Operations	95
	5.8	Fuel Management	97
	5.9	Marine Vessel and Crew Requirements	
	5.9.1	Vessel Master Responsibilities	99
	5.9.2	Vessel Crew Competency Requirements	102
	5.9.3	Ship's Crew / Personnel Onboard (POB) Lists	103
	5.10	Emergency Standby and Rescue Operations	104
	5.11	Vessel Crew Change	106
	5.12	Tug Vessel Operations	106
	5.12.´	Tug Vessel Departure Procedures	108
	5.12.2	2 Tug En Route and Arrival Procedures	110
	5.12.3	3 Tug Offshore Site Departure Procedures	111
	5.12.4	Tug Standby Operations during LNGc Offloading Operations	111
	5.12.5	5 Firefighting	114
	5.12.6	5 Training and Exercises	115
	5.13	Line Handler Boat Operations	117

	5.13.	1	Line Handler Boat Departure Procedures	.117
	5.13.	2	En Route and Arrival Procedures	.120
	5.13.	3	Offshore Site Departure Procedures	.121
	5.13.	4	Transfer of Line Handling Crew to and from the Terminal	.121
	5.14	Pilo	t Boat	.122
	5.14.	1	Pilot Boat Departure Procedures	.122
	5.14.	2	En Route and Arrival Procedures	.124
	5.14.	3	Offshore Site Departure Procedures	.124
	5.14.	4	Pilotage Operations	.125
	5.15	Тоо	ls	.126
6	Supp	ort \	/essel Operations	127
	6.1	LNG	GC Assist Operations	.128
	6.1.1		Communications and Operational Checks	.129
	6.1.2		Approach	.130
	6.1.3		Static Towing and Departure	.131
	6.2	Star	ndby Operations	.132
7	Spec	ialize	ed Vessel Operations	136
	7.1	Dyn	amic Position (DP) General Information	.137
	7.2	DP ⁻	Training and Competency	.140
	7.3	DP I	Risk Assessment	.143
	7.4	DP	Operations	.146
	7.5	ROV	Operations	.148
	7.5.1		(ROV) Vehicle Classifications	.148
	7.5.2		ROV Tasks	.149
	7.5.3		Environmental Conditions	.150
	7.5.4		Hazards	.152
	7.5.5		Responsibilities	.153
	7.6	Dive	e Support Operations	.156
	7.7	Oth	er Offshore Specialized Vessels	.157
8	LNG	СОр	erations	158
	8.1	Usir	ng This Chapter	.160
	8.2	Car	go Handling	.161
	8.2.1		Pre-Checks	.162

8.2.2	2	Berthing	163
8.2.3	3	Setting the Gangway	164
8.2.4	1	Establishing the Ship/Terminal Communication and ESD Systems	165
8.2.5	5	Ship/Terminal Pre-Transfer Meeting	166
8.2.6	5	Connecting the Vapor Return Arm	167
8.2.7	7	Connecting the Liquid Discharge Arms	169
8.2.8	3	Purge with N2 and Leak Test the Ship/Terminal Joint	170
8.2.9)	Returning Boil-off Vapor to LNGc	171
8.2.1	0	Pre-Transfer ESD (1) Test Under Warm Conditions	172
8.2.1	1	Cooling Down the Liquid Loading Arms	173
8.2.1	2	Pre-Transfer ESD (1) Test Under Cold Conditions	175
8.2.1	3	Start Transfer	176
8.2.1	4	During Transfer	178
8.2.1	15	Rate Down	179
8.2.1	6	Draining/Inerting the Liquid Loading Arms with N2	179
8.2.1	17	Purging/Inerting the Vapor Return Arm with N2	181
8.2.1	8	Disconnecting the Liquid Loading Arms	182
8.2.1	9	Disconnecting the Vapor Return Arm	183
8.2.2	20	Ship/Terminal Post-Transfer Meeting	184
8.2.2	21	Disconnecting the Ship/Terminal ESD Pneumatic Hose	
8.2.2	22	Removing the Ship/Terminal Communication System	185
8.2.2	23	Removing the Gangway	185
8.2.2	24	Unberthing	186
8.3	ESD	Cause and Effects	187
8.3.1	ļ	Loading Arms	187
8.3.2	2	Terminal/LNGc Activated ESD	
8.4	Liqu	id and Vapor Line Operating Envelopes	
8.5	LNG	Loading Arm Connection Assistance System	191
8.5.1		LNG Carrier Manifold	191
8.5.2	2	Loading Arm	193
8.5.3	3	Cable Guided Spool Arrangements	194
8.6	Gan	gway Arrangement and Operating Envelopes	195
8.6.1		Gangway Profile	195

	8.6.2	Gangway Plan	196
	8.6.3	Gangway Spring Arrangements	197
	8.7	Ship/Terminal Connection – Pin Configurations	198
	8.7.1	SeaTechnik – Fiber Optic	199
	8.7.2	SeaTechnik – Electric Wire Link	200
	8.7.3	Nitta Moore – Pneumatic Hose Connection	204
	8.8	General Information – LNGc Mooring and Offloading Operations	205
	8.9	Pre-Transfer Meeting Agenda	208
9	LNG	C Vetting and Acceptance	209
	9.1	General Information on LNGC Approval Procedures	210
	9.2	Compatibility Approval Steps	213
	9.2.1	Step 1 – Preparatory Information	213
	9.2.2	Step 2 – Ship/Shore Interface Study	215
	9.2.3	Step 3 – Ship Safety Inspections	218
	9.2.4	Step 4 – Unloading Test and Ship Compatibility Approval	219
	9.2.5	Step 5 – LNGC Compatibility Approval Follow-up	220
	9.3	SIRE Inspections	221
	9.3.1	Overview of SIRE and Application to LNG	221
	9.3.2	SIRE Inspections	221
	9.3.3	Incident Reporting	222
	9.4	Ship/Shore Compatibility	223
	9.5	Documentation	226
	9.6	Sample Documents and Forms	228
G	lossary		229

Figure 3-1 Links Between Contractor Selection and Management Focus Areas and OCIMF Elements	28
Figure 8-1 LNGc Ramp Up / Ramp Down Schedule	177
Figure 8-2 Loading Arm Envelopes – Plan	189
Figure 8-3 Loading Arm Envelope – Elevation	190
Figure 8-4 LNGc Manifold Arrangement with Alignment Code	191
Figure 8-5 Loading Arm and Major Components	193
Figure 8-6 Typical Configuration with Spools at LNGC Manifolds	194
Figure 8-7 Gangway Profile	195
Figure 8-8 Gangway Plan	196
Figure 8-9 Gangway Spring Arrangements	197

Figure 8-10 Pin-out Configuration 199 Figure 8-11 View on Receptacle Type Pyle National Compatible Receptacle Contacts Numbered in Spiral Arrangement 202 Figure 9-1 LNGC Vetting and Approval Process 211

Table 2-1 Vessel Types and Descriptions	16
Table 2-2 Onshore and Offshore Responsibilities	18
Table 3-1 Vessel Operator Review and Inspection Frequency Matrix	
Table 5-1 Marine-related Communication Systems Used by ALNG	77
Table 5-2 Marine-related Communications Systems Description	77
Table 5-3 Offshore Monitoring	78
Table 5-4 Allocation of Frequencies and Channels to Various Stewardships	79
Table 5-5 Documents Required for Marine Vessels Contracted to ALNG	
Table 5-6 Port Locations	
Table 5-7 Examples of Activities that Must be Recorded in the VLS	
Table 7-1 Common Position Reference Systems	138
Table 7-2 Competency Requirements	141
Table 7-3 Qualifications for Engineers	142
Table 7-4 Example Risk Matrix (From IMCA Guideline)	143
Table 7-5 Close Proximity Factors	143
Table 7-6 Example DP OSV Capability Matrix (From IMCA Guideline)	144
Table 8-1 Example Terminal or LNGC Table	161
Table 8-2 Pre-Checks for LNGC Unloading	162
Table 8-3 Berthing	163
Table 8-4 Setting the Gangway	164
Table 8-5 Ship/Terminal Communication and ESD Systems	165
Table 8-6 Ship/Terminal Communication and ESD Systems	166
Table 8-7 Connecting the Vapor Return Arm	167
Table 8-8 Connecting the Liquid Discharge Arms	169
Table 8-9 N2 Purging	170
Table 8-10 Returning Boil-off Vapor to LNGC	171
Table 8-11 Pre-Transfer ESD (1) Test Under Warm Conditions	172
Table 8-12 Cool Down Cases	173
Table 8-13 Cooling Down the Liquid Loading Arms	173
Table 8-14 Pre-Transfer ESD (1) Under Cold Conditions	175
Table 8-15 Start Transfer	176
Table 8-16 During Transfer	178
Table 8-17 Rate Down	179
Table 8-18 Draining/Inerting Liquid Loading Arms with N2	180
Table 8-19 Purging/Inerting the Vapor Return Arm with N2	
Table 8-20 Disconnecting the Liquid Loading Arms	
Table 8-21 Disconnecting the Vapor Return Arm	
Table 8-22 Ship/Terminal Post-Transfer Meeting	184

Table 8-23 Disconnecting the Ship/Terminal ESD Pneumatic Hose	184
Table 8-24 Removing the Ship/Terminal Communication System	185
Table 8-25 Removing the Gangway	185
Table 8-26 Unberthing	186
Table 8-27 Position Monitoring System Alarms	187
Table 8-28 Loading Arm ESD (1) Cause and Effect	187
Table 8-29 Loading Arm ESD (2) Cause and Effect	188
Table 8-30 Transfer Pumps and ESD Valves Closures Cause and Effect	188
Table 8-31 LNGC Manifold Spools	194
Table 8-32 Communications System Pin Signals	199
Table 8-33 Communication System Pins Telephone Configuration	199
Table 8-34 Alignment with the Vendor Specifications	200
Table 8-35 37-Pin Electrical Cable (Pyle National) Configuration	201
Table 8-36 Nitta Moore – Pneumatic Hose Connection	
Table 8-37 LNGc Domestic Matters	205
Table 8-38 Cargo Documentation Sent to ALNG (Marine Specialist / OP.Supt / Law & market dpt)	207
Table 9-1 shows the vetting and acceptance tasks for LNGCs.	
Table 9-2 Documents Sent by ALNG	213
Table 9-3 Information Users/Operators Submit to ALNG	214
Table 9-4 Topics for Preliminary Meeting	216
Table 9-5 Ship Safety Inspection Process	218
Table 9-6 Terminal Design Size Limitations	223
Table 9-7 Ship/Shore Compatibility Domestic Matters	224

1 INTRODUCTION

Overview

Introduction

The ALNG Terminal is the primary customer of marine vessel services.

Marine Specialist is responsible for management and coordination of the marine support assets and is located at ALNG Work Hub in Rovigo.

This chapter describes the purpose of the guidance document, general definitions, and references.

Reference: Section 2.2, "Marine Support Operations, Position Titles, Key Responsibilities"

In this chapter

This chapter contains the following information:

- 1.1 Using This Document
- 1.2 Code of Safe Working Practices
- 1.3 Industry References and Guidelines
- 1.4 Exceptions, Updates, and Management of Change

1.1 Using This Document

Purpose and scope

The *Marine Operations Manual* (**MOM**) provides a description about Terminale Gnl Adriatico Srl (also known by the name *ALNG*) Marine activities. These, as well as all other activities, are subject to the procedures and processes as described in Safety, Security, Health and Environmental Management System (SHEMS). SHEMS principles should be observed in the MOM's implementation and stewardship.

The MOM is intended to assist organizations in:

- Pre-contract vessel and operator assessment.
- Daily operations involving planning, developing, and conducting the safe and efficient marine activities of chartered vessels.
- Liquefied Natural Gas Carrier (LNGc) unloading operations.

It covers chartered vessels supporting Offshore & Onshore Operations, which include:

- Tugs which provide assistance for a LNGc berthing/unberthing and assistance during unloading operations
- Fast Support Intervention Vessel (FSIV) or/& Crew Supply Vessel (CSV)
- Line handler boats
- Pilot boats
- All other kind and type of boats/vessel chartered by ALNG

It also covers the activities involved with the operations to receive and unload LNGCs as well as the processes involved in vetting and accepting LNGCs.

While specific or specialized project marine operations vessels (such as, heavy lift, installation, pipe lay, and well work vessels) are not specifically covered, many of the general safety and operational guidelines noted for support vessels apply. Typically, these vessels are managed through external project companies, on a temporary basis, and related procedures and guidelines for these are dealt with on a case-by-case basis.

Reference: Chapter 7.0, "Specialized Vessel Operations"

Notes:

- When "vessel(s)" is used throughout this manual, it typically refers to those marine vessels on charter to, or under the control of, ALNG. Vessel does not refer to the LNGc.
- Though an industry standard for an onshore facility, the term "shore" is used in this document only when it is part of the proper name of a system or equipment. As such, the terms "shore" and "Terminal" are used interchangeably (for example, "Ship/Shore Safety Checklist" is the "Ship/Terminal Safety Checklist").

Document users

Primary users of this document include:

- Marine Specialist
- Operations Field Advisor (OFA)
- Logistics Superintendent
- Logistics Staff
- Operations Installation Manager (OIM)

- Operations Offshore Supervisor
- Operations Support Technician
- Maintenance Superintendent
- Terminal Jetty Operator (merged into Multicraft Role)
- Vessel Masters
- Other users who interface with onshore and offshore marine activities

Specific Chapters relating to LNGc vetting and LNGc unloading operations are used by the positions listed above as well as the following:

- LNGc Masters
- Marine Specialist (which also include duties tipically covered by Loading Master)
- Pilots

Guidelines for use

This document is intended to provide guidance. If any doubt exists regarding the document's contents, consult the Marine Specialist.

Nothing in this document or in any recommendation issued by ALNG should be construed as relieving the vessel's Master, any officer, or crew member of their responsibility to exercise sound judgment as defined by Italian law, International law (applicable interfaces with a foreign vessel), Governmental regulation, Chioggia Coast Guard Ordinances, or to practice prudent seamanship and navigation. Additionally, this document does not supersede or prevent adoption of any local special requirements.

Marine vessel operation guidelines for use

The guidance herein should not be construed as authority to operate Marine Vessels in other than strict compliance with the regulatory requirements under which the vessel is registered and its area of operation.

This document does not supersede any requirements of the appropriate authorities for the area of operation, nor those of the Vessel Owner and Operator. This document may be distributed to vessel owners and operators and to third-party organizations as warranted by business needs. ALNG reserves the right to refer to this document as a set of expectations for contract execution and to use the document as a means to assess a provider's contract performance.

Document organization

This manual is organized so that information can be found easily.

- Tabbed dividers are organized by chapter.
- The Table of Contents in the front of the manual lists chapter titles, sections, and major topics of each chapter.
- Each chapter includes a table of contents that lists the sections and topics within that chapter.
- In each topic, the information is clearly labeled with margin headings that appear in the left margin of each page.

To find specific information, locate the pertinent chapter and topic, and then scan the headings down the left margin of the page(s).

Action highlights

In this manual, **WARNING**, **CAUTION**, **IMPORTANT**, and **Note** are presented throughout the text and used to highlight various actions, as follows:

• Warnings indicate situations in which bodily injury or death *could* occur through negligence or failure to follow the proper procedure.

Example:

WARNING

Under normal operation, all operating machinery and electrical equipment **must** have safety guards, switches, and alarms in place and functional. Follow the proper operating procedures.

 Cautions are used to inform users of undesirable consequences of actions or non actions. Cautions are not as serious as warnings.

Example:

<u>/!</u> CAUTION:

Do not attempt to stop a closing elevator door with your hands or feet.

 Important information is more critical for the user than a note, but it does not pertain to actions that can result in serious consequences.

Example:



IMPORTANT

Welding, burning, or hot work on painted surfaces or stainless steel (or other alloys) should be evaluated for appropriate exposure control methods.

• Notes express incidental information that is helpful in addition to the regular text information.

Example:

Note: Always plan an escape route in case of emergencies.

1.2 Code of Safe Working Practices

Introduction

Vessels at a minimum, must meet our requirements regardless of Flag or local/international requirements.

It is recommended that the *Code of Safe Working Practices for Merchant Seamen* issued by the United Kingdom Maritime and Coastguard Agency be used as a reference as it provides detailed safety working practices onboard vessels including vessels servicing offshore oil and gas installations.

It is recommended that *all vessels*, irrespective of Flag, carry copies.

1.3 Industry References and Guidelines

References and guidelines

References and industry guidelines applicable were adopted during the drafting of this manual by referring to:

- Det Norske Veritas (DNV) Marine Operations (MAROPS) Rules
- International Organization for Standardization (ISO)
- International Maritime Organization (IMO)
- Society of International Gas Tanker and Terminal Operators (SIGTTO)
- Oil Companies International Marine Forum (OCIMF)

1.4 Exceptions, Updates, and Management of Change

Introduction

Requests for exceptions to the "must" or "should" requirements of this MOM should be submitted to the Marine Specialist who consults with the Logistic Superintendent accordingly on each request.

Exceptions and changes

Exceptions and proposed changes to this manual should be submitted to the Marine Specialist and processed through the Management of Change (MOC) process.

Guide review

The Marine Specialist is responsible for conducting ad hoc review of the Marine Operations Manual (MOM) to confirm the latest Regulatory requirements or industry practices or guidelines apply.

Note: *Reviews and updates are administered by the Manual Owner, the Operations Manager.*

Reference: Revision History

2 GENERAL INFORMATION

Overview

Introduction

This chapter provides information on support vessel types, descriptions of marine support, marine positions and responsibilities, marine resources, and marine operations reviews.

In this chapter

This chapter contains the following information:

- 2.1 Vessel Types
- 2.2 Marine Support Operations, Position Titles, Key Responsibilities
- 2.3 Marine Resources and Reviews

2.1 Vessel Types

Vessel types

The below types of support vessels and common abbreviations used worldwide are in service for ALNG.

Table 2-1 Vesse	l Types and Descriptions
-----------------	--------------------------

VESSEL TYPE	DESCRIPTION
FSIV/ CSV	Vessel used to satisfy completely the Services described inside SOW for this
Note: Marine Specialist is	specific kind of vessel which are, but not limited, to:
responsible for the daily	Personnel transfer and transport between the Terminal and shore landing
administration of the	points
FSIV/CSV.	Supply (liquid and bulk) of goods and materials, generally in containers
	Foam Patrolling & Abatement as per Ministry of Environment decrees
	 Collecting Sewage and Waste transportation ashore
	Optional capabilities:
	 Field standby and man overboard rescue
	Search and rescue
	 Any combination of these
	Any available vessel, depending on circumstances, may be used for man overboard rescue or to provide assistance in other emergency situations.
Tug Boats	Vessel used primarily for:
	Offshore mooring/unmooring operations and providing stand-by assistance
	during unloading operations
	Optional capabilities:
	Field standby and man overboard rescue
	Fire fighting
	Additional maintenance or other Terminal requested works, such as fender
	positioning as specifically noted in the ALNG/Contractor Agreement
Fast Rescue Craft	Boat used only for offshore emergency response and rescue; located on board
	the Terminal and manned by offshore trained personnel.
Line Handlers Boat (LHV)	Boat used for handling lines and mooring ropes during LNGc mooring &
	unmooring operations.
Pilot Boat	Coast Guard Authorized boats used to transport Pilot and Loading Master to the
	LNGc.
Specialty and Additional	Other types of specialty offshore support vessels exist, including:
Vessels which could be	Security Vessel
requested in use at ALNG	Accommodation vessel
occasionally	Maintenance support vessel
	 Dive and remotely operated vehicle (ROV) support vessel
	Fuel barge
	Crane pontoon boat
	Heavy Lift Vessel
	Typically these vessels are chartered in for specific project activities not related
	to the normal operations and for extraordinary maintenance or plant upgrade.

2.2 Marine Support Operations, Position Titles, Key Responsibilities

Introduction

This section provides the definition for Marine Support Operations (non-supply) and outlines key positions and responsibilities associated with the marine functions.

Marine support operations (non-supply)

Marine support operations include vessels that normally do not carry cargo. *Marine support operations* are normally required to support both offshore operations and LNGc operations such as escorting, mooring support, assistance during unloading, and so forth.

Notes:

- 1. Some multi-purpose vessels normally used as supply vessels may be used for other support operations that do not involve carrying cargo. In such cases, these vessels should be considered to be in a non supply mode and count as marine support vessels for the actual duration. The costs of these vessels for the duration of other services should be included in the Marine key performance indicators (KPIs) and excluded from the Logistics KPI calculation of cost per ton shipped.
- 2. When capable multi-purpose vessels carry cargo, they should be considered to be in a supply mode and count as supply vessels for the period of time spent in supply mode. The costs of these vessels while in the supply mode should be included in the calculation of cost per ton shipped (Logistics KPI).

Marine support operations and activities (non-supply) may include but are not limited to:

- Field standby vessel services
- Search and rescue (SAR)
- Towing and LNGc berthing and unberthing support
- Offshore construction and installation project marine operations
- Subsea inspection and intervention (ROV support)
- Diving support

Vessels managed by Marine Support Operations include tugs, line-handling vessels, and any other service tug supporting dedicated activities for the Terminal. The latter assists as requested with general support duties such as fender recovery, tether line tightening assistance, and other assistance as temporarily required.

Position titles and key responsibilities

The position titles below listed are involved in management and coordination of Marine Support Operations and Marine Transport Operations (Logistics).

 Table 2-2 Onshore and Offshore Responsibilities

POSITION	TYPICAL MARINE RESPONSIBILITIES
Operation	Overall responsibility for management of all ALNG operations, which includes Marine
Manager	Support Operations.
Marine Specialist	Overall responsibility for coordination of Marine Support operations.
	 Coordinates the activities of all marine vessels involved in the marine support
	operations including vessels performing Marine & Logistics functions and all activities related to LNGc operations at the Terminal. Communicates daily with the vessels while underway.
	 Interfaces with the Vessel Masters of the Tugs, LNGCs, line handling, and other marine support vessels.
	 Coordinates and processes Vessel Voyage Logs for all Marine Support Operations vessels.
	 Coordinates with the appointed LNGc shipping agent on scheduling of the tug, pilot,
	and line handling services for the LNGc mooring and unmooring operations.
	 Perform the Loading Master duties on board LNGc as per LNGc 90 days arrival
	schedule on shift base (Two Marine Specialist are assigned for this duty).
	 Monitors marine contractor performance and performs due diligence oversight.
	 Coordinates the effort to collect, analyze, and process the data for the Marine Support Operations KPI reporting.
	 Develops, modifies, and implements marine operating procedures and ensures that the procedures are documented and provided to all marine vessel Masters.
	 Provides marine specific technical advice and support to the Logistics group. This
	typically is provided during periodic assessments of vessel and crew performance and any Regulatory or specific technical matters.
	<i>Note</i> : The Marine Specialist (Two) reports functionally and administratively to the Logistic Superintendent.
Logistics Superintendent	Overall responsibility for coordination of Marine Transport (Logistics) services. The Marine & Logistic Superintendent reports functionally and administratively to the
	Operations Manager Note : The Marine Specialist provides marine specific technical advice and support to the Logistics group in respect of the CSV and CSV crew. This typically is provided during periodic assessments of marine vessels and crew performance and any Regulatory or specific technical matters.
Logistics	Support Logistic Superintendent regarding all field activities in respect of JD, and reports
Coordinator	to the Logistics Supervisor.
Offshore	Overall responsibility for the Terminal and all marine traffic while in the field areas (ATBA
Installation	& Safety Zone).
Manager (OIM)	
Operations	 Administers and supervises daily marine traffic tasks in the field.
Support Technician	Communicates with the CSV.
	 Prepares shipping documentation and manifests.

Marine Operations Manual - General Information

POSITION	TYPICAL MARINE RESPONSIBILITIES
	 Assists in cargo transfer operations.
	 Reports to the OIM.
Crane Operator	 Oversees crane operations, cargo transfers between vessels, and maintains
	communication with the Vessel Master and deck crew.
	 Supervises the deck crew as appropriate.
Vessel Master	Responsible for safety and efficiency of crew and vessel.
Loading Master	It consist mainly to oversees the offloading operations of each LNGc calling the Terminal
	(merged inside Marine Specialist Job Role)
Pilot	Acts as advisor to the LNGC Master in all LNGc berthing and unberthing operations.
	Responsible for communicating and directing tugs and line handling vessels during LNGc
	berthing and unberthing operations.

IMPORTANT

The OIM (or deputy) or the Vessel Master may delay the start or continuation of vessel operation if either considers it unsafe to proceed.

Training

Training is specified by ALNG for various Marine Vessel Masters and crew, Loading Masters, Pilots, and other positions. These requirements are typically detailed in the respective Agreement(s) for the specific services provided, and the applicable Agreements should be consulted to identify these training requirements.

All personnel of ALNG and Marine Contractor must comply with specific Job Role training programme as per 5-A SHEMS System Document & Competency Assurance and Training Manual

These training, qualifications, and experience requirements are normally the responsibility of the Contractor to provide and to ensure its personnel are trained, competent, and certified accordingly as described in the Agreement(s).

Pilots must meet all training requirements stipulated by Italian legislation.

In addition to training and qualifications stated in the respective Agreements, ALNG currently requires Pilots, Tug Boat Masters to successfully complete the Force Technology (Danimark) Marine Pilot Course or equivalent.

2.3 Marine Resources and Reviews

Qualified Marine Advisors

Assistance to ALNG in matters concerning Marine support vessel requirements on request of Operations Manager

Initial and periodic technical or operational "cold eyes" reviews or assessments of the Marine support vessel operations should be considered by ALNG.

3 VESSEL SELECTION AND CONTRACTING

Overview

Introduction

This chapter provides detail on spot support vessel selection and contracting, including pre qualification, technical evaluation, vessel inspections, and contractor interface.

ALNG's core vessels, which provide longer-term services on an ongoing charter basis (Crew Supply Vessel and/or Fast Support Intervention Vessel (CSV/FSIV), nr.4 A/T Tugs and Harbour Service Boats of Line Handlers and Pilot).

All other marine vessels are "spot charter" vessels that fulfill a temporary operational need.

Note: Marine Vessel Charter Services Agreements are used for core vessels. The Charter Party outlines the legal part of the agreement. ALNG develops the specific Scope of Work describing the level of support for ongoing operations and the coordination procedures that regulate the interfaces between the Charterer and the Contractor.

Contractor selection and management

When engaged in vessel selection, contracting, and on-going vessel contractor interface, the ALNG Procurement Department is consulted and involved in the process in accordance with the SHEMS System 8A.

This chapter of the *Marine Operations Manual* provides specific guidelines on marine vessel selection, contracting, and on-going interface with Procurement.

Reference: SHEMS System 8A, Contractor Selection and Management System

In this chapter

This chapter contains the following information:

- 3.1 Requisition
- 3.2 Vessel Operator Pre-Qualification
 - 3.2.1 Identifying Potential Bidders
 - 3.2.2 Vessel Operator Pre-qualification Process
 - 3.2.3 Safety Performance
 - 3.2.4 Use of OCIMF OVMSA
 - 3.2.5 Qualification Criteria
 - 3.2.6 Gap Closures
- 3.3 Technical Bid Package
- 3.4 The Technical Evaluation
- 3.5 Vessel Inspections
- 3.6 Spot-Hire Vessels

- 3.7 Fuel Barge or Tanker Hire
- 3.8 Contactor Interface
- 3.9 Tools

3.1 Requisition

Service planning and requirements

The Operations Leadership Team (OLT) reviews proposals submitted internally within the group, or by other groups, related to future marine vessel needs and initiates appropriate action as required for developing any long term Marine contract plans.

When an extraordinary service requirement occurs, the user group or requestor must identify the need by contacting the Marine Specialist describing the requirements.

The Marine Specialist shall develope and evaluate technical solutions/options jointly with the most costeffective way to provide the requested service.

Above solutions/options should include:

- Revise current vessel(s) schedule
- Utilize sharing or leveraging
- Spot charter required capacity and capability
- Market survey concerning the companies that can offer the requested nautical means

The Marine Specialist is responsible for:

- Develop the technical aspect regarding characteristics of required vessel
- Developing the marine contract work scope and coordination procedures
- Marine vessel contract administration
- Performing on-hire surveys and periodic marine safety inspections and vessel crew revalidations

Contractor interfacing

It is important that during the requisition stage the amount, type, and level of interfacing with the contractor is determined.

With the often high consequence levels associated with Marine vessel operations, Marine support vessel contracts are considered a potentially higher SHE impact service with more frequent or higher exposure hour services.

Procurement plan

Procurement is wholly responsible and accountable for the Bidding Process and Procedures as per SHEMS System 8A.

When tendering for long term support vessel(s) services a Procurement Plan is developed by the Procurement group with input and support of Operations Department (OML). This plan should include a process for Bidder Quality Assurance as required under SHEMS System 8A.

This Plan includes:

- Contract Schedule
- Detailed Scope of Work, including vessel minimum specification/characteristic and performance requirements as provided by the Marine Specialist
- SHEMS requirements

- Contractor SHEMS qualifying criteria as noted in SHEMS 8A, *Contractor Selection and Management System*
- An onsite visit and inspection of the Marine Specialist if present in Italy (for abroad Contractors can be evaluated to conduct ad hoc e-conference meeting and request a Condition Assessment Survey performed on selected vessel/boat carried out by Classification Society member of IACS "Association of Classification Societies")

Reference: SHEMS 8A document, *Contractor Selection and Management System*

Scope of work

Details of the work scope should include:

- Area of Operations and Operating Ports
- Primary activities to be performed by the vessel (for example, supply, stand-by, Medevac, Foam Abatement, and so forth)
- Secondary activities to be performed by the vessel (for example, firefighting, oil spill response, towing and so forth)
- Any specific work activity requirements, including bridge manning requirements in the safety zone, that may require an increased manning level

Reference: Section 4.2, "Crew Manning and Training," "Minimum crew requirements"

- Any requirements for operator management presence in country or region
- Any specific crew training or certification requirements (such as, oil spill response [OSR], rigger, personnel transfer, and so forth)
- Requirement to comply to all applicable Italian laws
- Weather and environmental limiting conditions

Development of minimum vessel specification and performance requirements

Selection of spot vessel(s) depends on the nature, type, and scope of operations for which the vessel(s) are being hired and are usually characterized by the purpose for which they are used, such as:

- Fast Support Intervention Vessel/Crew Supply Vessel
- Tug boat and line handler boat
- Diving support vessel
- Standby and rescue vessel
- Utility vessel, such as Fender assistance boat and so forth

Minimum specifications and performance should be developed in the work scope, based on local regulatory and safety compliance and general industry experience with vessels operating at sea and along artificial channel under the local conditions, including met-ocean conditions (fog, sea state, wind speed, and so forth), and may include:

- Any length or breadth limits
- Vessel draft limits (shore landing points, channel, or other water depth and constrain considerations)

- Applicable vessel class notation requirements:
 - Firefighting (FiFi)
 - Dynamic position (DP) class

Reference: Chapter 7.0, "Specialized Vessel Operations"

- Hull and machinery notation
- Tug notation
- Environmental & Regulatory aspects related to clean and human factors such as comfort or habitability (or both)
- Accommodation vessel notation

Note: Classification Society member of IACS "Association of Classification Societies" are recommended.

- Any country or flag requirements
- Minimum speed
- Bollard pull/horsepower
- Dynamic position (DP) station keeping capability (sea height, wind speed, wave period, current)
- Standby and rescue services (survivor capability)
- Accommodation and seating capacity
- Deck space and tonnage capacity, including any cargo deck length requirements
- Bulk under deck capabilities and capacities
- Bulk hose transfer arrangements and pumping capabilities
- Fuel transfer meter requirements
- Passenger transfer capabilities (swing rope, "V" notch, and so forth)
- Oil Spill response capabilities (skimmers, booms, recovery tank capacity, and so forth)
- Foam Abatement capabilities (i.e mobile arms & sprinklers)
- Crane safe working load (SWL) and reach
- Towage capabilities
- Fender requirements
- Any emission, fuel consumption capacity, duration, fuel type, and propulsion requirements
- Communication requirements (radio transmission, email, fax, and so forth)
- Other special equipment or design requirements for the intended work or environment

These minimum specifications together with scope of work are included as part of the Tender package.

End client requirements

When developing the vessel minimum specification requirements it is important that the end clients (Operations, SSHE&R, and so forth) are closely consulted and are aligned.

3.2 Vessel Operator Pre-Qualification

Introduction

This section contains the following information:

- Identifying potential bidders
- Vessel operator pre-qualification process, which includes ALNG on site visit(s)
- Safety performance
- Use of Oil Companies International Marine Forum (OCIMF) Offshore Vessel Management Self-Assessment (OVMSA)

Note: OCIMF OVMSA processes may be used as a guide and are referenced accordingly in this manual. ALNG typically uses comprehensive Marine Safety Checklists, such as the Marine Inspection for Small Workboats questionnaire, to evaluate vessel and operator qualifications as part of the pre-award process and during operations. These checklists may also be used for ongoing evaluation of marine vessels to determine their continued suitability.

Reference: Section 3.9, "Tools," for the Marine Inspection for Small Workboats

- Qualification criteria
- Gap closure

3.2.1 Identifying Potential Bidders

One of the first steps in the vessel tendering process is to identify potential suitable bidders to be invited to the Vessel Tender process.

When developing this list the following should be considered:

- Type of vessel(s) and services for which the vessel(s) is being tendered
- Experience and safety record of existing providers supplying similar services in the region
- Local, Government, and Procurement requirements and Stakeholder input
- Other Local Ownership, Cabotage Law, or Bidder qualification requirements
- Confirmed interest of potential bidder to be invited to the Tender
- Known abilities of vessel(s) operator to support local operations
- Appropriate available equipment

3.2.2 Vessel Operator Pre-qualification Process

On agreement of the potential list of bidders, each of the bidders must be pre-qualified to confirm their suitability to perform satisfactorily when compared with contract requirements and our operating standards.

It is important to assess through a pre-qualification assessment or evaluation process each potential bidder's SHEMS performance and Safety Management Systems and the elements it contains as well as its effective implementation, measurement, and any gaps.

The Contractor may be considered SHEMS qualified in three ways:

- Documented proof that the Contractor performs or performed the same or similar service for ALNG within the last three years with an acceptable SHEMS performance, with evidence of prior satisfactory safety audits or pre-qualification.
- Third-party SHEMS type auditors accepted by ALNG perform a professional audit and qualify contractor according to SHEMS standards.
- Contractor goes through an ALNG accepted pre-qualification process.

Pre-qualification questionnaire

A pre-qualification questionnaire can be developed to evaluate potential contractors. These are typically based on five general key focus areas of contractor SHEMS performance:

- Leadership and communication
- Crew competency
- Worker empowerment and involvement
- Program effectiveness
- Gap closure

The pre-qualification or the Contractor Evaluation Questionnaire can be expanded to cover the specific issues associated with Offshore support vessel operations.

3.2.3 Safety Performance

Overview

Vessel operator key performance indicators (KPIs) for at least the last three years should be requested and evaluated against the agreed minimum target level set by ALNG.

This includes but not limited to:

- Lost time incident (LTI) and associated rate
- Restricted work incident (RWI)
- Medical treatment incident (MTI)
- First aid (FA) incident
- Near loss investigation (NLI)
- Total recordable incident (TRI) rate
- Number of safety meetings
- Number of Management walk-throughs
- Number of Port State detentions, insurance claims, and so forth
- Number of collision, grounding, and oil spill incidents

3.2.4 Use of OCIMF OVMSA

Overview

A comprehensive Marine Safety Checklist shall be used to evaluate vessel and operator qualifications as part of the pre-award process and during operations.

The OCIMF OVMSA program may be utilized during the pre-qualification stage to evaluate potential bidder qualification.

Elements contained within OVMSA

The Elements contained within the OVMSA document are:

- Management, leadership, and accountability
- Recruitment and management of shore based personnel
- Recruitment and management of vessel personnel
- Reliability and maintenance standards
- Navigational safety
- Offshore operations and the management of contractors
- Management of change
- Incident investigation and analysis
- Safety management
- Environmental management (including fuel management)


Reference: Chapter 5.0, "Marine Operations"

- Emergency preparedness and contingency planning
- Measurement, analysis and improvement

Elements within OCIMF

Figure 3-1 shows the link between contractor selection and management focus areas and the elements within OCIMF.

Figure 3-1 Links Between Contractor Selection and Management Focus Areas and OCIMF Elements

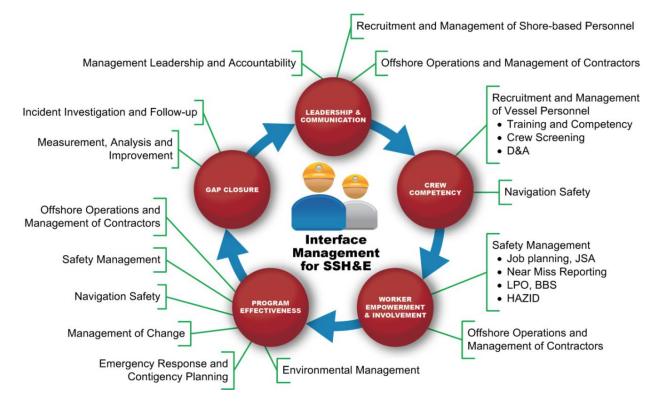

OVMSA scores to the OCIMF database

In addition to the Marine Safety Checklist, or as an alternative, each potential Vessel Operator may be requested to complete an OVMSA self-assessment and submit the level status for each element.

Note: Vessel Operators may submit their latest OVMSA scores to the OCIMF database where they can be downloaded by OCIMF members on agreement of the Vessel Operator.

Supporting documentation may also be requested.

These results are reviewed by the Marine Specialist and based on documented performance, supporting documentation, and experience with the Vessel Operator, a determination of pre-qualification may be made. A follow up on site verification of the Operators Management systems may be required to review or verify the Operators assessment status.

Reference: OCIMF Offshore Vessel Management and Self-Assessment – A Best Practice Guide for Offshore Vessel Operators

3.2.5 Qualification Criteria

ALNG sets the qualification criteria, including safety performance criteria.

Reference: SHEMS 8A document, Contractor Selection and Management System

3.2.6 Gap Closures

Gaps identified during the pre-qualification and decision to qualify or not must be documented.

Any gaps identified during the pre-qualification process are communicated back to the qualified bidders so they can take immediate action and include a <u>Gap Closure Plan</u> in the bid package.

3.3 Technical Bid Package

Technical bid package requirements

The technical bid package should contain:

- SHEMS and interface management exhibit
- Vessel(s) type and minimum specification or performance requirements
- Scope of work
- Proposal forms to be used by bidders

3.4 The Technical Evaluation

Technical evaluation

A technical evaluation plan is developed and includes the specific items the bidder is required to provide in the proposal and set evaluation criteria, including minimum specification or performance requirements.

On receipt of technical bids, ALNG may assemble a team of appropriate subject matter experts (SMEs) including the Marine Specialist to evaluate the technical responses from each of the bidders.

The bid responses are weighed against set criteria as defined in the technical evaluation plan and collective decision is made on technical acceptability of the bidders response and offered vessel(s).

Minimum specification requirements

The offered vessels technical acceptance is weighed against the minimum specification or performance requirements with any pass/fail criteria being first identified.

Vessels that fail to meet the identified minimum requirements should be removed from the bid list.

Contractor Execution Plan

Evaluation of the Contractor Execution Plan includes evaluation of the Vessel Operator's plan to address the identified gaps from the pre-qualification process.

Vessel inspections

Prior to final technical acceptance ALNG may require that the offered vessel(s) are inspected by a qualified inspector to confirm technical suitability, general condition, and onboard SHEMS management.

To avoid multiple vessel inspections ALNG may elect to only inspect the final vessels offered by the successful bidder, contract award being contingent on satisfactory vessel inspection.

Reference: Section 3.5, "Vessel Inspections"

Vessel inspection gap closure

Where required, any issues noted during the vessel inspection should be documented and communicated to the Vessel Operator and any specific terms agreed and written into the final contact.

Where the vessel has been inspected and found unacceptable for technical or SHEMS reasons, the procurement process must be followed.

3.5 Vessel Inspections

Pre contract execution inspection

Prior to final execution of a contract or during the technical evaluation stage of the bid process ALNG may perform, or require, an inspection of the offered vessels to confirm suitability. This inspection should be conducted by the Marine Specialist or qualified third party inspector.

The inspection should cover the following main areas:

- Certification and documentation
- Crew and Contractor management
- Navigation
- Safety and security management
- Risk management
- Pollution prevention and environmental management
- Structural condition
- Operations
- Mooring
- Communications
- Propulsion, power generation, and machinery
- General appearance and condition
- DP operations (if applicable)
- Specific work activity (tanker/mooring assistance, supply, and so forth)

Ad hoc or spot chartered vessels may be chartered from remote or inaccessible locations or while at sea without the possibility of inspecting the vessel prior to commencing the charter (see 3.1). In such cases, the Marine Specialist evaluates the actual vessel's previous record of performance and requests that the Vessel Owner or Vessel Master (or both) confirm that the ship is seaworthy in all respects.

A checklist or declaration form, comprised of example items listed above, should be developed for completion by the Vessel Master or appointend Naval Certification Company/Registry when spot chartering without being able to physically inspect the vessel.

On-hire inspection

On arrival of the vessel at the ALNG specified site (place of delivery), an on-hire survey to confirm vessel readiness to conduct operations may be completed.

This inspection should include:

- Review of certification and documentation
- General condition and appearance
- Safety and security
- Equipment condition and readiness

Usually at this time a survey of vessel tanks to confirm cleanliness is conducted and measurement of any remaining onboard consumables is conducted, including on hire survey of fuel.

Marine Specialist should provide the Vessel Master with copies of ALNG specific documents and review with the Master all reporting requirements including daily reporting logs, communications with offshore

and shore base, emergency response, and incident notification procedures, as well as provide any safety orientation program that maybe in place.

DP trials

Where a vessel is required to use DP for the varying activities the vessel is engaged in, ALNG requires a DP trial and survey by a qualified inspector or the Marine Specialist prior to commencing DP operations in the field.

References:

- Chapter 7.0, "Specialized Vessel Operations"
- SHEMS System 8A, Contractor Selection and Management System

Periodic vessel inspections and Safety walk through or SHEMS reviews

A periodic onboard vessel inspection, safety walk through, or review should be completed by Marine Specialist to review the key focus areas of Contractor SHEMS management and the status of any identified gap closure items including gaps identified during any previous periodic inspections.

The general condition of the vessel and its equipment should also be reviewed.

Where ALNG deems that a more thorough periodic inspection is required, the pre contract execution inspection or OCIMF OVIQ format can be used.

	PRE- QUALIFICATION	PRE CONTRACT AWARD	PRE START OF WORK	DURING HIRE PERIOD
Marine Checklist	Х	Х		X ¹
Marine Checklist follow-up				X ²
Periodic SHEMS reviews onshore				x
with the work site safety committee				^
DP trial			Х	

Table 3-1 Vessel Operator Review and Inspection Frequency Matrix

1. Annual and random inspections based on SHEMS inspection results and ongoing performance of the vessel.

2. ALNG may conduct follow-up Vessel Operator safety management system reviews to assess any gap closure requirements and any continuous improvement expectations.

Vessel inspection and close out tracking

ALNG should establish a database or simple tracking tool to document and monitor the close out of observations and deficiencies noted during the varying vessel inspections conducted.

This includes:

- Detail and date of observation or deficiency
- Priority of observation or deficiency (high, medium, low)
- Vessel Operators response and close out action plan
- Timing for close out
- Date item is satisfactorily closed

In determining the priority of the observation this *Marine Operations Manual* (MOM) provides guidance on the must or preferred requirements.

3.6 Spot-Hire Vessels

Spot-hire vessels

To the extent possible, short term or spot-hire vessels should be contracted with a Vessel Operator presently operating with ALNG or with which ALNG has recent documented acceptable SHEMS performance.

Where practical ALNG should arrange a pre-contract inspection or on-hire inspection (or both) to confirm vessel suitability prior to commencing work.

OCIMF inspection database

Where an existing inspection report of the vessel is contained within the OCIMF OVID these reports can be downloaded at a minimum cost for review prior to hire of vessel.

3.7 Fuel Barge or Tanker Hire

Fuel barge or tanker hire

It is recommended that vessels or barges (including bunker barges) specifically hired for the carriage or storage of fuel and classified as an oil tanker or oil barge are vetted and approved for hire.

Note: In the past, this was performed using the vessel vetting process managed by International Maritime Transportation, Ltd. (IMT) or equivalent.

3.8 Contactor Interface

SHEMS Contractor interface

SHEMS Systems 5B and 8A provide guidelines on contractor interface requirements to steward contractor safety performance and support the contractor in achieving improved SHEMS performance by means of a systematic approach to identify the appropriate responsible persons for the contractor/owner and ALNG respectively.

Interface activities should occur at three levels:

- Level 1 Daily interface activities during execution of work
- Level 2–Regularly, as per Annual Meeting Schedule, Marine Specialist and Contractor local lead face-to-face meetings
- Level 3 –Regularly Marine & Logistic SPV / Marine Specialist and Contractor management performance stewardship

Contractor performance KPIs

ALNG requires regular stewardship of key performance indicators (KPIs). Descriptions and examples of ALNG KPIs are mentioned in Annex "Key Performance Indicators and Stewardship."

In addition to any ALNG corporate KPIs, the Marine Specialist may require the contractor to report locally other performance indicators (PIs) related to SHEMS and specific services performance. This process may include a Contractor Self-monitoring Report and a Contractor Performance Scorecard. Reference: see Annex, "Key Performance Indicators and Stewardship"

Note: The Performance Indicators (PIs) should measure the effectiveness of the Contractor's

Regular Contractor interface meetings

The regular Contractor (Vessel Operator) interface meetings should address the following agenda items:

- SHEMS Performance and gap closure status (see above)
- Other contractor performance monitoring items
 - Fuel consumption and conservation
 - Vessel availability including off-hire or unplanned maintenance activity
 - Long range planning
 - Efficiency items
 - Sharing opportunities on under-utilized assets
 - Customer complaints
- Any upcoming planned vessel maintenance activity that takes the vessel out of service
- Any other business

Captains meeting

Where practical Operator Interface meetings should include the Vessel Captains or a designated Captains Meeting maybe held on a periodic basis with Vessel Operator representative in attendance.

The purpose of the meeting should include:

- Building a stronger relationship between the Vessels and ALNG teams
- Addressing safety and operational issues or concerns
- Improving safety awareness and culture
- Reviewing safety and operational performance

3.9 Tools

Overview

This section contains forms, guidelines, and documents referenced in this chapter. Included is:

Marine Inspection for Small Workboats Form

MARINE INSPECTION FOR SMALL WORKBOATS (Common Marine Inspection Document for Small Workboats)

Introduction

Purpose

The purpose of this ALNG-approved document is to provide an ALNG basic marine inspection standard for workboats which are used in the North Adriatic Sea and are less than 500 gross tonnage or less than 50 meters in length (or both) and are, therefore, not required to have either an International Safety Management or an International Ship Security Certificate, although the principles outlined within the two codes are worth following.

In this document *small workboat* means a small vessel in commercial use, other than for sport, pleasure, pilot duties, surveying of harbours, and their approaches or dredging. These small workboats could be used for various appropriate tasks such as offshore.

ALNG Inspector's	
Name:	
Workboat Name:	
IMO Number:	
Date Inspected:	

Marine Operations Manual - Marine Inspection for Small Workboats

	VESSEL PARTICULAR
Name of vessel	
IMO number	
Type of vessel	
(include detail of any special features)	
Previous name(s)	
Vessel owner/operator	
Name:	
Address:	
Tel:	
Fax:	
E-mail:	
Date current vessel owner/operator assumed	
responsibility for vessel	
Flag	
Port of registry	
Classification society	
(if the vessel has changed class within the past six	
months, report date of change and previous	
classification society)	
Class ID number	
Workboat certificate details	
Issued	
Issued by	
Valid until	
Category	
Last annual exam performed (valid if issued within	
past 12 months) by	
Additional comments/observations	

Marine Operations Manual - Marine Inspection for Small Workboats

Index of Certificates and Documents

	APPLICABLE TO VESSEL	DATE OF	CERT DOES
CERTIFICATES	TYPE Y/N	EXPIRY	NOT EXPIRE
Flag state certificate(s)			
Classification society certificate(s)			
Radio station licence			
Servicing certificate – life raft #1			
Servicing certificate – life raft #2			
Servicing certificate – life raft #3			
Servicing certificate – life raft #4			
Hydrostatic release certificate – life raft #1			
Hydrostatic release certificate – life raft #2			
Hydrostatic release certificate – life raft #3			
Hydrostatic release certificate – life raft #4			
Certificates of insurance – Employer's liability			
Certificates of insurance – Hull and machinery			
Certificates of insurance – P&I			
Certificates of test and thorough examination of lifting			
equipment			
Last independent inspection of lifting equipment			

1 – Inspection

1.1	Has the vessel been subject to a Coast Guard control since the previous inspection?		No	NA	NS
	Comments				

Where and when was the inspection carried out? If vessel was detained, or significant deficiencies were listed, record the reason for detention or nature of those deficiencies.

1.2	Is there any independent certificate of inspection of the vessel available?	Yes	No	NA	NS
	Comments				

2 – Logbooks

Does the vessel have a radio logbook?	Yes	No	NA	NS
Comments				

2.2	Does the vessel have appropriate logbook/s (for example, official, deck, engine)?	Yes	No	NA	NS
	Comments				

3 – Weather-tight Integrity

3.1	Is it possible to secure all openings to prevent the ingress of water while at sea?	Yes	No	NA	NS
	Comments				<u>.</u>

Are doors located above the weather deck, which give access to spaces below, weather-tight and able to be operated from either side?	Yes	No	NA	NS
Comments				

3.3	If there are any opening skylights fitted, can they be effectively secured from either side?	Yes	No	NA	NS
	Comments				

3.4	Are blanks available for securing in place, in the event of breakage of a skylight?	Yes	No	NA	NS
	Comments				

Comments	3.5	If any opening or port-lights are below the weather deck, are there dead-lights or blanks available to be secured in place?	Yes	No	NA	NS
		Comments				

3.6	Can all opening port-lights be effectively secured?	Yes	No	NA	NS
	Comments				

3.8	Does the hull and structure of the vessel appear in a good state of	Yes	No	NA	NS
	repair?				
	Comments				

3.9	When a deck is fitted with bulwarks such that water may be trapped, are there effective freeing ports?	Yes	No	NA	NS
	Comments				

3.10	Are sea inlets and discharges below the waterline fitted with a seachest or other effective means of closure?	Yes	No	NA	NS
	Comments				

3.11	Is there evidence of any water leaking into the vessel below decks?	Yes	No	NA	NS
	Comments				

4 – Machinery and Electrical

4.1	Are the engine/generator and the space in which it is sited clean and well maintained?	Yes	No	NA	NS
	Comments				

4.2	Are vent pipes for fuel tanks protected against water ingress by a goose neck or other efficient means?	Yes	No	NA	NS
	Comments				

4.3	Are vent pipes for fuel tanks protected against flame ingress by a suitable gauze diaphragm?	Yes	No	NA	NS
	Comments				

NA	NS

4.5	Is there a safe means of isolating the fuel supply in the event of an	Yes	No	NA	NS
	emergency?				
	Comments				

4.6	Are there any fuel or oil leaks in the machinery spaces?	Yes	No	NA	NS
	Comments				

4.7	Are the bilges free from oil?	Yes	No	NA	NS
	Comments				

4.8	When batteries are the sole means of starting the propulsion engine, are there at least two sets of batteries available?	Yes	No	NA	NS
	Comments				

4.9	Are there safe means of isolating electrical supplies?	Yes	No	NA	NS
	Comments				

4.10	Are electrical systems protected from water?	Yes	No	NA	NS
	Are they marked as CE approval?				
	Comments				

4.11	Are battery spaces adequately ventilated?	Yes	No	NA	NS
	Comments				

4.12	Is the battery cut-off switch operational?	Yes	No	NA	NS
	Comments				

4.13	Are all batteries secured firmly to prevent movement?	Yes	No	NA	NS
	Comments				

4.15	Is effective emergency lighting provided to illuminate survival craft launching and embarkation areas?	Yes	No	NA	NS
	Comments				

4.16	Is effective emergency lighting provided to illuminate man-overboard rescue equipment and rescue areas?	Yes	No	NA	NS
	Comments				

4.17	If steering by remote control, are there effective means of emergency steering?	Yes	No	NA	NS
	Comments				

4.18	Are there two fully working bilge pumps?	Yes	No	NA	NS
	Comments				

4.19	Is at least one bilge pump available for duty in an emergency?	Yes	No	NA	NS
	Comments				

5 – Stability

5.1	Does the vessel have an approved stability information booklet?	Yes	No	NA	NS
	Comments				

5.2	Is a competent person available to calculate the vessel's stability?	Yes	No	NA	NS
	Comments				

5.3	Are any stability records available to show the effects of adding or removing loads on the vessel?	Yes	No	NA	NS
	Comments				

5.4	Are the crew familiar with the stability issues with regards to winches and lifting operations?	Yes	No	NA	NS
L	Comments	I	1	I	

6 – Freeboard

6.1	Is the vessel marked with a deck line and freeboard mark?	Yes	No	NA	NS
	Comments				

If the vessel is not marked with a deck line and freeboard mark, has the	Yes	No	NA	NS
safe maximum draft been determined?				
Comments				
	safe maximum draft been determined?			

7 – Escape

7.1	Are there at least two means of escape from any manned or occupied space?	Yes	No	NA	NS
	Comments				

7.2	If there are not at least two means of escape, are there fire detectors?	Yes	No	NA	NS
	Comments				

7.3	Are means of escape clearly marked?	Yes	No	NA	NS
	Comments				

8 – Fire

8.1	Are fire detectors, where fitted, working?	Yes	No	NA	NS
	Comments				

8.2	Are the fire detectors, where fitted, tested on a regular basis?	Yes	No	NA	NS
	Comments				

8.3	If no fire detectors are fitted, are adequate procedures in place to detect smoke or fire?	Yes	No	NA	NS
	Comments				

8.4	Is the fire pump working?	Yes	No	NA	NS
	Comments				

This may be a manual or power driven pump.

8.5	Can the fire hose deliver a jet of water to any part of the vessel?	Yes	No	NA	NS
	Comments				

8.6	Does the jet and spray nozzle work on the fire hose?	Yes	No	NA	NS
	Comments				

8.7	Are there at least two multi-purpose fire extinguishers on the vessel?	Yes	No	NA	NS
	Comments				

8.8	Do the extinguishers appear in good condition and maintained	Yes	No	NA	NS
	properly inspected?				
	Comments				

8.9	Is there a fixed means of discharging a fire-extinguishing to the engine room?	Yes	No	NA	NS
	Comments				

If there is no fixed means of discharging a fire-extinguishing medium to the engine room how would an engine room fire be extinguished?

8.10	Are there at least two fire buckets with lanyards?	Yes	No	NA	NS
	Comments				

8.11	Is there a fire blanket in the galley or cooking area?	Yes	No	NA	NS
	Comments				

8.12	Does the crew know how to operate the fire fighting equipment?	Yes	No	NA	NS
	Comments				

9 – Radio

9.1	Is there a fixed radio installation fitted with digital selective calling (DSC)?	Yes	No	NA	NS
	Comments				

For category 6 vessels recommendation only.

9.2	Is a medium frequency single side band (MF SSB) radio telephone with	Yes	No	NA	NS
	DSC fitted?				
	Comments				

Recommended for category 0, 1, and 2 vessels.

9.3	Is an emergency position indicating radio beacon (EPIRB) fitted?	Yes	No	NA	NS
	Comments				

9.4	Is a search and rescue transponder (SART) fitted? ¹	Yes	No	NA	NS
	Comments				

9.5	If operating in a navigation transmission exchange (NAVTEX) area, is a NAVTEX receiver fitted? ²	Yes	No	NA	NS
	Comments	I	I		

9.6	Is there a person on board with an approved certificate for operation of the radio equipment?	Yes	No	NA	NS
	Comments				

9.7	Are cards available giving a clear summary of the radio telephone distress, urgency and safety procedures?	Yes	No	NA	NS
	Comments		<u> </u>		

¹ The fitting of a SART may be a recommendation or a requirement depending upon the local maritime administration.

² NAVTEX is a system used for the broadcast of localized marine safety information (MSI) using radio Telex.

9.8	Are there clear instructions for the operation of the hand held VHF?	Yes	No	NA	NS
	Comments				

9.9	Are the vessel's call sign and radio station identity displayed?	Yes	No	NA	NS
	Comments				

10 – Navigation Equipment

10.1	Are the navigation lights working?	Yes	No	NA	NS
	Comments				

10.2	Is there a means of making an efficient sound signal?	Yes	No	NA	NS
	Comments				

10.3	Is the all round anchor light working?	Yes	No	NA	NS
	Comments				

10.4	Are the not under command (NUC) lights working?	Yes	No	NA	NS
	Comments				

10.5	Are NUC (Not Under Command) shapes available?	Yes	No	NA	NS
	Comments				

10.6	Does the magnetic compass have a valid deviation card?	Yes	No	NA	NS
	Comments				

10.7	Does the light work on the magnetic compass?	Yes	No	NA	NS
	Comments				

10.8	Is a global navigation satellite system or a terrestrial radio navigation system available?	Yes	No	NA	NS
	Comments				

Recommended for category 0, 1, and 2 vessels.

10.9	Is there means of measuring the distance covered?	Yes	No	NA	NS
	Comments				

Recommended for category 0, 1, and 2 vessels.

10.10	Is the echo sounder working?	Yes	No	NA	NS
	Comments				

10.11	Are current, corrected charts available?	Yes	No	NA	NS
	Comments				

An electronic chart plotting system complying with appropriate maritime administration requirements may be acceptable.

10.12	Are current tide tables available?	Yes	No	NA	NS
	Comments				

10.13	Is there a tidal stream atlas available for the area of operation?	Yes	No	NA	NS
	Comments				

10.14	Is there a copy of the list of radio signals available for the area of	Yes	No	NA	NS
	operation?				
	Comments				

10.15	Is a copy of the International Code of Signals available?	Yes	No	NA	NS
	Comments				

10.16	Is an efficient waterproof signalling lamp suitable for Morse signalling provided?	Yes	No	NA	NS
	Comments				

10.17	Is an efficient radar reflector fitted?	Yes	No	NA	NS
	Comments				

10.18	Is there a working fixed or portable searchlight for a vessel that may operate in darkness?	Yes	No	NA	NS
	Comments				

10.19	Does the vessel have sufficient anchor cable for the proposed area of	Yes	No	NA	NS
	operation?				
	Comments				

11 – Navigation

11.1	Is the vessel provided with operator policy statements, instructions and procedures with regard to safe navigation?	Yes	No	NA	NS
	Comments				

11.2	Does the vessel have written procedures for entry into a 500-meter	Yes	No	NA	NS
	Terminal zone?				
	Comments				

11.3	Are up-to-date navigation warnings and weather forecasts available?	Yes	No	NA	NS
	Comments				

12 – Protection of Personnel

12.1	Is there a safe means of access to the workboat?	Yes	No	NA	NS
	Comments				

12.2	Are there adequate guardrails around the deck?	Yes	No	NA	NS
	Comments				

12.3	Are there at least two safety harnesses on board and additional	Yes	No	NA	NS
	harnesses for all those required to work on deck?				
	Comments				

12.4	Is the surface of the working deck non-slip?	Yes	No	NA	NS
	Comments				

12.5	Are personnel provided with protective clothing appropriate to the	Yes	No	NA	NS
	prevailing air and sea temperatures?				
	Comments				

12.6	If the mean seawater temperature is 10°C or less, is there an approved survival suit for each person on board?	Yes	No	NA	NS
	Comments				

12.6	What measures have been taken to prevent personnel being exposed to excessive noise?	Yes	No	NA	NS
	Comments				

12.7	Are noise-warning signs posted as appropriate?	Yes	No	NA	NS
	Comments				

12.8	Is a safety briefing given to all personnel who go on a voyage covering such items as use of life jackets and procedures to be followed in the case of an emergency?	Yes	No	NA	NS
	Comments				

12.9	In the event of collision, grounding, fire, explosion, gas, or toxic vapor	Yes	No	NA	NS
	release, are adequate written emergency procedures in place?				
	Comments				

12.10	Are adequate medical stores provided?	Yes	No	NA	NS
	Comments				

13 – Crane

13.1	Is there a valid test certificate for the crane if fitted?	Yes	No	NA	NS
	Comments				

13.2	Is there a competent crane operator on board?	Yes	No	NA	NS
	Comments				

14 – Manning

14.1	Does the person in command hold an appropriate certificate of	Yes	No	NA	NS
	competency?				
	Comments				

14.2	Is there a second person on board deemed experienced by the person	Yes	No	NA	NS
	in command?				
	Comments				

14.3	Is there a person on board familiar with the operation and	Yes	No	NA	NS
	maintenance of the main propulsion machinery?				
	Comments				

14.4	Is there at least one person on board who holds an appropriate certificate for the operation of the radio station?	Yes	No	NA	NS
	Comments	L	L		<u> </u>

14.5	Is there at least one person on board who holds an approved medical first aid certificate?	Yes	No	NA	NS
	Comments		<u>.</u>		

14.6	Has the person in command attended an approved stability course for workboats or is he or she able to satisfy the flag and coastal state, or other independent body, that he or she has adequate knowledge?	Yes	No	NA	NS
	Comments				

14.7	Has the person in command and any member of the crew who is liable to use the radar undertaken appropriate training in its use?	Yes	No	NA	NS
	Comments		1		

14.8	Are the crew members able to satisfactorily demonstrate operation of life saving appliances and fire-fighting equipment?	Yes	No	NA	NS
	Comments				

15 - Reporting

15.1	Are accidents and incidents investigated and reported in accordance	Yes	No	NA	NS
	with relevant flag state or coastal state (or both) requirements?				
	Comments				

15.2	Have there been any accidents or incidents on the workboat in the last	Yes	No	NA	NS
	12 months?				
	Comments				

15.3	If there have been any accidents or incidents, are reports available?	Yes	No	NA	NS
	Comments				

16 – Clean Seas

16.1	Are adequate arrangements in place to prevent the discharge of sewage in prohibited areas?	Yes	No	NA	NS
	Comments		·		

16.2	Are prohibited areas for sewage discharge identified?	Yes	No	NA	NS
	Comments				

16.3	Are arrangements in place for the retention of garbage on board?	Yes	No	NA	NS
	Comments				

16.4	Are arrangements in place for the handling of oily wastes?	Yes	No	NA	NS
	Comments				

16.5	Are arrangements in place for the prevention of discharge of oil/oil-contaminated water overboard?	Yes	No	NA	NS
	Comments				

17 – Life Saving Appliances

17.1	Are one or more life rafts onboard sufficient for the proposed	Yes	No	NA	NS
	maximum personnel onboard (POB)?				
	Comments				

If no life raft is fitted, what means are there in place to abandon the workboat at sea if required to do so?

17.2	Does or do the life raft(s) have a current certificate of examination?	Yes	No	NA	NS
	Comments				

When is or are the life raft(s) next due for examination?

17.3	Are there sufficient life buoys for the type of operation and workboat?	Yes	No	NA	NS
	Comments				

17.4	Are there sufficient life buoys with light for the type of operation and workboat?	Yes	No	NA	NS
	Comments				

17.4	Do the life buoys have buoyant heaving lines?	Yes	No	NA	NS
	Comments				

17.5	Is there a life jacket for every person carried on the workboat?	Yes	No	NA	NS
	Comments				

17.6	Are there parachute flares onboard the workboat?	Yes	No	NA	NS
	Comments				

17.7	Are there red hand flares onboard the workboat?	Yes	No	NA	NS
	Comments				

17.8	Are there at least two buoyant or hand held smoke signals?	Yes	No	NA	NS
	Comments				

17.9	Is there a thermal protective aid for every person carried on the workboat?	Yes	No	NA	NS
	Comments				

17.10	Are there effective means to recover a person from the water?	Yes	No	NA	NS
-	Comments				

17.11	Are life-saving signal tables available?	Yes	No	NA	NS
	Comments				

17.12	Is there a means of sounding a general alarm in the event of an	Yes	No	NA	NS
	emergency?				
	Comments				

17.13	Does the general alarm operate satisfactorily?	Yes	No	NA	NS
	Comments				

17.14	Is there a training manual for use of lifesaving appliances (LSAs)?	Yes	No	NA	NS
	Comments				

17.15	Are there instructions for onboard maintenance of the LSA?	Yes	No	NA	NS
	Comments				

17.16	Is a record of emergency drills maintained?	Yes	No	NA	NS
	Comments				

17.17	Is there an up to-date onshore emergency response plan or manual?	Yes	No	NA	NS
	Comments				

18 – Mooring

18.1	Are there adequate mooring points on the workboat?	Yes	No	NA	NS
	Comments				

18.2	Is there a sufficient number of mooring lines in good condition?	Yes	No	NA	NS
	Comments				

19 - Towing

19.1	Is there a suitable towage point on the workboat, allowing it be towed in the event of engine failure?	Yes	No	NA	NS
	Comments				

19.2	Are there suitable towing lines?	Yes	No	NA	NS
	Comments				

20 – Boat Hooks

20.1	Is there at least one boat hook available for recovering lines or to assist in rescuing personnel who fall overboard?	Yes	No	NA	NS
	Comments				

21 – Sea Anchor

21.1	Is a suitable sea anchor available?	Yes	No	NA	NS
	Comments				

If no, is one required for the size of workboat for the proposed area of operation?

22 – Security

22.1	Is the workboat required to have an approved ship security plan that	Yes	No	NA	NS
	meets International Code for the Security of Ships and Port Facilities				
	(ISPS) requirements?				
	Comments				

4 SAFETY, SECURITY, HEALTH, AND ENVIRONMENT

Overview

Introduction

This chapter describes briefly SHEMS expectations for support vessel operations, including crew training, personal protective equipment (PPE), health management, emergency response, and incident investigation.

This chapter applies to all chartered vessels.

In this chapter

This chapter contains the following information:

- 4.1 Safety Management Systems
- 4.2 Crew Manning and Training
- 4.3 Personal Protective Equipment (PPE)
- 4.4 Risk Management
- 4.5 Health Management
- 4.6 Pollution Prevention
- 4.7 Incident Reporting and Investigation
- 4.8 Emergency Response
- 4.9 International Ship and Port Facility Security (ISPS) Code

4.1 Safety Management Systems

Introduction

All vessels operating at the Offshore Terminal, of 500 gross tonnage and upwards are required to have a Safety Management System (SMS) in place

This code requires the Vessel and Vessel Operator/Company to have an approved, structured, and documented SMS in place enabling personnel to implement effectively the Operators safety and environmental protection policy.

Each vessel **must** have a Safety Management Certificate issued to the vessel by an approved authority in accordance with the approved Safety Management System.

Vessels less than 500 gross tonnage or non SOLAS vessels

Vessels of less than 500 gross tonnage or non-SOLAS vessels operating at Offshore Terminal **must** have a comprehensive SMS in place that is based on the principles and requirements of the International Safety Management Code and should include:

- Safety and Environmental Policies
- Risk management plans
- Qualifications and responsibilities of Company and key personnel
- Training and testing program
- Job Safety Analysis program
- Contingency, response plans, and drills
- Hazard identification, mitigation, injury prevention, and permit to work system
- Waste management plan
- Regulatory compliance documentation
- Personal protective equipment
- Oversight and audit program
- Competency or proficiency evaluation including IMO Standards for Training, Certification and Watchkeeping (STCW)
- Incident investigation
- Occupational health program
- Environmental program
- Critical equipment maintenance and testing programs
- Security plan
- Internal Auditing

Quality management system

The Vessel Operator or Owner should have in place a Quality Assurance Program based on the principles and requirements of International Organization for Standardization (ISO) *9001:2015* or its most current replacement or equivalent quality management systems as applicable to the operation and area of operations and services.

The program should define measures to ensure or control quality of service including:

- Project control and deliverables
- Detection, analysis, and control of observed or noted non-conformities
- Internal and subcontractor auditing plans
- Maintenance history record for critical equipment
- Plan for technical inspections and approvals of equipment
- Document control and records filing, maintenance, and retention process
- Management of change process

Safety meeting

The Vessel Operator **must** have procedures in place for conducting regular, documented onboard safety meetings to communicate SMS expectations and lessons learned from safety incidents.

Records

The Vessel Operator and Master **must** maintain accurate logs or records of activity, inspections and tests, including deck, engine, and emergency drills, safety meetings, and so forth.

Drug and Alcohol Policy

The Vessel Operator or owner, during the validity of the Agreement with ALNG, must adopt a drug and alcohol policy.

4.2 Crew Manning and Training

Crew certification

All vessel officers and crew **must** have the qualifications, experience, and licenses that satisfy vessel flag and port state requirements, IMO International Convention on STCW 1995 and all subsequent amendments. The Vessel Operator must have a system in place to verify the authenticity of officer and crew certificates and licenses.

Crew training and competency

The Vessel Operator should have in place a system for training and qualification to ensure that vessel personnel are properly qualified and competent for the work performed. For specialized positions such as the Dynamic Position operator (*when vessel is equipped with DP*), crane driver, rigger, banksman documented evidence that competency has been assessed by an appropriate authority **must** be maintained.

The Vessel Operator **must** maintain onboard the vessel a comprehensive personnel training plan that includes:

- The minimum licensing, training, and certification by position
- Shore device workers training
- Training program, including refresher training and records for all crew members, including competency and proficiency evaluation

The Vessel Operator should develop a vessel crew matrix specific to each vessel class that establishes the minimum experience and certification(s) required for each position.

These programs and records should be subjected to periodic assessment or audit by the Marine Specialist.

Company specific training

As appropriate, ALNG implements a training program to ensure and document that relevant marine crews receive ALNG required training related specifically to the operation in that region. Examples include:

- Personnel transfer equipment (such as, FROG, personnel net, and so forth)
- ALNG Company Internal Safety Training (CIST)
- Force Interactive Tug Simulation course or equivalent (for Loading Masters, Pilots and Tug Masters)

Other specific training requirements

During the vessel bid process ALNG identifies any specialized crew training or certification requirements that the Vessel Operator **must** provide above and beyond flag and port state requirements. This may include:

- Rigger/Banksman training
- OSR training (Vessel Ownership)
- Pilotage exemption for ports of operation if applicable
- Hazardous material shipping and handling

Minimum crew requirements

The Vessel Operator **must** provide sufficient officer and crew for continuous 24-hour operations throughout the assignment, ensuring manning levels comply with flag and port state requirements and the requirements of STCW 1995 and all subsequent amendments.

Manning level, experience, and qualification requirements should be reviewed during the vessel bid tender phase to ensure they meet work scope and vessel manning requirements for Terminal operations within ATBA (Area to be avoided), Safety Zone (exclusion zone) and 500-meter zone.

The Vessel Operator should maintain a vessel crew matrix detailing certification held, number of years' experience in rank, on type of vessel and with company for officers' positions per requirements of STCW 1995.

ALNG may establish additional minimum experience requirements for certain critical positions.

When reviewing manning level requirements the following should be considered:

- Bridge manning requirements: the Marine Collision Avoidance Best Practice recommends that all
 vessels underway within the established Safety Zone should have a minimum of two qualified
 persons (officer and look-out) on the bridge, and at least one should be a certified bridge watchkeeping Officer.
- Depending on the type of operations, two or more qualified officers might be required on the bridge.
- Deck manning requirements during offshore offloading or loading operations.
- Engine room manning requirements: recommendation that engine room is manned when operating within the 500-meter distance from Terminal.
- Specialized work activity requirements (for example, OSR, rescue and evacuation capabilities and so forth).
- Requirements of STCW 1995 and all subsequent amendments, particularly with respect to Chapter VIII, Section A-VIII/1 "Fitness for duty," which address hours rest; or D.L. 271/99 (Italian Law) & International Labor Organization (ILO).

Arrangements with the Vessel Operator whereby temporary increases in manning levels can be requested when special work activities arise should be considered.

Security sensitive positions

The Vessel Operator is required to obtain background checks on its employees or subcontractors performing Security sensitive services in respect of their approved Security Check List. ALNG develops a list, as required by ISPS, of positions considered as security sensitive. These should include:

- Captain (Master)
- First or Chief Officer
- Chief Engineer

4.3 Personal Protective Equipment (PPE)

PPE requirements

All vessel personnel **must** use PPE as directed by the Vessel Operator.

All PPE proposed for use by the Vessel Operator must be approved by Authorized Bodies and in compliance with CE.

It is recommended that the Vessel Operator maintain a matrix of PPE use requirements for each specific work activity or work location (or both).

Required PPE **must** include at a minimum:

- Certified hard hat (or certified bump hats for personnel working in the engine room or other machinery spaces)
- High-visibility boiler suits
- Ear protection, including double attenuation protection in high noise areas
- Eye protection (side shields, goggles, and face shields where dictated by task)
- Safety Shoes
- Safety gloves (hand protection)
- Safety harness (fall protection for working aloft)
- Additional PPE may be required to mitigate hazards associated with specific tasks
- Personal floatation devices (PFDs) to be included as appropriate per the specific Job Safety Analysis (JSA)

Personal floatation devices

All vessel crew working on exposed decks such as the cargo deck or foredecks **must** wear approved PFDs with current validity.

Night time operations during cargo handling

To provide maximum visibility to the Terminal crane operators and crew, vessel crews working cargo or personnel transfers offshore during darkness or restricted visibility **must** wear high-visibility boiler suits (coveralls) or jackets.

It is also recommend that the deck crews wear personalized lights (i.e. on helmets)or jackets to enhance visibility.

Cold weather clothing

Where environmental conditions dictate, Vessel Operators should consider providing warm and waterproof clothing and survival suits to crews working in exposed areas.

4.4 Risk Management

Risk assessments

The Vessel Operator should have in place a comprehensive risk assessment process for assessing the general risk levels of the varying vessel operations and activities and identifying mitigation measures.

References:

- ALNG "Management of Change"
- ALNG SHEMS 2A Risk Assessment Manual

JSA

A Job Safety Analysis (JSA) process **must** be in place and utilized by the vessel's Master and crew. A generic set of JSAs for routine operations should be maintained onboard with updates made when work place changes occur. New JSAs **must** be developed prior to the start of non-routine operations.

Records should be maintained onboard for ALNG review.

LPSA and toolbox meetings

Loss prevention self-assessments (LPSAs) (stop and think before acting), toolbox safety meetings, and pre-task walk-throughs should be utilized onboard.

Permit to work

Vessels **must** be operated under their documented permit to work (PTW) system, which **must** include:

- Hot work
- Working over the side or at heights
- Enclosed or confined space entry
- Energy isolation or lock out / tag out
- Diving (if applicable)
- Breaking containment
- Critical equipment or systems
- Cold work

Subcontractor permit to work system

If the vessel owner or operator assigns work activities to third parties (subcontractors) this process must comply with SHEMS 8A requirements and Italian Law Decree nr. 81/2008 Art.26. The Marine Specialist designated as SDR (Contract Administrator) should approve any subcontractor forms completed by the contractors, and so advise the Agreement owner.

Permit to Work (PTW) system adopted by ALNG **must** be used in all cases when work is being carried out, inside the safety zone, on a vessel by a contractor, subcontractor, or any other personnel who is either employed by the vessel or ALNG.

Where the subcontractor's PTW system is to be used for work specific to the subcontractors work activity (for example diving and so forth), there **must** be an agreed bridging document in place that identifies respective roles and responsibilities.

Permit requirements within the 500 meter zone

When performing routine operations within the 500-meter from Terminal, the vessel continues to work under ALNG's permit to work system and with continued communication with the Terminal Control Room Operator (CRO).

Work not associated with the direct task, such as vessel maintenance activities **must not** be conducted while the vessel is inside ATBA and Safety Zone.

Specialized work (including diving, remotely operated vehicle [ROV] operations, maintenance support, and so forth) within the 500-meter from Terminal or other ALNG stewardable site is managed through this *Marine Operations Manual* with additional arrangements where specific work permit approval responsibilities are addressed.

4.5 Health Management

Occupational health management

The Vessel Operator **must** have a health management system that addresses the protection of the health of its employees, subcontractors, passengers, and ALNG personnel while onboard the vessel.

The health management system should manage health risks by:

- Identifying health hazards and assessing and controlling risks.
- Providing the appropriate PPE to protect the crew from substances that may pose a potential health hazard and noise risks in the workplace.
- Assessing fitness to work to ensure personnel are medically fit to perform all duties specified for their job function without undue risk to themselves and others.
- Performing health assessments of exposed workers and where appropriate setting exposure limits for any physical agents and chemical substances at the work site.
- Providing clinical management of occupational illnesses and injuries, and ensuring appropriate preparations for assigned locations including vaccinations, personal medical supplies and prescriptions and education about local and public health risks.
- Providing access to quality clinical services as appropriate.
- Effectively communicating health risks and prevention strategies to all workers.
- Retaining health records, including work history, exposure monitoring, and medical information, in suitably accessible forms while respecting security and medical confidentiality considerations.

The system should address the health risks associated with:

- Hot and cold climates
- Working hours and schedules
- Drug and alcohol use
- Hazardous substances
- Infectious and vector-borne diseases
- Food and water safety
- Noise

Note: The system must be in accordance with D.L. 271/99 and Hazard Analysis Critical Control Point (HACCP) /D.L. 135/99.

Smoking

Smoking and non-smoking areas should be clearly identified.

Note: Smoking is prohibited outside vessel quarters or machinery spaces when the vessel is in the 500-meter area from Terminal

Medical emergencies

Medical emergencies occurring onboard the vessel must immediately be notified to the vessel owner per their established internal reporting procedure. The owner must promptly submit appropriate information to the Marine Specialist or Logistic Superintendent or Management.

Noise levels

The Vessel Operator should maintain records of vessel noise surveys inside passenger area. Appropriate signage **must** be posted on vessels to alert crews and passengers of high noise areas.

Food safety and hygiene

Crew personnel tasked with handling and preparation of food should be provided with training by the Vessel Operator in personal hygiene and food service sanitation.

Documented training should include:

- Personal safety and use of protective clothing and other PPE
- Personal hygiene
- Food hygiene and nutrition
- Prevention of bacterial food poisoning
- Preparation and service of food
- Food storage
- Cleaning and waste handling

HACCP

Vessels hired for the primary purpose of accommodating Charterer personnel or contractors or vessels which frequently accommodate Charterer personnel, should have in place a documented Hazard Analysis and Critical Control Point (HACCP) system for food, fresh water, and hygiene control. The HACCP system should identify critical control points and the specific actions to be taken at those points.

Potable and drinking water

The Vessel Operator **must** have in place processes and procedures, which may be part of the vessel's planned maintenance system, which ensures a safe fresh water supply. Where applicable this also applies to vessels engaged in the supply of potable water to the Terminal. Potable water tanks **must** be solely dedicated to carriage of fresh water.

Processes and procedures should include:

- Fresh water loading and supply arrangements
- Onboard water treatment
- Fresh water storage
- Fresh water testing requirements
- Fresh water from water-making plant, where applicable
- Appropriate methods for cleaning potable water tanks in the event of an inadvertent contamination

Non-potable and fresh water supplies **must** be clearly identified.

The Vessel Operator **must** at all times follow port or flag state requirements.

ALNG health inspection

Regular health inspections of the vessel are conducted by Marine Specialist, or designee, including, where applicable:

- Owner or Operator control program
- Drinking water sanitation
- Food sanitation
- Chemical handling procedures
- Waste management
- Medical services
- Industrial hygiene practices
- Policy regarding Pandemic issue

Marine Specialist or SSHE&R Representative may elect to conduct periodic health inspections of vessels, in particular where vessels are used for accommodating ALNG personnel or Contractors. Findings from health inspections should be provided to the Vessel Operator who should develop corrective action plans and track action items to closure in a timely manner.

Statutory health inspections

All vessels are under the control of the Maritime Authority as per national and International law, and therefore, subject to health inspections by the appropriate associated agencies.

4.6 Pollution Prevention

Oil spill response

Every vessel **must** have procedures and instructions in place for oil spill response preparedness.

Vessels over 400 gross tonnage are required to carry an approved Shipboard Oil Pollution Emergency Plan (SOPEP). Vessels over 150 gross tonnage certified to carry noxious liquid substances in bulk are required to carry an approved Shipboard Marine Pollution Emergency Plan (SMPEP).

Oil clean up and drills involving chemical clean up should be regularly conducted.

Waste management

Vessels **must** have in place a garbage management plan and Garbage Record Book which details the types and amounts of waste disposed of or incinerated with date, time, and position of vessel. Where garbage is disposed of to a shore facility, receipts for waste must be provided and retained in the garbage record book.

The Vessel Operator **must** provide clear instructions and facilities for segregation of garbage with particular consideration to "special waste" such as batteries, sensors, florescent tubes, and any generated biohazards, to ensure compatible materials are stowed together.

Oil Record Book

As per International Convention for the Prevention of Pollution from Ships (MARPOL) requirements, all vessels greater than 400 gross tonnage are required to complete Part 1 of the Oil Record Book to record machinery space operations. Vessels less than 400 gross tonnage should maintain an equivalent Oil Record Book to record machinery space oil and fuel related operations.

The Oil Record Book is used to record fuel loading and transfer operations and disposal of oily water or other oily residue either via the approved oily water separator or to shore reception facilities.

Where oily water or oily residue is disposed of at a reception facility, the facility **must** provide a receipt which is attached to the Oil Record Book.

Oil water separator

Vessels fitted with a 15-ppm oil water separator **must** maintain this equipment in good order.

Clear warning notices **must** be posted which warn against the overboard valve from the oil water separator being opened without the Chief Engineer's or Master's approval. This valve **must** be locked.

MARPOL requirements

The Vessel Master and crews **must** strictly comply with the MARPOL oil water discharge restrictions applicable to the area of operations in which the vessel is currently working.

4.7 Incident Reporting and Investigation

Incident reporting

The Vessel Operator is required to follow the incident reporting requirements as stated within the vessel contract terms.

An incident reporting matrix, detailing Vessel Operator and ALNG contact information should be maintained as part of the Contractor coordination procedure or interface management plan.

Initial incident notification format

Upon notification of an incident onboard a vessel or an LNGC (only when at the Terminal), ALNG initiates its incident reporting process. The vessel owner must adopt a similar process and internally report the incident including at least:

- Date and time of incident
- Location
- Type of incident (reportable injury, equipment failure or damage, fire or explosion, first aid, security related, serious near miss, other)
- Number and name or position of any injured personnel
- Brief description of the incident
- Response measures taken
- Impact (include effect on activities and operations, expected recovery, and potential lost time for injured personnel)
- Assistance required, if any
- External authorities notified
- Media involvement
- Lead Operator Contact details

Incident reports to authorities

The Vessel Operator is responsible for complying with all local and flag state regulatory requirements in the reporting of an accident involving the vessel.

Follow up reports

Depending upon the seriousness of the incident, the Vessel Operator may be required to provide a written report within 24 hours of the incident. The final report should identify the root cause of the incident utilizing an acceptable process like Root Cause Analysis (RCA flow).

Incident investigation

After the incident site has been secured and if possible within 24 hours following the incident, an investigation should be initiated by the Vessel Operator.

The Vessel Operator should assemble a team of personnel with the appropriate knowledge and background. The investigation team, the composition of which depends on the level and severity of the incident, should gather physical evidence and information from observations, interviews, and other relevant documentation, for example, logs, records, and procedures.

The information gathered should be analyzed and evaluated using a structured process (for example, Tap Root[®]) to establish pre-incident conditions, determine the sequence of events, identify root causes, and develop recommended corrective actions.

A report **must** be completed by the Vessel Operator to communicate the incident investigation findings, meet regulatory and government reporting requirements, and document recommendations to prevent reoccurrence.

The final report should include the following information:

- Date and time of incident
- Date of the investigation
- List of investigation team members
- Description of the incident
- Facts determined during the investigation
- Causes of the incident
- Recommended corrective actions to help prevent recurrence

ALNG may request to be represented on the investigation team or conduct an independent investigation. Legal guidance and a Terms of Reference should be agreed.

The ALNG Marine Specialist; Safety, Health, and Environment (SHE) Manager; or other ALNG designated personnel; should form part of the investigation team, providing Marine expertise.

Classification of incidents

Clear guidance should be provided to the Vessel Operator on classification of incidents for ALNG internal reporting requirements, noting that the Vessel Operator may use a different method of classification for its own internal reporting.

ALNG classification of incidents is determined per SHEMS 9A.

Reference: ALNG SHEMS 9A, Incident Management Manual

4.8 Emergency Response

Emergency response preparedness

Every vessel **must** have contingency plans, procedures, and instructions in place for emergency preparedness. Muster Station bills **must** be posted.

Vessel crews **must** be trained and competent to put into practice the emergency preparedness procedures.

Regular emergency response drills should be performed and recorded. The following types of drills should be conducted.

- Fire
- Man overboard
- Abandon ship
- Search and rescue
- Security (vessels over 500 gross tonnage [GT], and the ALNG CSV/FSIV adopt the basic requirements as per International Code for the Security of Ships and Port Facilities [ISPS])
- Oil spill
- Loss of engine or steering power

In addition, vessel crews should be regularly trained in the use of life-saving equipment.

Emergency response coordination

ALNG Emergency Response Plans (ERPs) should include emergency scenarios involving marine support vessels. These may include:

- Collision between Vessel and the Terminal, Shore Base Quay, or other location
- Overdue Marine Vessel
- Oil spill during transfer operations

Scenario based emergency drills with specific objectives should be conducted among ALNG, Vessel Operator, and Vessel to test communications, the ERP, and coordination between involved parties.

The specific roles and duties of all marine support vessels utilized in the event of an emergency should be documented in the ALNG ERP.

As part of the on-hire briefing and orientation process, ALNG should review with the Vessel Operator the ALNG ERP and ALNG's expectations of support vessels during different casualty events. The Vessel Operator should be provided with documentation describing the specific roles and duties of all marine support vessels utilized in the event of an emergency in the ALNG ERP.

References:

- Terminal/Pipeline Emergency Response Plan
- Shore Base Emergency Response Plan

4.9 International Ship and Port Facility Security (ISPS) Code

Introduction

The ISPS Code ensures the security of ships and port facilities. This is a risk management activity to determine what security measures are appropriate. An assessment of the risks must be made for each particular case.

Owners of vessels to be chartered, or under charter, must ensure to ALNG that their vessels are in compliance with the ISPS Code, as appropriate.

The Terminal and Shore Base must be in compliance with the ISPS Code, as required by ISPS Code.

Purpose of the ISPS Code

The ISPS Code provides a standardized, consistent framework for evaluating risk and enables governments to offset changes in threat with changes in vulnerability for ships and port facilities.

Security risk assessment

To begin the process, each contracting government (local authorities in cooperation with industry associations) conducts a port facility security risk assessment (PFSA). The risk assessments must be performed jointly by ALNG PFSO (Port Facility Security Officer) and Italian Coast Guard.

Once completed the PFSA must be approved by Coast Guard and will be used to update the PFSP (Port Facility Security Plan)

ISPS ship and port security requirements

This risk management concept is embodied in the ISPS Code through a number of minimum functional security requirements for ships and port facilities.

Support vessels over 500 gross tonnage engaged on international voyages **must** have an approved Ship Security Plan which meets ISPS requirements. An International Ship Security Certificate (ISSC) **must** be carried onboard the vessel, and a designated ship security officer **must** be identified in the plan.

These requirements include the following:

- Ship security plans
- Ship security officers
- Company security officers
- Certain onboard equipment

For port facilities, the requirements include:

- Port facility security plans
- Port facility security officers
- Certain security equipment

In addition, the requirements for ships and for port facilities include:

- Monitoring and controlling access
- Monitoring the activities of people and cargo
- Ensuring that security communications are readily available

Marine Operations Manual - Safety, Security, Health, and Environment

Each ship (or class of ship) and each port facility presents different risks. The method in which they meet the specific requirements of this Code are determined and eventually approved by local authorities.

Vessels which are not required to have an approved Ships Security Plan because of tonnage or trading area **must** have security procedures in place.

Note: Vessels that have gross registered tonnage (GRT) < 500 tons are not required to be ISPS compliant.

ISPS security levels

In order to communicate the threat at a port facility or for a ship, the contracting government sets the appropriate security level. Security levels 1, 2, and 3 correspond to normal, medium, and high threat situations, respectively. The security level creates a link between the ship and the port facility since it triggers the implementation of appropriate security measures for the ship and for the port facility.

Security measures

Adequate security measures in port and at sea should be in place, including anti-piracy deterrence when applicable.

The Crew Supply Vessel which is employed for personnel transportation must be fitted with all items as per the ISPS code.

At the Shore Base there is a systematic approach to ISPS as all passengers in transit are submitted to personal metal detector screening and a luggage screening process.

5 MARINE OPERATIONS

Overview

Introduction

This chapter describes operational procedures, requirements, and expectations for management and coordination of marine support vessel operations for the Adriatic LNG Terminal.

In this chapter

This chapter contains the following information:

- 5.1 Communications
- 5.2 Onboard Documentation Requirements
 - 5.2.1 Local Coast Guard Offices and Port Requirements
 - 5.2.2 Passage Planning and Navigation
- 5.3 Vessel Voyage Log System (VLS)
 - 5.3.1 VLS Logging Requirements
- 5.4 Operations Near the Terminal and in the Safety Zone
- 5.5 In Port or Shore Base & Alternative landing point Operations
- 5.6 Tank Cleaning and Enclosed Space Entry
- 5.7 Engine Room Operations
- 5.8 Fuel Management
- 5.9 Marine Vessel and Crew Requirements
 - 5.9.1 Vessel Master Responsibilities
 - 5.9.2 Vessel Crew Competency Requirements
 - 5.9.3 Ship's Crew / Personnel Onboard (POB) Lists
- 5.10 Emergency Standby and Rescue Operations
- 5.11 Vessel Crew Change
- 5.12 Tug Vessel Operations
 - 5.12.1 Tug Vessel Departure Procedures
 - 5.12.2 Tug En Route and Arrival Procedures
 - 5.12.3 Tug Offshore Site Departure Procedures
 - 5.12.4 Tug Standby Operations during LNGc Offloading Operations
 - 5.12.5 Firefighting
 - 5.12.6 Training and Exercises
- 5.13 Line Handler Boat Operations

- 5.13.1 Line Handler Boat Departure Procedures
- 5.13.2 En Route and Arrival Procedures
- 5.13.3 Offshore Site Departure Procedures
- 5.13.4 Transfer of Line Handling Crew to and from the Terminal

5.14 Pilot Boat

- 5.14.1 Pilot Boat Departure Procedures
- 5.14.2 En Route and Arrival Procedures
- 5.14.3 Offshore Site Departure Procedures
- 5.14.4 Pilotage Operations
- 5.15 Tools

5.1 Communications

Introduction

This section describes expectations for Support Vessels regarding marine communications and the ALNG marine communication systems and their use.

Communications

Vessels **must** be fitted with suitable means of voice communication with both the Marine Shore Base and the Terminal. This is typically via very high frequency (VHF) or ultra-high frequency (UHF) radios.

ALNG provides each vessel with communication protocol instructions, this includes:

- VHF or UHF channels for communication with the Terminal and Shore Base or maintaining listening watch. ALNG may elect to supply and install UHF base stations and associated equipment on the vessel, which is returned on completion of the charter.
- Mobile, municipality, and Iridium (satellite) or telephone contacts offshore and onshore.
- Reporting points.
- Daily reporting requirements.
- Captains Log.

Electronic communications

The tugs and FSIV/CSV have the capability to receive and send electronic data, such as email, allowing ease of transmittal of vessel daily logs (Captains Log), voyage instructions, manifests, and so forth. Other vessels utilize their base offices to transmit electronic data as required.

Portable UHF or VHF units

Intrinsically safe portable or handheld VHF or UHF radio units (ALNG acceptable systems) are used onboard the vessels when operating within the Terminal Safety Zone which is a circle defined by a 1.1 nautical mile (2000 m) radius from the center of the Terminal.

Mobile phones

Mobile phones should not be used within 500-meters of the Terminal, by personnel on the open deck or engaged in vessel maneuvering or station-keeping duties on the bridge; the only exception may be in the case of an emergency as a back up form of communication. The use of audio entertainment equipment should never impact the ability of the Watch Officer to keep a proper lookout, safely navigate the vessel, or hamper the Watch Officer's ability to monitor alarms or radio equipment.

Cellular phones may be used between the vessel and ALNG Shore Offices when the vessel is berthed alongside at one of the landing points.

Types of systems

The following marine-related communication systems are used by ALNG.

Table 5-1 Marine-related Communication Systems Used by ALNG

RADIO SYSTEMS	TELEPHONE SYSTEMS	OTHER SYSTEMS
Marine VHF radios*	Mobile and Iridium (satellite)	Global Maritime Distress and
	telephones	Safety System (GMDSS)
VHF radios*	-	-
Aviation VHF radios	-	-

* Primary communication systems

Systems descriptions

The following are brief descriptions of Marine related communications systems.

Table 5-2 Marine-related Communications Systems Description

ТҮРЕ	DESCRIPTION	
UHF radios	ALNG only system: The range of communication extends to all the ALNG onshore	
	facility locations in the Veneto region, and the radios are used for internal field	
	communications such as crane to-boat. A number of the Terminal UHF radios are	
	capable of making phone calls through the private automatic branch exchange	
	(telephone and communications) (PABX) system.	
Marine VHF radios	Open public system : These radios are capable of communicating over a range of	
	40 km. They are used for shorter distance marine communication between vessels,	
	the Terminal, and the Shore Base or alternative landing point.	
Aviation aero VHF radios	os Open public system : These radios are capable of communicating over a range of	
	100 km depending on aircraft altitude. They are used for direct communication	
	between offshore and Shore facilities, and helicopter (fixed and handsets available).	
Cellular Phones	This system may have coverage offshore but should not be used as a system of	
	communication between the Terminal and vessels.	
	Cellular phones may be used between the vessel and ALNG Shore Offices when	
	the vessel is berthed alongside at one of the landing points.	
GMDSS	This is the international marine emergency distress system.	

Monitoring

All marine vessels monitor the following on a 24-hour basis while offshore.

Table 5-3 Offshore Monitoring

ТҮРЕ	CHANNEL (FREQUENCY)	USE
VHF Marine	16 (156.800 MHz)	Emergency
VHF Marine	08 (156.400 MHz)	Operations
Aviation	122.5 kHz	Emergency
Aviation	123.45 kHz	Operations
HF/SSB	6,220 MHz	Operations
ALNG VHF	11, 14, 36, 58, 70, 72, 105, 117	Operations/Emergency
ALNG UHF	See Table 5-4	Operations/Emergency

kHz = kilohertz

MHz = megahertz

Note: Local logical IDs have been assigned as follows:

- P1 = Ch 36
- P2 = Ch 105
- P3 = Ch 117
- P4 = Ch 58

Testing

The following VHF and UHF channels must be tested once every 24 hours while underway:

- Marine operations frequencies and channels
- All emergency frequencies and channels

Testing is defined as verification of the transmission and receiving capability of the radio.

Operations communication channels

The following ALNG UHF radio grouping frequencies and channels are allocated to various stewardships.

Table 5-4 Allocation of Frequencies and Channels to Various Stewardships

	ALNG TERMINAL OPERATIONS			
UHF GROUP	TRANSMIT FREQUENCY	APPLICATION		
1	Ch1 462.12500; Ch2 462.50000	Emergency Response		
	Ch3 462.07500; Ch4 462.40000			
2	Ch1 462.12500; Ch2 462.50000	Search and Rescue		
	Ch3 462.07500; Ch4 462.40000			
3	Ch1 462.12500; Ch2 462.50000	Process Operations		
	Ch3 462.07500; Ch4 462.40000			
4	Ch1 462.12500; Ch2 462.50000	Maintenance		
	Ch3 462.07500; Ch4 462.40000			
5	Ch1 462.12500; Ch2 462.50000	Deck/Crane		
	Ch3 462.07500; Ch4 462.40000			
6	Ch1 462.12500; Ch2 462.50000	Marine		
	Ch3 462.07500; Ch4 462.40000			
7	Ch1 462.12500; Ch2 462.50000	Pipeline and Shore Base Maintenance		
	Ch3 462.07500; Ch4 462.40000			
8	Ch1 462.12500; Ch2 462.50000	Emergency Response Control Room at Shore Base –		
	Ch3 462.07500; Ch4 462.40000	Onshore		
9	Ch1 462.12500; Ch2 462.50000	Warehouse/Pier – Onshore		
	Ch3 462.07500; Ch4 462.40000			
10	Ch1 462.12500; Ch2 462.50000	Operation – Onshore		
	Ch3 462.07500; Ch4 462.40000			
11	Ch1 462.12500; Ch2 462.50000	Security – Onshore		
	Ch3 462.07500; Ch4 462.40000			

ALNG SHORE BASE OPERATIONS			
UHF	LOCAL		
GROUP	LOGICAL IDS	TRANSMIT FREQUENCY	APPLICATION
1	1071	Ch1 462.12500; Ch2 462.50000	Emergency Response Control
	1072	Ch3 462.07500; Ch4 462.40000	Team
2	1067	Ch1 462.12500; Ch2 462.50000	Pipeline Maintenance
	1068	Ch3 462.07500; Ch4 462.40000	
3	1069	Ch1 462.12500; Ch2 462.50000	Warehouse/Pier
		Ch3 462.07500; Ch4 462.40000	
4	1070	Ch1 462.12500; Ch2 462.50000	Operation
		Ch3 462.07500; Ch4 462.40000	
5	1400	Ch1 462.12500; Ch2 462.50000	Security (fixed base radios)
	1401	Ch3 462.07500; Ch4 462.40000	

OFFSHORE TERMINAL FACILITY OPERATIONS		
CHANNEL	TRANSMIT FREQUENCY	APPLICATION
1	VHF 15 or 17	Vessel to vessel
2	VHF 11 or 14	LNG Carrier (LNGC) operations
3	VHF 11 or 14	Tugs, Pilot, line handling, Harbor Master

Function tests and radio silence

The following VHF and UHF channels must be tested daily:

- Preparedness and emergency
- Marine operations
- Air transport operations

Voyage instructions

Roles and responsibilities for planning and issuing voyage orders and method of communication of the orders should be addressed for each vessel.

Voyage instructions should include:

- Voyage plan (sequence of way points, non-return point, minimum safe distance from other vessels, and so forth)
- Offloading or back loading activity (including quantities of bulk liquids)
- Copy of the vessel load list (manifest)
- List of dangerous goods and associated Material Safety Data Sheets (MSDSs) for each call
- Special work activities (such as, stand-by, LNGC assist, and so forth)
- Estimated time of arrival (ETA) or estimated time of departure (ETD) advice
- Sailing speed other than most economical speed on the open sea
- Sailing speed not to exceed 5 knots on the river

The Vessel Master should acknowledge receipt and understanding of the orders.

Daily reporting

Specific daily reporting requirements should be addressed for each of the vessels on hire.

Marine notices

ALNG maintains an up-to-date list of both:

- Local Authority-issued Marine Ordinances and Recommendations relevant to the ALNG area of Operations
- ALNG issued Marine Notices released by Chioggia Coast Guard

Copies of the Marine Notices released by Chioggia Coast Guard and any updates or newly issued notices are provided on request to all marine vessels on charter or operating within the ALNG field area, including project and special needs vessels.

5.2 Onboard Documentation Requirements

Introduction

This section describes the responsibilities of the Marine Specialist and the Vessel Masters. Also included are descriptions of information, documentation, and reports that are required on all marine vessels under contract to ALNG.

Responsibilities

- Marine Specialist: Ensures that all required ALNG documentation, ALNG pipeline drawings, manuals, guidelines, and revisions are provided to the Vessel Master after survey and hire of the vessel for ALNG charter.
- **Vessel Master**: Ensures that appropriate crewmembers are familiar with the documentation relative to their responsibilities.

Documentation

The following table describes the various types of ALNG documents that are required on all marine vessels under contract to ALNG.

ТҮРЕ	DESCRIPTION	
Subsea and above	 Layout of Terminal area showing all subsea and above water obstacles 	
water	 Shore Base layout (FSIV/CSV)) 	
	Alternative Landing Point	
	ALNG pipeline layout	
	 Position of buoys 	
	 Information on other vessels and crafts working at the location 	
Manuals and	Marine sections of the various operating procedures manuals (regulating vessel	
instructional	behavior in the safety zone):	
documents	Marine Operations Manual	
	 Terminal Information and Regulations Manual 	
	 Operations Logistics Manual (parts related to FSIV/CSV) 	
	ALNG Communication Plan	
	Relevant ALNG instructions	
	Terminal/Pipeline Emergency Response Plan (ERP)	
	Shore Base Emergency Response Plan	
	 Other applicable field operational documentation 	
Personnel	Updated field personnel onboard (POB) list	
	Crew list for vessels chartered to ALNG (to be distributed to the ALNG Marine	
	Specialist and others as appropriate)	
	ALNG on-duty lists	
	Relevant authority documents	
Reports and logs	Reports from vessel's standby duties and training statistics	
	 ALNG daily vessel logs containing information such as vessel movements and 	
	deviations, vessel fuel consumption, fuel transfers, personnel transfers, deck space	
	use, time used for transit, working under the hook, tanker assist duties, and waiting	
	time	

Maps and field-specific information

The vessel Master must post the following maps or layouts on the bridge, as appropriate:

- Field layout showing surface navigational hazards or obstructions
- Allocation of cargo handling and transfer locations relative to the Terminal with indications of most prevailing wind directions and surface current settings
- Batimetric Survey for the Landing Points area
- Po di Levante waterway navigational chart (including batimetric survey)
- Approaches to Venice Lagoon and associated harbors
- Other appropriate navigational charts for the operating area or region

Communication

All relevant communication channels, radio frequencies, and key phone numbers established for the Terminal and Shore Base port operations and alternative landing points must be posted on the vessel's bridge (wheel house).

Such frequencies and channels include, but are not limited to:

- Very high frequency (VHF) marine
- Air to ground radio frequencies
- Interfiled ultra high frequency (UHF) channels or frequencies
- International Marine Satellite (INMARSAT)
- Key telephone numbers for all relevant pool vessels, Shore Base contacts Rovigo Work Hub Marine contacts, and other key contact numbers

Reader file

A reader file that contains hard copies of all memorandums, marine directives, and circular and other instructions issued by ALNG to marine vessels must be maintained and kept readily available on the bridge.

In addition, the following documentation is located on the bridge:

- ALNG documents:
 - Marine Operations Manual
 - Operations Logistics Manual (parts related to FSIV/CSV)
 - Shore Base Emergency Response Plan
 - *Terminal/Pipeline Emergency Response Plan* (including oil spill response)
 - Terminal Regulations and Information Manual
- Hazardous Material Safety Data Sheets (MSDSs) (for all hazardous cargo carried and stored on board)
- Contractor's *Operations Manual* for each vessel (as applicable)
- Contractor's Safety Manual
- International Maritime Dangerous Goods Code

All relevant field documentation such as the above-listed documents must be in the Vessel Master's possession at all times.

The Marine Specialist ensures that this documentation is provided to the Vessel Masters. During vessel assessments, the Marine Specialist should assess vessel documentation and ensure that it is the current version.

The Vessel Owner or Master is responsible for maintaining all international and regulatory certification and inspection reports in the vessel documentation files.

The Vessel Owner/Master is also responsible for closing any outstanding action items from ALNG and regulatory inspections within the required deadlines.

5.2.1 Local Coast Guard Offices and Port Requirements

Introduction

Vessels are primarily operated from or located at the following port locations.

Table 5-6 Port Locations

VESSEL	LOCATION	COAST GUARD HARBOR OFFICES
Fast Support	 ALNG Shore Base (primary) 	Porto Levante (<i>detached office of Chioggia</i>
Intervention Vessel	• Alternative Landing Point (secondary at	Coast Guard)
(FSIV/CSV)	P. Levante area)	 Chioggia or Venice
	 Chioggia or Venice for fuel 	
Tug	 Chioggia (primary) 	Chioggia
	 Venice for fuel or maintenance 	Venice
Line Handlers	Chioggia/Venice	Chioggia/Venice
Boats		

Master responsibility

Vessel Masters are responsible for completing all port departure and arrival notifications and submitting them to the Chioggia Coast Guard offices (*include Porto Levante detached office*).

Vessels must retain on board latest copies of relevant contact details and reporting requirements as issued by the Chioggia Coast Guard offices.

Pilotage exemptions

When port regulations require that long-term charter support vessels require a pilot exemption certificate in lieu of a pilot due to vessel size or gross registered tonnage (GRT), such Vessel Masters are required to obtain and maintain a valid pilot exemption certificate for the above relevant port areas.

If required, due to unusual circumstances or other restrictions, a Vessel Master should not hesitate in ordering a Pilot to assist in port passage operations or to delay port passage operations until he or she deems it safe to continue.

The Vessel Master must advise the Marine Specialist of any potential delays or requests for pilotage assistance.

5.2.2 Passage Planning and Navigation

Bridge manning

The vessel operator **must** have procedures in place detailing the Bridge manning requirements during all stages of a voyage, including but not limited to: when under pilotage, within the safety zone, in port or at sea, during LNGC assist operations, and at all other times as specified by ALNG. At a minimum, the procedures should require that a qualified licensed deck officer **must** be on the bridge whenever the vessel is underway and also define the conditions or operations that the Master should be present on the bridge.

To avoid distracting the Bridge team only authorized persons should be allowed in the wheelhouse when the vessel is underway.

Navigations charts and publications

Each vessel **must** maintain onboard, up-to-date navigational charts and publications for the area of operation. Charts are to be of suitable scale. The Vessel Operator **must** have in place an effective system to maintain these charts and publications up to date.

An International Maritime Organization (IMO) compliant electronic chart display and information system (ECDIS) can be used as an alternative to paper nautical charts provided a back-up system is available as prescribed by IMO. Where an electronic chart system is not approved by IMO, paper charts **must** still be used as the primary system.

Passage plan

A documented passage plan approved by the Vessel Master **must** be in place for all legs of a voyage, both at sea and in port, including navigational areas where a Pilot may be aboard. As a minimum, the plan should include the following elements (IMO guidelines for Voyage Planning [IMO Resolution A.893]):

- **Appraisal**: Review of all relevant information pertaining to the voyage leg.
- **Planning**: A detailed, written plan should be prepared with items such as danger areas, tidal data, waypoints, and so forth highlighted on the chart.
- **Execution**: A process to ensure the Bridge team reviews the plan and that controls are in place to ensure it is safely executed.
- **Monitoring**: The Bridge team should use all available means to monitor the passage including the actions of the pilot and review against the plan.

Recognizing that support vessels are most often engaged in short regular voyages between shore base(s) and offshore destination(s) a "standard" passage plan may be in place which is regularly reviewed and updated to ensure all up-to-date information including temporary notices to mariners are included.

Where the vessel is engaged in significant intra-field activity between the Terminal, vessels, or locations (or all three) that are close to each other, it may not be practical to have a detailed written plan for each leg of the voyage between vessels or locations. If fitted, an ECDIS can be used for voyage planning of these short intra-field routes between destinations. The Vessel should, however, always have in place the largest-scale chart available highlighting danger areas. Prior to setting off on the next leg between destinations, the Master or Officer on Watch (OOW) should appraise all relevant information prior to

deciding on a course to make. The OOW should take into consideration other vessel or offshore activities in the area to be transited, weather, sea state, and visibility.

Vessel position fixing

Each passage plan should include details on the methods for determining vessel position throughout the voyage; this may include Global Positioning System (GPS), ECDIS, and Visual and Radar observations.

Use of Terminal as a waypoint

The requirement to set an offset course that does not pass through, or near the Terminal is documented in the ALNG policy documentation. <u>Terminal coordinates **must not**</u> be used as waypoints</u>. The Vessel operator, Masters, and Watch keeping officers **must** be aware of this requirement and it **must** be reflected in the Vessel's passage plans and operating manuals.

Adverse weather

In all circumstances, the Master has ultimate responsibility to decide whether to set sail or not due to weather, after having discussed the issue with the relevant ALNG personnel.

The vessel operator should have in place adverse weather procedures or checklists.

ALNG has contracted a dedicated weather forecasting service these forecasts are made available to each vessel.

Stability

The Vessel Master is responsible for ensuring that the vessel always has adequate stability and at least complies with the minimum requirements of the international conventions at all stages of the voyage or operations.

The Master has the authority to cease or modify an operation if he or she is of the opinion that it may compromise the stability of the vessel to the extent that the minimum requirements cannot be met.

5.3 Vessel Voyage Log System (VLS)

Introduction

The Vessel Voyage Log System (VLS) is a spreadsheet system that collects diagnostic data and derives essential information to develop performance indicators (PIs); both general performance indicators (GPIs) and key performance indicators (KPIs).

The following is an overview of the VLS capabilities.

Business need

The VLS provides a tool that addresses the need to gather and report PIs derived from the Vessel Manifest and Logs (such as, vessel performance, sailing hours, and operations). The tool provides management a place to store information with core reporting functionality that aids in the allocation of costs, optimization, benchmarking, and continuous improvement for the utilization of marine vessels.

Production and service description

The VLS application provides a repository for performance measures, which must be documented using common PIs to measure, track, control costs, steward performance, and identify improvement opportunities. KPIs can be derived from the Vessel Manifest and Logs (vessel performance, sailing hours, and operation) and are reported to ALNG Management.

5.3.1 VLS Logging Requirements

Introduction

Position activities are used to track general areas of voyage (at sea, Terminal, and so forth) activity.

Vessel work activities are used to track specific areas of voyage activity (LNGC assist, stand-by, and so forth).

Types of activity

The following tables provide examples of vessel activities that must be recorded in the VLS and the respective ALNG stewardship responsibility for each item. Start times, duration, and end times must be recorded. The Marine Specialist has stewardship responsibility for these activities on all marine support vessels including FSIV and CSV.

Reference: *Operations Logistics Manual*, Section 6.2.1, "VLS Logging Requirements" for day by day engagement of FSIV/CSV

Table 5-7 Examples of Activities that Must be Recorded in the VLS

POSITION	ACTIVITY	
At sea	Port / Shore Base (or alternative landing point) to Terminal	
	 Port / Shore Base (or alternative landing point) to Port 	
	 Terminal to Port / Shore Base (or alternative landing point) 	
Terminal, Port, or Shore	Loading in Port / Shore Base (or alternative landing point)	
Base (or alternative	 Discharging in Port / Shore Base (or alternative landing point) 	
landing point)	 Discharging (offloading) at Terminal 	
	Back Loading at Terminal	
Terminal, Port, or Shore	Embarking Personnel at Terminal	
Base (or alternative	Embarking Personnel at Shore Base (or alternative landing point) / Port	
landing point)	Disembarking Personnel at Shore Base (or alternative landing point) / Port	
	Disembarking Personnel at Terminal	
Terminal, Port, or Shore	Standby Anchorage at Shore Base (or alternative landing point) / Port	
Base (or alternative	Waiting to Load/Discharge	
landing point)	Waiting for Paperwork/Orders	
	Waiting on Weather/Seas	
	 Waiting on Terminal to Offload / Back Load 	
	Waiting for Safety Security Reasons	
	Waiting for Customs/Port Clearance	
	Standby Terminal	
	 Vessel Downtime, Maintenance, Equipment Failure 	
	Waiting for Quay Space	
	Waiting for Water Depth / Draft Restrictions	
Terminal, Port, or Shore	Foam Abatement operations	
Base (or alternative	Subsea Inspections	
landing point)	 Diving and Underwater Inspections 	
	 Remotely Operated Vessel (ROV) Operations 	
	Approved Standby Duties	
	Emergency Response	
	 Scheduled Maintenance – On Charter 	
	 Unscheduled Maintenance – Not On Charter 	
	 Ship's Fire and Man Overboard Simulation Drills 	
	 LNGC Handling – Mooring 	
	 LNGC Handling – Unmooring 	
	 Sailing – Base to LNGC 	
	 Sailing – LNGC to Base 	
	 Loading at LNGC 	
	Discharging at LNGC	
	Waiting for LNGC to Arrive for Mooring	
	 Waiting/Standby While LNGC is Offloading LNG 	

5.4 Operations Near the Terminal and in the Safety Zone

General information

The ALNG Terminal is located approximately 10 nautical miles ENE of Porto Levante. The coordinates of the Terminal are:

Latitude 45°05'.30 North; Longitude 012° 35'.10 East

The water depth at the Terminal location is approximately 27 meters; anchoring is not allowed as per Ordinance nr.63/2008 issued by Chioggia Coast Guard

The Terminal is designed to provide a Safe Mooring for LNGc satisfying the size limitations showed in "Terminal Regulations" Booklet

Ref: https://www.adriaticlng.it/en/market-area/services/maritime-services

Safety (exclusion) Zone and Area to be avoided (ATBA)

A 2,000-m (approximately 1.1 nautical miles) radius Safety (exclusion) Zone exists around the Terminal. Ships in transit, anchoring or stopping, fishing and diving activities of any kind or nature, as well as any other activity are strictly prohibited within the Safety Zone.

Any movement within the Safety (exclusion) Zone must be authorized by the Harbor Master Office and the Terminal, except for the movements of vessels serving the Terminal, the Harbor Master vessels, and the Police Force vessels.

An ATBA exists within a 1.5-nautical-mile radius from the Terminal. Access to the ATBA is forbidden to all ships having gross tonnage equal to or greater than 200 tons, with the only exception being ships and vessels involved in LNG unloading, or with any activity associated with the Terminal normal operations, as well as Police Force vessels and Harbor Master vessels, due to their institutional function.

It is compulsory for LNGc to have the Pilot onboard when they sail within the ATBA during mooring and unmooring from the Terminal and during all trading operations.

Reference: Chioggia Cost Guard Ordinance No.63 / 2008

Ref: https://www.adriaticlng.it/en/market-area/services/maritime-services

Anchoring

Except in cases of an real emergency, vessels are required to anchor at dedicated CST Area well far from ATBA in front of Chioggia Harbour (CST designated anchorage area in Chioggia Area approx. at *Lat.* 45°09',50 North; *Long.* 012° 25'.50 East).

Note:

If it is suspected that vessel anchor is foul or dragging, it must be reported immediately to the Marine Specialist. If it is suspected that pipelines or subsea equipment are in danger, the vessels should slip the chain and buoy the anchor for later recovery.

Pipelines

Pipeline routes are normally not protected outside the Controlled Areas.

The Vessel Master should consider chart information and posted notices to mariners regarding pipeline locations prior to consider area "*suitable for anchorage*".

Loss of equipment

Any vessel that loses an anchor, anchor buoys, cargo, or other equipment in a Controlled Area must immediately report the loss to Marine Specialist and report the position of lost equipment as accurately as possible.

The Marine Specialist actively pass information to Coast Guard in Chioggia, OIM, Logistic Superintendent.

Anchoring areas

The areas of interest are well located and shown on the BA Charts number 204 and 1483. Copies of these two charts must be available at:

- Terminal
- Shore Base
- FSIV/CSV
- Tugs

Marine collision avoidance

Industry and stakeholder documents provide guidance on reducing the probability of collisions between Marine vessels and offshore installations, including attending and support vessels. These documents may include:

- Setting Vessel sailing course
- Assessing weather conditions continuously
- Effective installation and Vessel communication
- Terminal data card (e.g. as reference "NWEA Guidelines for the Safe Management of Offshore Supply and Rig Move Operations" Appendix H)
- Safety zone protocol
- Bridge manning requirements
- Marine vessel safety management and Marine assessments
- Vessel crew competency
- Dynamic Positioning procedures

Weather limits for operation

ALNG sets general weather limitations as needed for operating in the Terminal area, such as Terminal or vessel loading or offloading operations, personnel transfer operations, or other marine activities. When developing the criteria the following is considered:

- Offshore crane operational criteria (wind speed and significant wave height)
- Personnel transfer using FROG in respect of OEM limits
- Vessel displacements
- Vessel dynamic position (DP) class

Vessels are advised of these limitations before entering the field.

In setting the safe operating limits the vessel master **must** also take into consideration:

- Awareness of environmental conditions
- Safety of crew

- Nature of the operation
- Time needed to move clear
- Power consumption and thruster output level

Note: For a DP2 or DP3 vessel, the vessel should operate to worst case failure in the given environmental conditions, typically half the propulsion.

The safe operating limits should be governed by risk screening or risk assessment.

In all circumstances the Vessel Master has the ultimate responsibility to decide whether to enter the safety zone and conduct operations or not due to weather or sea conditions and known capability of the vessel.

Time Charter FSIV/CSV must be capable to safely perform activities under Terminal as per vessel characteristics set by ALNG.

i.e. for FSIV Vessel Suited and arranged for offshore operations designed for loading/offloading operations at Terminal in 2mHs, 6-9 second periods and 30knot wind conditions

Approaching the Terminal

At least two hours (*or as otherwise specified in ALNG procedures*) prior to arrival, the Vessel **must** establish communications with the Terminal Control Room to confirm:

- Vessel estimated time or arrival (ETA)
- Terminal readiness to work the Vessel in the most expeditious manner, minimizing time alongside
- Agreement on approach plan and proposed work program between the Terminal and Vessel
- Other activities that may affect the approach or operation

When the vessel arrives at three nautical miles from the Terminal, vessel must contact the Terminal via Channel 8 and request permission to enter the ATBA.

When the vessel arrives at 1.1 nautical miles from the Terminal, vessel must contact the Terminal via Channel 8 and request permission to enter the safety zone.

Prior to entering the safety zone

The vessel operator **must** have in place clear documented procedures for entering the safety zone, including the use of checklists.

These should include:

- Sea and weather conditions evaluated and acceptable for safe operation.
- Safe direction of approach and work location(s) evaluated.
- Bridge and engine room manning.
- Communication established (crane driver, deck foreman).
- Hot work and smoking restrictions in place.
- All maneuvering and steering gear systems tested, including change over between control positions and maneuvering modes.
- Emergency maneuvering tested.
- Auto pilot disengaged.
- Loading/Unloading operations confirmed with Terminal.

- Terminal confirmed readiness for vessel arrival and operation.
- Maneuvering mode during the operation agreed. If DP mode, the DP checklist is to be used in addition (for FSIV/FCSV only).

Reference: Chapter 7.0, "Specialized Vessel Operations"

- On-going or planned (or both) activities within the safety zone confirmed among Terminal, vessel, and emergency response and rescue vessel (ERRV) (if in attendance).
- Permission for entering the safety zone obtained.

Vessels **must** be maneuvered to a set-up position, a minimum of 100 meters from the Terminal, prior to final approach to assess the actual environmental conditions, motion, and behavior of the vessel.

Reference: NWEA Appendix D, "Checklist for Offshore Supply Vessel (OSV) and Installation Operations"

Prior to entering the safety zone all vessels must ensure on board that:

- All mobile phones are switched off.
- Smoking is stopped.
- No equipment is operated unless it is intrinsically safe.
- All personnel are wearing the appropriate personal protective equipment (PPE).

Operations alongside the Terminal

Once the vessel is in position alongside the Terminal the Vessel Master or officer in charge on the bridge **must**:

- Maintain communication with the Terminal. Where communications fail to be maintained the Master may decide to halt operations and depart from the safety zone.
- Maintain visual watch over the cargo deck or deck area being worked with the Terminal and personnel within the work area.
- Continually assess the wind sea and tide conditions and the corresponding behavior of the vessel.
- Monitor relative position of the vessel to the Terminal.
- Halt operations whenever the safety of the operation is in doubt or the engine power required to maintain the vessel in position is nearing the limits set by the Vessel Operator. When safe to do so the vessel should move away to a safe position from the Terminal.

Where there is a break in the operations due to Terminal readiness and waiting time occurs over 20 minutes, the Master should contact the Terminal to agree on schedule and at the Masters discretion the Vessel may move to a safe position outside the safety zone or clear of the of the Terminal.

Helicopter operations

Prior to planned helicopter operations the Terminal **must** inform all vessels within the safety zone and cargo lift transfer operations **must** be suspended.

Working on the weather side

Whenever possible, the support vessel should work on the leeward side of the Terminal. If it is necessary to work on the weather side, an assessment should be conducted between the Terminal and Vessel, considering pipeline risers and potential risk of collision due to loss of vessel control such as engine or power failure or sudden change of weather or sea conditions.

Offshore mooring operations

When conducting offshore mooring or unmooring operations at the Terminal, exposure of the vessel to offshore sea state conditions with a resultant additional movement of the vessel can result in an increased strain or snatch loading of the mooring lines with additional potential for a mooring line to part.

Maximum sea state and wind conditions should be established for each mooring operation and clear procedures should be in place to halt operations and unmoor the vessel where sea states are approaching or at this set criterion.

In all cases where the Vessel Master feels the movement of the vessel or sea state may compromise the safe mooring or safety of the vessel alongside the Terminal or other vessel or location, the Master should halt the operations and depart from Terminal to open sea.

The Job Safety Analysis (JSA) and Toolbox Talk conducted prior to mooring and unmooring operations should identify and address the identified hazards including:

- Mooring line strain and snatch loading
- Loss of vessel heading control
- Location of obstructions on the Terminal or other vessel or location alongside which vessel is being moored
- Approach plan and potential obstructions

5.5 In Port or Shore Base & Alternative landing point Operations

Mooring operations

Linehandler groups, contracted to ALNG, currently provides line handler vessels to assist with LNGc mooring, unmooring, and the transfer of line handlers to the Terminal.

The contractor's Logistics support staff is used, if present, at the Shore Base for the mooring and mooring of the CSV/FSIV.

Crew personnel or onshore personnel **must** not jump between any vessel and the quay to moor or unmoor the vessel.

During all mooring and unmooring operations, safe practice requirements must be followed including:

- Toolbox talk and review of the JSA **must** be conducted with all personnel involved in the operation.
- A sufficient number of personnel must be available on shore quay side under the foreman supervision. The Foreman should be in direct radio contact with the Master on bridge.
- Mooring area should be clear of obstructions, decks should have anti-slip surfaces, and the area
 of operations should be well lit.
- Heaving lines should have no added weighty material.
- Mooring equipment onboard the Terminal should be inspected by the line handlers prior to use with messenger lines and heaving lines. They must guarantee these are in good condition and are regularly inspected.
- Onboard the LNGC mooring equipment is checked prior to use by the Loading Master.
- Mooring layout should be suitable for the expected conditions; mooring plan (prepared in advance by the Marine Specialist) should be discussed during the toolbox talk onboard the Terminal.
- Personnel **must not** stand in the bight of ropes or wires.
- Personnel **must** remain in a position of safety avoiding "snap back" zones when moorings are under strain. Snap back areas should be identified.
- Winch operations should be undertaken by competent personnel to ensure excessive loads do not arise on moorings.
- Mooring ropes should not be secured on the winch drum end.

References:

- Code of Safe Working Practices for Merchant Seamen
- D.L. 271/99 Linee Guida applicazione

Safe means of access

When vessels are alongside the quayside, they must provide a safe means of access to the quay.

Safe practice requirements include:

- Gangway **must** *only be used* if properly maintained, rigged, and secure.
- The gangway access at both shore and vessel ends of the gangway **must** be clear and free from obstruction, oil, and debris.
- Adequate lighting, safety net, lifebuoy with safety line, and light should be in place.

- Personnel crossing the gangway should be wearing the appropriate personal protective equipment (PPE) and have at both hands free to hold the gangway (*e.g. the backpack can be used if properly worn firmly on the shoulders*).
- A gangway watch **must** be in place.
- Crews are aware of specific considerations such as tidal changes or passing vessel traffic.
- Whenever the gangway is disconnected or otherwise not secured, barrier chains or clear stop signs on the vessel and shore should be in place to warn personnel.

Deck or gangway watch

While in port or at the shore base or alternative landing point the vessel **must** maintain an effective deck and gangway watch to:

- Monitor and tend to moorings.
- Monitor and tend to the gangway.
- Provide security watch and recording personnel on and off the vessel per the ship's security plan.
- Provide sufficient fire watch.

5.6 Tank Cleaning and Enclosed Space Entry

Tank cleaning and enclosed space entry operations

ALNG does not allow tank cleaning by personnel entry to a closed space when alongside the Shore Base or alternative owned landing point quay

5.7 Engine Room Operations

Use of PPE

As per Section 4.3, "Personal Protective Equipment (PPE)," the Vessel Contractor **must** stipulate the PPE requirements for each specific work activity or work location, including engine room operations.

Areas requiring use of double hearing protection must be identified and safety signage adequately positioned.

Means of access to firefighting equipment, emergency escape routes, and watertight doors should never be obstructed.

Engine room manning

The vessel operator **must** have a procedure in place detailing the engine room manning requirements during all stages of a voyage, including but not limited to: when under pilotage, within the safety zone, in port or at sea, and so forth.

Unmanned engine room

Many vessels are listed by the vessel Classification Society with a notation of able to operate the engine room unmanned (unmanned space [UMS]) for certain periods of time.

Vessels capable of operating in UMS status **must** have procedures in place describing the conditions for use of UMS as well as roles and responsibilities of vessel personnel while operating in UMS status. Machinery and Engineers' alarm system **must** be tested regularly with results recorded.

Engine room manning within the safety zone

The engine room **must** be manned at all times when the Vessel is within a 500 meter safety zone. Exceptions may apply to smaller vessels where it is impractical to man the engine room throughout the period while operating within a 500-meter safety zone. In this case, a qualified engineer should be alert and immediately available.

Hot work

No hot work is permitted when the vessel is:

- Within the safety (exclusion) zone unless with the express approval and authority of the Offshore Installation Manager (OIM).
- Alongside the Shore Base or alternative landing point owned by ALNG, unless with the approval of Marine Specialist.

Hot work includes (but is not limited to): welding, flame cutting, and grinding. A Permit to Work (PTW) **must** be in place for all hot work activities.

Maintenance and repairs

No planned maintenance or repair activity should be conducted while the vessel is operating within the safety (exclusion) zone unless in an emergency and with the permission of the OIM.

Maintenance and repair periods should be planned or scheduled between the vessel operator and Marine Specialist to avoid or minimize impact to ALNG operations.

For each vessel, the Vessel Operator should identify and document critical alarms, controls, and shutdowns (CACS); critical systems; and machinery and their components. CACS monitor the operation of critical systems, machinery and their components. In some cases, the critical component may be the alarm, control, and shutdown device itself. Critical systems, equipment, and machinery are those considered to be most important to ensure the operational reliability of equipment, the sudden operational failure of which could result in a hazardous situation (to people, property, process, or the environment).

No maintenance work or activity should be started that may affect the integrity of a CACS, critical system, equipment, or machinery without the permission of the Master or Chief Engineer. These systems **must** be fully functional while the vessel is in the safety (exclusion) zone.

Maintenance work or repairs should be carefully planned and where applicable conducted under the vessel PTW system. Prior to commencing work, there should be particular emphasis on energy isolation, prevention of inadvertent or automatic starting of equipment, and breaking containment.

The vessel operator should provide detailed procedures for working on electrical equipment or circuits; such work exposes personnel to potential sources of energy that can result in serious injury or death. Electrical work should only be performed by personnel who are aware of the hazards associated with performing such work and are trained in and familiar with the safety-related work practices, safety procedures, and general safety requirements pertaining to electrical work. Work on medium & high-voltage equipment **must** be conducted by a person who has received specific training related to medium & high voltage equipment or circuits.

Maintenance program and critical equipment

Each vessel should have in place a planned maintenance system (PMS).

The PMS should ensure that the inspection, testing and maintenance of identified CACS, critical systems, machinery, and their components are conducted in accordance with regulatory and classification society requirements as well as the equipment manufacturer's recommendations.

Planned and corrective maintenance and repair activities relating to these components should be documented in the vessel's PMS.

The PMS **must** include programs for regular inspection and testing of life-saving equipment such as, emergency generators, fire protection systems, lifeboats, stand-by arrangements and equipment or technical systems that are not in continuous use.

The vessel operator should document the critical spare parts recommended by the vessel classification society and equipment manufacturers for CACS and critical systems and machinery; if not stored onboard, these critical spare parts must be readily available.

Reference: Chapter 7.0, "Specialized Vessel Operations," for additional requirements for surveys and testing of dynamically positioned (DP) vessels

5.8 Fuel Management

Vessel operator fuel control program

The Vessel Operator should have in place and utilize an auditable Fuel Control Program that, at minimum, ensures:

- All fuel transferred is in accordance with ALNG's specific direction.
- Reconciliation of fuel should be accomplished immediately following each bunkering operation.
- All waste oil should be properly measured and reported to ALNG prior to disposal. ALNG may
 witness the measurement of all waste oil volumes prior to transfer from the Vessel. Waste oil
 volumes should be included on the Standard Reconciliation document.
- Measurement processes and equipment are maintained, calibrated, and executed to a stated standard acceptable to ALNG.
- ALNG may appoint an independent inspector to witness and certify quantities and quality refueling operation (n.b mandatory for FSIV/CSV and A/T Tugs).

Bunkering operations

Each vessel **must** have bunker transfer procedures covering:

- Fuel loading operations
- Internal fuel transfer including day tank transfers
- Fuel transfer offshore to the Terminal or other vessels as applicable

Planning of bunkering operations should include:

- Confirming there is adequate space for the volume of bunkers to be loaded and the maximum filling volume (typically no greater than 95 percent of tank volume)
- Controls for setting of bunker system valves and arrangements for bunker tank ventilation and any internal overflow tank arrangements
- Determining and agreeing loading rates for start of loading, bulk loading, and topping off
- Where fitted, verification of gauging system operation of accuracy and use of manual gauging
- Alarm settings on overfill alarm units or high tank level alarms
- Setting and witness of fuel meter if fitted
- Tank change-over procedure
- Communications with receiving or delivery facility including Emergency Stop and notice period for reducing of transfer rates
- Manning requirements and the varying roles and responsibilities
- Containment arrangements and availability of cleanup equipment
- Use of JSA and toolbox talk prior operation

It is recommended that the vessel and Terminal, or receiving facility/vessel, complete a Bunkering Safety Checklist. The Vessel Operator Checklist may be used if it covers all the relevant content.

References:

• Logistics Operations Manual, Section 6.4.7, "Bulk Transfers"

Fuel sample retention

Fuel samples, if requested by ALNG, **must** be taken during loading operations and maintained for an agreed amount of time. Samples should be sealed and labeled with date and time, product, and location, and detail of sampling point.

When discharging fuel to the Terminal sampling from the vessels manifold is not a practical option. It is, therefore, an acceptable practice to take samples at the Terminal.

Material Safety Data Sheets

A Material Safety Data Sheet (MSDS) for fuel being loaded **must** be provided by the supplier to the vessel prior to bunkering operations. The MSDS **must** be reviewed by the vessel.

5.9 Marine Vessel and Crew Requirements

Introduction

This section covers the qualification requirements and responsibilities of the Vessel Masters and crews.

5.9.1 Vessel Master Responsibilities

Introduction

This section outlines the responsibilities of the Vessel Master as they relate to Shore Base or alternative landing point and offshore operations. Additional responsibilities and authorities are specifically outlined under international maritime law, including the Vessel Master license.

Reference: Section 5.13, "Line Handler Boat Operations," for a guide for Line Boat Coxswains

Safety

In addition to the safety of the crew and vessel, it is the Vessel Master's duty to ensure that all operations are conducted in a safe manner and that good seamanship is always exercised.

The Vessel Master is responsible for ensuring that a Job Safety Analysis (JSA) is performed with involved crewmembers prior to any cargo transfer operation or other significant event. Procedures and routing for JSAs and Toolbox meetings must be described in the vessel's operating manual.

When transporting passengers, the Vessel Master is responsible for the overall safety of the passengers. A safety briefing must be provided to the passengers prior to departure (both from onshore and offshore locations).

IMPORTANT

<u>The Vessel Master must make every effort to prevent his vessel from coming into physical contact with</u> <u>the Terminal except at the designated boat landing areas</u>.

Incident reporting

The Vessel Master must promptly provide notification to the Marine Specialist of any incidents or significant events onboard the vessel.

The Vessel Owner is required to have a Safety Program in place, including a system for preventive reporting of dangerous acts and conditions, and incident investigation and reporting. The Vessel Master is responsible for Safety Program implementation and for continuously encouraging crews to participate in the Safety Program.

ALNG routines

ALNG procedures and instructions do not limit the Vessel Master's obligation to adhere to the International Rules for the Prevention of Collisions at Sea and the obligation to save lives.

General responsibilities

The Vessel Master is at all times responsible for the safety of all personnel onboard the seaworthiness and safe operations of the vessel and ensures:

- The vessel has adequate stability at all stages of any operation.
- The vessel and equipment are fully operational at all times.
- That bridge, engine room, and deck manning levels comply with ALNG standards (including any additional manning requirements when inside the Safety Zone) and International Maritime Organization (IMO) Standards of Training, Certification, and Watch keeping (STCW) requirements, and that all crew receive adequate rest periods.
- The Master takes adequate rest periods and that a competent officer is available to relieve him or her.
- The vessel has sufficient consumables (for example, fuel, lubes, water, stores) to complete the operation without interruption.
- The appropriate ALNG, and other contacts, are advised immediately of any problem or potential problem that may compromise the ability of the vessel to continue or conduct any aspect of the intended operation.
- The appropriate procedures and instructions are followed throughout the activity or operation being performed by the vessel.
- Suggestions or improvements to the operational plan are offered if identified.
- All equipment and attachments are inspected and defects reported.
- Winch counters are functioning, properly calibrated, and periodically confirmed against winch drum layer and wrap charts that should be readily available at all winch control stations.

The Vessel Master's authority is final as it relates to operation of the vessel, including the loading and discharge of cargo or other activities being conducted under the charter or service agreement.

Vessel Voyage Log

The Vessel Master is responsible for continuously updating and maintaining the Vessel Voyage Log System (VLS) as described in Section 5.3, "Vessel Voyage Log System (VLS)."

Material documentation

The Vessel Master ensures that all cargo is accompanied by appropriate documentation such as Cargo Manifests, Material Transfer Requests, Materials Movement, and Hazardous Material Safety Data Sheets (MSDS), and that these documents are provided to the receiving destination during cargo offloading.

Securing cargo

The Vessel Master ensures that all cargo is appropriately secured based upon existing or anticipated sea conditions and weather.

Vessel certificates

Upon request, the Vessel Master must present a Certificate Record to ALNG showing validity, due date, and dispensation (if any) of the vessel's certificates.

The Vessel Master must also declare in writing whether all mandatory surveys and inspections are carried out and whether the vessel has a clean Record of Recommendation from the Maritime Authorities and the Classification Society.

rew list

The Vessel Master is responsible for maintaining an updated crew list (personnel onboard [POB]) for the vessel.

Whenever there are changes to the crew or personnel onboard, the Vessel Master or delegated person inside Owner's Offices must provide the updated list as required in the charter coordination procedures.

Other POB

A passenger list is required for non-crew members.

Vessel handling alongside Terminal or LNG carrier (LNGc)

The Vessel Master must take up station at the Terminal, LNG carriers (LNGCs) or other destination and judge vessel behavior before making a decision whether to start or to continue operations. The OIM or delegate must be informed of the Vessel Master's decision.

Prior to starting operations alongside the Terminal or LNGc, the Vessel Master on dynamic positioning (DP) classed vessels must consider if use of the DP system is appropriate for the type of operation to be performed.

Reference: Chapter 7,0, "Specialized Vessel Operations"

The Vessel Master must immediately advise the Terminal or LNGc of any factor that affects the maneuverability, reliability, or cargo handling of the vessel in marginal weather conditions.

Note: During cargo handling materials transfers or personnel transfers using the Frog (personnel transfer basket) at the Terminal, it is recommended that the Vessel Master maintain a minimum distance of 10 meters (m) from the Terminal structure.

If weather conditions permit, and on approval of the Vessel Master and Terminal, the CSV may lay alongside a boat landing to effect transfer of personnel.

LNGC berthing and unberthing operations

When engaged in LNGc berthing or unberthing support or other LNGc support operations, the Tug Master is to be directed by the LNGc Pilot or Master on operational requirements.

The Tug Master, however, remains responsible for his or her vessel and towing equipment, and for ensuring that the operations can be conducted or continued safely, and that proper precautions are being taken for the safety of the vessel, Terminal, and third party personnel.

The Tug Master must immediately advise the LNGC Master or Pilot if he or she is unable to comply with their directions.

The Tug Master or Vessel Owner also advises ALNG of such fact and the associated reason is entered in the Vessel Log Book.

LNGC line handling operations

When engaged in LNGc support operations, the line boat coxswains are directed by the LNGC Pilot or Master on operational requirements.

The line boat coxswain, however, remains responsible for his or her vessel and line handling equipment, and ensures that the operations can be conducted or continued safely, and that proper precautions are being taken for the safety of the vessel, Terminal, and third-party personnel.

The coxswain must immediately advise the LNGC Master or Pilot if he or she is unable to comply with their directions.

The coxswain also advises ALNG of such fact and the reason is entered in the vessel log book.

Emergency response operations

All chartered Vessel Masters must be familiar with the vessel emergency response plans and ensure that vessel crews are trained and practiced in emergency scenario events, including use of emergency and lifesaving equipment.

In addition, the Vessel Master is provided with a copy of the *Terminal/Pipeline Emergency Response Plan (Chapter 7)* for which he or she must be familiar and the specific roles of the vessels in emergency situations.

5.9.2 Vessel Crew Competency Requirements

Introduction

This section describes minimum training requirements for marine vessel crews on vessels under direct charter to ALNG.

Responsibilities

- **Vessel Owner or Marine Contractor**: Administers training programs for each position on the vessel and maintains training and competency documentation on the vessel as well as onshore.
- **Vessel Master**: Ensures that all crewmembers are in compliance with all training and competency criteria.

Requirements

As determined by position or role, personnel should demonstrate competency and, if required, are licensed by an appropriate authority prior to assuming their duties. Training, monitoring, and proficiency programs must be in place to ensure compliance with the following:

- Contractor (Ship Owner) policies and procedures ALNG and contractor:
 - Operational procedures
 - Safety policies
- Licenses, certifications, and endorsements:
 - o Navigation and area pilotage exemptions
 - o Fuel transfers
 - o Engineering
 - o Global Maritime Distress and Safety System (GMDSS)
 - o Bridge resource management
 - Dynamic positioning

- International Standards of Training, Certification, and Watch keeping (STCW) and International Convention for the Safety of Life at Sea (SOLAS):
 - Job orientation
 - Personal hygiene
 - Lifesaving and swimming
 - Firefighting
 - o First aid
 - Medical care
- Safety and International Safety Management (ISM) code or operator Safety Management System (SMS):
 - Basic and advanced safety training
 - Job Safety Analysis (JSA)
 - Familiarity with ISM code requirements
 - Familiarity with operator SMS
- Support and project operations:
 - Personnel transport and transfers including Frog operations
 - Dive support and remotely operated vessels (ROVs) operation
 - Oil spill and emergency response
 - Sea fastening and slinging

5.9.3 Ship's Crew / Personnel Onboard (POB) Lists

Introduction

This section describes the procedures for tracking as well as managing changes to marine vessel crew lists.

Responsibilities

- Marine Specialist: Maintains archives and current information related to all marine vessel personnel onboard (POB) lists.
- **Vessel Master**: Ensures that complete and accurate POB information is provided to the Marine Specialist or designee in a timely fashion.

Chartered or service vessels crew (POB list)

A POB list is provided to the Marine Specialist for each crew shift on board. Any changes to the POB list must be provided to the Marine Specialist as soon as practical. The Marine Specialist is responsible for forwarding the list to the Terminal if requested.

The POB list should include the following information:

- Name
- Position or rank
- Date of birth
- Passport number or Seaman's Book ID number

Project vessel POB list

For marine vessels not directly chartered and stewarded by ALNG (such as installation, commissioning, and specific project vessels), a POB list update should be provided daily to the Marine Specialist.

Crew change

Prior to every crew change, a crew list must be sent to the Marine Specialist or delegate as instructed.

5.10 Emergency Standby and Rescue Operations

Introduction

A vessel may on occasion be directed to provide emergency response duties or limited standby duties, for example if the Terminal is conducting over-the-side maintenance or inspection activities.

Standby duties are provided by the tugs when there is an LNGc at the Terminal. They provide assistance in case of an unplanned departure of the LNGC, as well as additional safety and security support during LNGc offloading operations.

The FSIV/CSV may also provide limited standby operations.

Emergency call out

In the event of an emergency at the Terminal, the OIM may call out the Fast Support Intervention Vessel/ Crew Supply Vessel or tugs to assist with the emergency response.

The vessel master on being called out in an emergency makes best efforts to have the vessel ready and available as requested without compromise of safety to the vessel or crew.

General duty requirements

The duties of a standby vessel are defined as follows (minimum requirements):

- In case of an emergency:
 - Rescue people from the sea, rafts, or lifeboats.
 - Accommodate people evacuated from the Terminal.
 - Register rescued and injured people.
 - Perform first aid (where possible and when requested).
 - Nurse the rescued people.
 - Function as a temporary On-Scene Commander (OSC) and as a temporary communications and coordination center during rescue operations.
 - Light the rescue area around the vessel.
 - Act as a guard vessel in the safety zone around the Terminal.
- The vessel must at all times have adequate crew resources and must maintain rescue equipment for immediate deployment as appropriate for the emergency scenarios.

ALNG duty requirements

In addition, ALNG may require the following services of the vessel:

- Surveillance, monitoring, and communication with personnel working over open water on scaffolding, jacket structures, or close to the sea
- Surveillance of navigation lights, buoys, and associated equipment connected to the field
- Surveillance of all marine activity in the area, especially if approaching the safety zone and pipeline routing areas and reporting (if any) to the Marine Specialist
- Reporting all incidents including infringement of the safety zone and towing or pushing drifting objects close to the Terminal
- Assistance with firefighting if so equipped
- Assistance in LNGC operations
- Winching operations from a helicopter
- All others included into SOW specific for the considered vessel

Temporary storage of cargo on the standby vessel deck

Cargo storage on the deck of the vessel when in stand-by operations is generally not advisable due to the many different tasks anticipated where a clean deck is mandatory. Should the OIM and the Vessel Master agree upon temporary stowage on the vessel's deck, ample time must be considered for the back loading onto the Terminal when a clean deck is needed.

IMPORTANT

The rescue zone must be kept free of deck cargo and other obstacles at all times.

Receiving evacuees

The Vessel Owner must include procedures for receiving, tallying, and handling evacuees or rescued personnel (or both) in the vessel Operations Manual.

Note: This requirement should be included in the coordination procedures section of the Charter Party for the standby vessel.

5.11 Vessel Crew Change

Introduction

This section applies to FSIV/CSV vessels and A/T Tugs.

Vessel crew change intervals

The FSIV/CSV and tug vessels chartered to ALNG should change crews on a pre established frequency.

The crew change for each vessel must be planned and performed in such a way that it does not impact the operations.

Vessel crew change plan

A scheduled crew change plan for the FSIV/CSV and A/T tug vessels must be developed by the vessel contractor and must be forwarded to Marine Specialist.

Crew change location

Vessel crew changes should be scheduled to match regular port arrivals.

Vessel crew changes while at sea are not permitted except in exceptional circumstances and when they are approved by Marine Specialist (he will inform OIM if will be carried within ATBA or Safety Zone).

Boat-to-boat personnel transfers must take place well outside the Terminal ATBA and Safety Zone.

5.12 Tug Vessel Operations

Introduction

This section describes the actions and routines that apply to the chartered tugs engaged in LNGc berthing and unberthing support operations and other support roles requested by ALNG.

Chartered tugs provide the following support activities as and when required:

- Search and rescue (SAR)
- Facility guard duties including monitoring of other marine traffic and intervention to avoid collision with the Terminal or LNGC
- Standby duties when LNGc is discharging
- Firefighting
- Personnel transport and transfer
- LNGc berthing and unberthing support
- Other support and surveillance tasks

References:

- Terminal Regulations Booklet
- Terminal/Pipeline Emergency Response Plan
- Shore Base Emergency Response Plan

Responsibilities

- **Tug Vessel Master**: Ensures compliance with all field specific procedures and regulatory requirements related to marine vessel operations offshore.
- Marine Specialist: Develops, modifies, and implements marine operating procedures, and ensures that the procedures are documented and provided to the Vessel Master. Provides due diligence oversight and contractor performance monitoring in line with "Onsite Annual Schedule Plan" designed for this specific Contractor; when act as *Loading Master*: Provides point of contact and on-sight guidance as required when vessels are in the Terminal area.
- **Offshore Installation Manager (OIM)**: Provides overall guidance to vessels at or near the Terminal and acts as the On-scene Commander in all offshore emergency events affecting the Terminal operation.
- Control Room Operator (CRO) (or appropriate position responsible for communications): Provides day-to-day communication and direction to the vessels while in the field.

Note: The Offshore Logistics Services Foreman (OLSF) performs this communication function with the FSIV/FCSV.

- Pilot: Acts as advisor to the LNGc Master in all LNGc berthing and unberthing operations. Responsible for communicating and directing tugs and line handlers vessels during LNGc berthing and unberthing operations. The Pilot should remain on board the LNGc until the operation has been completed.
- **LNGc Master**: Responsible for the safety, navigation, and maneuvering of the LNGC, including berthing and unberthing operations at the ALNG Terminal, and all regulatory requirements related to the LNGc.
- **LNGc Agent**: Responsible for the booking of the tug service on behalf of the LNGc owner or Charterers and coordination of tug schedules so as to berth LNGc without delays.

5.12.1 Tug Vessel Departure Procedures

Introduction

This section describes activities that must be accomplished prior to departure from the port.

Schedule and callout notification

During normal operations approximately two LNGc shipments per week are expected at the Terminal.

The Tug Vessel Owner is provided with the following notifications for deployment of the tugs to assist with LNGc berthing operations:

- 48 hours prior to LNGc arrival
- 24 hours prior to LNGc arrival
- 6 hours prior to LNGc arrival

Notifications are made by the LNGc Agent, directly to the Tug service provider

The Marine Specialist (or Logistic Superintendent) provides updates outside normal office hours.

All notifications by telephone or (VHF) voice contact must be backed up with e-mail or fax.

On appointment of the Ships Agent by the LNGc Owner or Charterers, the Marine Specialist or designate advises the Tug Operator the following:

- Agent details
- LNGc name

When not engaged in LNGc Support activities at the Terminal area, the tugs are located primarily at the Chioggia Tug Base or, following a formal communication to Marine Specialist, at the Tug Home Base at Venice when engaged in regular maintenance or refueling activities.

The Terminal may call on the tugs at other times, when there is no LNGc at the Terminal, to provide support activities mentioned into Introduction or for emergency support activities.

Note: For sake of clarity, in case of an emergency, the tugs need at least one to two hours to reach the Terminal depending on their current mooring location, Venice or Chioggia.

Communication

The following table lists the primary contact details for contacting the tug operator and tug vessel callouts.

Reference: Section 5.1, "Communications," for all site communication channels and procedures.

ADRIATIC TOWAGE	OFFICE
Telephone (office)	+39 041 458 59 89
Telephone (mobile)	+ 39 335 100 05 77
E-mail	e.banchieri@adriatictowage.it
Fax	+ 39 041 458 60 05
Tugs VHF	Ch 8/16

LNGc rendezvous (RV) position

The tugs rendezvous with the LNGc at the designated Pilot Boarding Area unless otherwise advised by the Pilot.

The tugs are available at all times to assist with the operations during the arrival, offloading, and departure process of the LNGc.



IMPORTANT

With the implementation of the activation of gates of the protection system of the Venetian lagoon from high tide water known by the technical name of "MOSE", it is the responsibility of the Tugboat Operator to ascertain the activation time of the same and to arrange in advance that the four tugs go to the open sea in compliance with the ETA given by the ship arriving at the Terminal

Vessel stability

The Vessel Master is responsible for the stability and seaworthiness of the tug. The Vessel Master or delegate at all times ensures that changes in the deck and bulk loads are considered in stability updates and must ensure that any equipment on deck is secure.

Departure from the Chioggia Base

At departure from Port, the Vessel Master ensures that the following tasks are completed:

TASK	ACTION
1.	Within 24 hours of expected departure, completes all Operator equipment checks including towing equipment, engines, propulsion systems, and so forth.
	Communicate promptly to Marine Specialist in case of issues which can not permit availability of one of Chartered Tugs
2.	Follow the communication protocols established by Chioggia / Venice Coast Guard for exit the port area
3.	Advises the Pilot on departing and ETA at the rendezvous (RV) point.
4.	Communicate to Terminal CCR when Tugs are at three miles distance (<i>if not engaged already in berthing operations</i>)



IMPORTANT

With the implementation of the activation of gates of the protection system of the Venetian lagoon from high tide water known by the technical name of "MOSE", it is the responsibility of the Tugboat Operator to ascertain the activation time of the same and to arrange in advance that the four tugs go to the open sea in compliance with the ETA given by the ship arriving at the Terminal.

5.12.2 Tug En Route and Arrival Procedures

Introduction

This section describes activities that must be accomplished during the voyage, as well as destination arrival activities.

Position reports

On clearing port breakwaters and every 30 minutes while en route, the Vessel Master reports to the Terminal and Pilot the vessel's position, speed, heading, and ETA at the RV destination. Any unusual events or anomalies must also be communicated.

Manning of vessel bridge

The vessel bridge is manned at all times in accordance with the operator's approved manning levels.

En route

The agent informs the tugs regarding the arrival time of the LNGc. At least 30 minutes prior to arrival of the LNGc, all required vessels (e.g. tugs and pilot) are ready on site.

When given specific instructions to report while en route, while sheltering, or while otherwise waiting on weather, vessels must listen continuously to VHF

Transit speed

Vessels are to transit at economic speed both outbound and inbound, and between destinations, unless otherwise instructed by the Marine Specialist, Pilot or Terminal, and consistent with safety.

Approaching the RV point

Follow the steps below when approaching the RV point.

TASK	ACTION
1.	The Vessel Master ensures that the autopilot Way Point is set to a minimum of 3 NM off the Terminal
	ready to enter into ATBA.
	The Terminal must never be used as a Way Point.
2.	Function test all critical systems, including all machinery and control systems onboard that relate to
	performing the LNGc berthing support operations (such as maneuvering controls, winch, and
	firefighting systems). Results of the function test are recorded in the Vessel Log.
3.	Function test all communication equipment on board, including the approved and assigned VHF
	channels.
4.	Inform the Pilot and Terminal of arrival.

LNGc berthing and unberthing operations

The Tug Master must be guided by the LNGc Master and Pilot regarding the LNGc berthing and unberthing procedures and positioning of tugs to support these operations.

5.12.3 Tug Offshore Site Departure Procedures

Introduction

This section describes activities that must be accomplished prior to departure from the Terminal site after departure of the LNGc.

Vessel Master tasks

Following the unberthing of the LNGc and release of the tugs by the Pilot and Terminal, the Vessel Master must perform the following tasks.

TASK	ACTION
1.	Proceed to Chioggia or Venice and when the vessel arrives at three nautical miles from the Terminal,
	advise the Terminal that the vessel is outside the ATBA.
2.	Advise Chioggia Coast Guard that tug is outside the ATBA.

Note: Tug Operator grant always to ALNG that a minimum amount of fuel is kept on board with regards to emergency call outs and firefighting (FiFi) duties to be performed.

5.12.4 Tug Standby Operations during LNGc Offloading Operations

Introduction

The following sections describe the role and responsibilities of the tugs when on standby during the LNGC offloading operations and while engaged in monitoring marine traffic near the Terminal.

Duties include:

- Marine traffic surveillance and monitoring
- Safety standby when LNGc is discharging
- Firefighting
- Search and rescue

During LNGc offloading operation all tugs are to remain offshore to provide emergency support and readiness in case of an unplanned departure of the LNGc.

The tugs are located and at a state of readiness as follows:

 <u>Two tugs</u> are to remain in close proximity to the LNGc to provide immediate response capabilities within <u>10 minutes</u> of notification. <u>One tug</u> maneuvers and retains position to the north of the Terminal and also provides marine traffic surveillance and monitoring activities.

If necessary, the OIM or LNGc Master may place the tugs on a heightened state of readiness. In such instances, consideration should be given to the 24-hour required rest period.

Responsibilities

• **Tug Vessel Master**: Monitors the position of all vessels entering the safety zone, at the direction of the OIM. The Tug Vessel Master may only monitor and warn intruders and inform the OIM of unauthorized intrusions.

🔨 IMPORTANT

The Tug Vessel must not stop or impose any type of restriction to boats or vessels entering the safety zone unless requested by the boats or vessels in question and safe to do so.

 Offshore Installation Manager (OIM) (or delegate): Ensures safety zone integrity. Authorization for entry into the safety zone must be approved by the OIM. Informs authorities of unauthorized vessel entries and calls for authority assistance as required and as circumstances dictate.

Vessels entering the safety zone

While the tug is on standby duty, it should plot all vessels entering the safety zone until they exit. If the course of the unidentified approaching vessel brings that vessel inside the safety zone, the following steps must be taken by the tug.


TASK	ACTION
1.	Advise the Terminal of the approaching vessel's position, speed, and heading. Remain in continuous
	contact with the Terminal and provide updates.
2.	Contact the vessel entering the safety zone and request that the Vessel Master set a course that
	brings it well clear of the safety zone.
3.	If no contact is obtained when the vessel is 2 NM from the Terminal, advise the OIM.
4.	With the OIM's approval, proceed to a position that is closer to the approaching intruding vessel.
5.	Continue to monitor and contact the intruding vessel by use of VHF, horn, whistle, or light signals, as
	required.

Safety zone monitoring

The ATBA and Safety Zone are included in a larger area around the Terminal having circumference of 12 NM which must be continuously monitored by radar. This is the recommended distance to ensure time to intervene or assist in case a vessel has engine breakdown and starts to drift towards the Terminal.

The radar on the Tug's bridge must have the guard zone marker set on 12 NM on the radar screen.

Safety Zone Monitoring

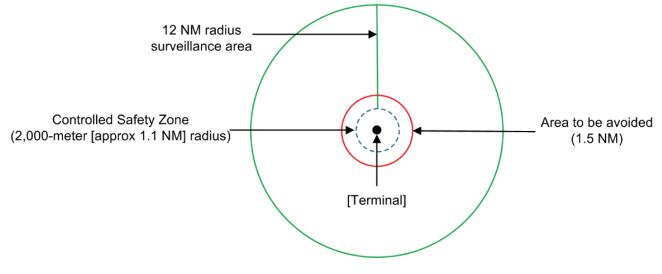

Tug position

Under normal circumstances, the Primary Tugs engaged in standby duties are positioned on the offshore side of the LNGc (that is to the north of the Terminal).

The Vessel Master should best position the tug such that the loss of its propulsion or steering does not cause it to endanger the Terminal or LNGc while still maintaining a clear view of the Terminal.

5.12.5 Firefighting

Introduction

This section describes the role and responsibilities of the tug vessels as they relate to firefighting (FiFi) when requested to respond to marine vessel or offshore facility fires.

FiFi classification

The Adriatic Towage Tugs are Classified as FiFi1 (Fire Fighting Class 1)

Notation of FiFi 1:

The class notation FiFi I means that the vessel is equipped at a minimum with 2 fire monitors able to throw water to a minimum distance of 120 m from the vessel and to a minimum height of 45 m. The monitors are remote controlled from the wheelhouse. Since the fire pumps and related equipment are located in the engine room, they are also normally remote controlled. FiFi I Systems are normally installed on escort tugs, firefighting vessels, and so forth.

Characteristic of A/T Tugs in service:

Fifi water/foam mo	nitors 2 x FFS 1200/300 m ³ /hr
Fifi pumps	2 x FFS type SFP 250x350 1350 m ³ /hr
Water spary	curtain type, approximately
	300m ³ /h via FFS APR150

Guidance

The OIM is the initial On-scene Commander in the event of a fire affecting the Terminal. The OIM directs the actions of the tug vessels. Offshore facility personnel trained in firefighting may be directed to assist the vessel crews.

The use of fire monitors from a tug vessel and directed towards the Terminal must be initiated by the OIM and only after Terminal personnel are evacuated or located in a safe haven.

The Vessel Master must never initiate spraying with fire monitors unless the OIM gives a direct order to do so.

Should a fire break out on the LNGc, the tugs immediately respond as directed by the LNGc Master and OIM. Their primary role is not to fight the fire but to use their fire nozzles with a diffused spray pattern to absorb as much heat as possible so that the tug's crew can assist in the rescue of personnel who may choose to abandon the LNGc on the offshore side, as directed by the LNGc Master, OIM, or marine authorities.

References:

- Terminal Regulations Booklet
- o Terminal/Pipeline Emergency Response Plan

Response timing

The tugs must maintain their firefighting systems and ensure that the systems are ready for use at all times when at the Terminal.

If requested by Coast Guard to respond to a fire or emergency at other locations or vessels that are not part of the normal standby area while at Terminal, the OIM must approve such response and departure from the area jointly with Company Operator after having informed Marine Specialist & Logistic Superintendent.

Testing

The complete vessel fire monitoring system must be tested by the tugs prior to arrival at the RV position for all LNGc berthing operations, and the results must be recorded and maintained in the vessel files. Any defects must be reported to the OIM and Marine Specialist.

If not operational, the Vessel Master promptly repairs the system and reports its return to service to the OIM and Marine Specialist.

5.12.6 Training and Exercises

Introduction

This section describes tug vessel training activities and timing.

Responsibilities

- **Tug Vessel Master**: Ensures that all training program is accomplished in accordance with Company Operators program
- **Tug Vessel Owner**: Must provide all applicable support to the Vessel Master to maintain the qualifications and competencies of the vessel crew to ensure safe and efficient marine operations.

Training and exercise activities

In addition to systems and equipment functional tests, each tug vessel must perform training and exercises in the key emergency response activities to keep the crew's competence and preparedness at a high level in alignement of Marine Specialist.

At the Vessel Master's discretion, weekly training must be performed on emergency response topics.

Hands-on training should take place in calm weather to avoid exposing the vessel crew to unnecessary hazards.

An activity schedule must be prepared, and a log of the activities with the day, date, and time of the activity must be kept and maintained by the Vessel Master.

The following emergency exercises should be part of the scheduled training program:

- Firefighting (own vessel)
- Firefighting (external)
- Search and rescue
- Emergency towing
- Man overboard (own vessel and from Terminal)
- Abandon ship drill
- Oil spill drill (own vessel)
- Collision drill (own vessel)

Coordinated exercises

In addition, drills are held at frequent intervals between the Terminal and the Tugs. Coordinated exercises, with the involvement of the Marine Specialist and OIM, should take place in favorable weather conditions to avoid exposing the crew to unnecessary hazards.

The exercises are based on the different risk situations and are used to test both the vessel and the *Terminal/Pipeline Emergency Response Plan*.

Reporting

A monthly report comprising training statistics must be delivered to ALNG.

Attendance

The tugs must not leave the Terminal area without permission from the OIM and LNGc Master while the LNGc is present.

Line of command

When assisting the LNGc, the tug vessel receives its orders directly from the Pilot, Marine Specialist or LNGc Master.

5.13 Line Handler Boat Operations

Introduction

This section describes the actions and routines that apply to the contracted line handlers boat service engaged in LNGc berthing and unberthing support operations and other support roles when working for ALNG.

Vessel roles are to provide LNGc mooring line handling support activities as and when required.

References:

- Terminal Regulations Booklet
- Terminal/Pipeline Emergency Response Plan

Responsibilities

- Line Boat Coxswain: Ensures compliance with all field specific procedures and regulatory requirements related to marine vessel operations offshore.
- Marine Specialist: Develops, modifies, and implements marine operating procedures and ensures that the procedures are documented and provided to the Coxswain. Provides due diligence oversight and contractor performance monitoring in line with "Onsite Annual Schedule Plan" designed for this specific Contractor; when performing Loading Master role they provides point of contact and on-sight guidance as required when vessels are in the Terminal area.
- **Offshore Installation Manager (OIM)**: Provides overall guidance to vessels at or near the Terminal and acts as the On-scene Commander for all offshore emergency events affecting the Terminal operation.
- **Control Room Operator (CRO)**: Provides day-to-day communication and direction to the vessel while in the field.
- **Pilot**: Acts as advisor to the LNGc Master in all LNGc berthing and unberthing operations. Responsible for communicating and directing line handling vessels during LNGc berthing and unberthing operations.
- **LNGc Master**: Responsible for the safety, navigation, and maneuvering of the LNGc, including berthing and unberthing operations at the ALNG Terminal, and all regulatory requirements related to the LNGc.
- **LNGC Agent**: Responsible for the booking of the service on behalf of the LNGc owner or Charterers and coordination of line handling schedules so as to berth LNGc without delays.

5.13.1 Line Handler Boat Departure Procedures

Introduction

This section describes activities that must be accomplished prior to departure from the port.

Schedule and callout notification

During normal operations there are approximately two LNGc shipments per week at the Terminal.

Notifications are made by the LNGC Agent, directly to the line handling service provider.

The Marine Specialist (or Logistic Superintendent) provides updates outside normal office hours.

All notifications by telephone or VHF voice contact must be backed up with e-mail or fax.

On appointment of the Ships Agent by the LNGC Owner of Charterers, the Marine Specialist or designate advises the Line Handling contractor of the following:

- Agent details
- LNGC name
- Mooring Plan

When not engaged in LNGc support activities at the Terminal area the line boats are primarily located at Chioggia and Venice.

Communication

The following table lists the primary contact details for scheduling and notification of line handler callouts.

Reference: Section 5.1, "Communications," for all site communication channels and procedures

CHIOGGIA LINE HANDLERS	OFFICE
Telephone (mobile)	+39 041 5506662
E-mail	ormeggichioggia@gmail.com
Fax	Fax. +39 041 5506089
Line Handler Boats Operator VHF	VHF 11 or 14

LNGC rendezvous (RV) position

The line handler boats rendezvous with the LNGC at the Terminal unless otherwise advised by the Pilot.

The line handler boat Coxswain must time their departure to arrive at least 30 minutes prior to ETA of the LNGc at the Terminal.

Vessel stability

The Coxswain is responsible for the seaworthiness of the vessel.

Documentation

The following documentation transfers are coordinated between the Line Handler office, the Marine Specialist, and the Terminal.

DOCUMENT	ORIGINATOR	VESSEL MASTER	TERMINAL	MARINE SPECIALIST
Terminal Visitor Form	Line Handler Boat	Сору	Сору	Original
	Operator			
Personnel Onboard	Line boat operator	Original	Сору	Сору
(POB) List				

Departure from Chioggia/ Venice base

At departure, the Coxswain ensures that the following tasks are completed:

TASK	ACTION
1.	No less than 24 hours before expected departure advises Marine Specialist & Logistic Superintendent of the following:
	 Names of the line handling boat crews for mooring and unmooring operations
	Names of the line handlers transferring to the Terminal
	Names of the line handlers staying on the Terminal during the LNGc off loading operation
	The Marine Specialist or Logistic Superintendent or his designate advises the Terminal accordingly.
2.	Within 24 hours of expected departure, completes all Operator equipment checks including engines, and propulsion systems.
	Communicate promptly to Marine Specialist in case of issues which can not permit availability of one L/H dedicated boats
3.	Follow the communication protocols established by Chioggia / Venice Coast Guard for exit the port area
4.	Completes all Operator pre-departure safety and equipment checks.
5.	Advises the Pilot on departing and ETA at the rendezvous (RV) point.
6.	Communicate to Terminal CCR when L/H Boats are at three miles distance

\triangle

IMPORTANT

With the implementation of the activation of gates of the protection system of the Venetian lagoon from high tide water known by the technical name of "MOSE", it is the responsibility of the Tugboat Operator to ascertain the activation time of the same and to arrange in advance that the four tugs go to the open sea in compliance with the ETA given by the ship arriving at the Terminal.

5.13.2 En Route and Arrival Procedures

Introduction

This section describes activities that must be accomplished during the voyage, as well as destination arrival activities.

Position reports

Every 30 minutes while en route, the Coxswain reports to the Terminal and Pilot the vessel's position, speed, heading, and ETA at the RV destination or at Terminal. Any unusual events or anomalies must also be communicated.

En route

The agent informs the line handler boats regarding the arrival time of the LNGc. At least 30 minutes prior to arrival of the LNGc, all required L/H vessels are ready on site.

When given specific instructions to report while en route, while sheltering, or while otherwise waiting on weather, vessels must listen continuously to VHF

Transit speed

Vessels are to transit at a safe speed both outbound and inbound.

Approaching the RV point

Follow the steps below when approaching the RV point.

TASK	ACTION
1.	The Vessel Master ensures that the autopilot Way Point is set to a minimum of 3 NM off the Terminal.
	The Terminal must never be used as a Way Point.
2.	Function test all critical systems including all machinery and control systems on board that relate to performing the LNGc berthing support operations (maneuvering controls, winch, firefighting
	systems, and so forth). Results of the function test are recorded in the Vessel Log.
3.	Function test all communication equipment on board, including the approved and assigned VHF channels.
4.	Inform the Pilot and Terminal of arrival and readiness.

LNGC berthing and unberthing operations

The Coxswain must be guided by the LNGc Master and Pilot regarding the LNGc berthing and unberthing procedure and sequence of handling lines.

5.13.3 Offshore Site Departure Procedures

Introduction

This section describes activities that must be accomplished prior to departure from the Terminal site.

Vessel Master tasks

When the line handling operations are completed and the vessel is released by the Pilot and Terminal, the Coxswain must perform the following tasks.

TASK	ACTION
1.	Notify the Terminal Control Room Operator about the intentions to depart the Terminal.
2.	Revise and communicate the estimated time of arrival (ETA) at the port location to the Control Room
	Operator and Pilot.
3.	Advise Chioggia Coast Guard of the ETA at Chioggia, as required.

5.13.4 Transfer of Line Handling Crew to and from the Terminal

Introduction

During LNGc mooring operations, four line handling crew transfer to the Terminal to conduct line handling operations at the Terminal.

On completion of mooring operations, two line handlers remain on the Terminal to attend the end of LNGc discharge and complete unmooring operations and to provide line handling support if a line breaks occurs or if there is an unplanned departure of the LNGC.

The other two line handlers depart the Terminal upon completion of LNGC mooring operations.

Transfer of line crews to and from the Terminal

Twenty-four hours prior to expected LNGc berthing operations, Terminal, Pilot, and Marine Specialist (or Logistic Superintendent) review the weather forecast and decide upon the most suitable means of transfer of the line handling crews to and from the Terminal by one of the following methods:

- Transfer directly by line boat to the Terminal using the boat landing areas or Frog
- Transfer by FSIV/CSV
- Transfer by tug

Line handling crews being transferred by the FSIV/CSV departing from the Shore Base or alternative landing point.

Boat to boat transfer of line handling or other personnel should be limited at all times due to the risk of vessels coming alongside each other and people trying to jump from one vessel to another.

5.14 Pilot Boat

Introduction

This section describes the actions and routines that apply to the contracted Pilotage service in Chioggia engaged in LNGc berthing and unberthing support operations.

Vessel roles are to provide Chioggia Pilot transfer operations support activities as and when required.

References:

- Terminal Regulations Booklet
- Terminal/Pipeline Emergency Response Plan

Responsibilities

- Marine Specialist: Provides due diligence oversight and contractor performance monitoring in line with "Onsite Annual Schedule Plan" designed for this specific Contractor.
- **Loading Master**: Provides point of contact and on-sight guidance as required when vessels are in the Terminal area.
- **Offshore Installation Manager (OIM)**: Provides overall guidance to vessels at or near the Terminal and acts as the On-scene Commander for all offshore emergency events affecting the Terminal operation.
- **Control Room Operator (CRO)**: Provides day to day communication and direction to the vessel while in the field.
- **Pilot**: Acts as advisor to the LNGc Master in all LNGc berthing and unberthing operations. Responsible for communicating and directing line handling vessels during LNGc berthing and unberthing operations.
- **LNGC Master**: Responsible for the safety, navigation, and maneuvering of the LNGc including berthing and unberthing operations at the Terminal and all regulatory requirements related to the vessel.
- **LNGC Agent**: Responsible for the booking of the service on behalf of the LNGc owner or Charterers and coordination of Pilot schedules so as to berth LNGc without delays.

5.14.1 Pilot Boat Departure Procedures

Introduction

This section describes activities that must be accomplished prior to departure from the port.

Schedule and callout notification

During normal operations there are approximately two LNGc shipments per week at the Terminal.

Notifications are made by the LNGc Agent, directly to the Pilot service provider

The Marine Specialist (or Logistic Superintendent) provides updates outside normal office hours.

All notifications by telephone or VHF voice contact must be backed up with e-mail or fax.

On appointment of the Ships Agent by the LNGc Owner of Charterers, the Marine Specialist or designate advises the Pilotage service of the following:

Marine Operations Manual - Marine Operations

- Agent details
- LNGC name
- LNGC details (length, beam, draft, freeboard, and displacement)
- Copy of mooring plan

Communication

The following table lists the primary contact details for scheduling and notification of line handler callouts.

Reference: Section 5.1, "Communications" for all site communication channels and procedures.

CHIOGGIA PILOT	OFFICE
Telephone (mobile)	+39 393 9070939
Telephone (Office)	+39.041.5506661
E-mail	info@pilotichioggia.com
Fax	+39.041.5506442
Pilot VHF	VHF 14 or 11

LNGC rendezvous (RV) position

The Pilot boat rendezvous with the LNGc at the designated pilot boarding area, unless otherwise agreed with LNGc Master and Agent.

Pilot boat stability

The Pilot boat Coxswain is responsible for the seaworthiness of the vessel.

Departure from Chioggia base

At departure, the Pilot boat Coxswain ensures that the following tasks are completed:

TASK	ACTION
1.	No less than 24 hours before expected departure advises Marine Specialist of the names of the
	Pilot performing the service.
2.	Within 24 hours of expected departure, completes all Operator equipment checks including
	engines and propulsion systems.
3.	Follow the communication protocols established by Chioggia Coast Guard for exit the port area
4.	Completes all Operator pre-departure safety and equipment checks.
5.	Confirms with the LNGc, there is no change in ETA.
6.	Advises the LNGC and Terminal on departing from shore and ETA at the RV point

/ IMPORTANT

Any available vessel, depending on circumstances, may be used for man overboard rescue or to provide assistance in other emergency situations With the implementation of the activation of gates of the protection system of the Venetian lagoon from high tide water known by the technical name of "MOSE", it is the responsibility of the Tugboat Operator to ascertain the activation time of the same and to arrange in advance that the four tugs go to the open sea in compliance with the ETA given by the ship arriving at the Terminal.

5.14.2 En Route and Arrival Procedures

Introduction

This section describes activities that must be accomplished during the voyage, as well as destination arrival activities.

Note: The Pilot remains onboard the LNGc during the entire operations (berthing, unloading, and unberthing).

Approaching the Terminal

When the vessel arrives at three nautical miles from the Terminal, vessel must contact the Terminal via Channel 8 and request permission to enter the ATBA.

When the vessel arrives at 1.1 nautical miles from the Terminal, vessel must contact the Terminal via Channel 8 and request permission to enter the safety zone.

En route

The Pilot boat must call the Terminal 30 minutes prior to arrival and confirm to which side of the LNGc to berth.

Transit speed

Vessels are to transit at a safe speed both outbound and inbound.

5.14.3 Offshore Site Departure Procedures

Introduction

This section describes activities that must be accomplished prior to departure from the Terminal.

Vessel Master tasks

When the Pilot operations are completed or the Pilot boat is released by the Pilot (or both), the Coxswain must perform the following tasks.

TASK	ACTION
1.	Revise and communicate to the CRO the ETA at Chioggia Port.
2.	Advise Coast Guard in Chioggia of departure and the ETA, as required.

5.14.4 Pilotage Operations

Introduction

All LNGCs must be berthed under guidance of Chioggia Pilot.

The Pilot must remain on the LNGc during cargo unloading operations in case of requirement for an unplanned departure.

Pilot will board each LNGc carring with them the PPU (Portable Pilot Unit)

Reference: Terminal Regulations Booklet and PPU Operation Guideline



IMPORTANT

berthing without PPU can only be made after knowledgeable assessment to provide a written exception approved by Operations Manager or his delegate

LNGC berthing operations

On boarding the LNGc the Pilot and LNGc perform the following prior to berthing operations.

TASK	ACTION
1.	Complete Pilot and Master exchange of information with attendance of Marine Specialist acting as
	Loading Master.
2.	Install the PPU (Pilot Portable Unit) Power Unit and PC on the bridge and the two repeters on the
	bridge wings before proceeding to the berth
3.	Confirm with Marine Specialist that all pre-berthing checks have been completed and all is in
	order.
4.	Confirm Tugs and Line handling crews are ready.
5.	Confirm with Terminal that the Terminal is ready and that berthing operations can commence and
	can enter the safety zone.
6.	Confirm with Harbor Master office berthing operations to commence and entry to safety zone.
7.	Proceed to berth the LNGc.
8.	On completion of berthing release tugs and line handlers.
	Tugs to remain on station as previously described.
	Line handling crews and boats to return to shore.

LNGC unberthing operations

On completion of LNGc offloading operations and the LNGc Master has confirmed readiness to depart, the Pilot and LNGc Master perform the following prior to berthing operations:

TASK	ACTION	
1.	Complete Pilot/Master exchange of information.	
2.	Confirm with Pilot boat Coxswain requirements for Pilot pick up.	
3.	Confirm all Terminal personnel have departed from the LNGc and LNGc readiness to unberth	
	(Crew at stations, engine readiness, and so on).	
4.	Confirm Tugs and Line handling crews are ready.	
5.	Confirm with Terminal that unberthing operations can commence.	
6.	Advise Chioggia Coast Guard office unberthing operations is commencing.	
7.	Proceed to unberth the LNGc.	
8.	When clear of Terminal, release tugs and line handlers.	
9.	Notify Terminal and Chioggia Coast Guard office when Pilot has departed the LNGc and ETA at	
	pilot base.	

5.15 Tools

Tools

This section contains forms, guidelines, and documents referenced in this chapter. Included is:

Diesel Bunkering Safety Checklist-ISGOTT Rev.6

ISGOTT Bunker checklist: pre-arrival

Date and time: _	
Port and berth:	
Receiving ship:	
Bunker facility:	

	Part A. Checks at the planning stage for the receiving ship						
Item	Check	Status	Remarks				
1	Necessary permissions are granted (12.9.1, 21.2.2)	🗆 Yes					
2	Local requirements are observed (12.9, 21.2.3, 21.3.1)	☐ Yes					
3	All personnel are aware of operations (23.5.3, 24.1)	🗆 Yes					
4	Bunker plan is exchanged (21.2.3, 21.5, 21.6)	🗆 Yes					
5	Mooring and fendering arrangement is agreed (22.3.1)	☐ Yes					

	Part B. Checks at the planning stage for the bunker facility						
ltem	Check	Status	Remarks				
6	Necessary permissions are granted (21.2.2)	🗆 Yes					
7	Local requirements are observed (12.9, 21.2.2, 21.3.2)	☐ Yes					
8	All personnel are aware of operations (23.5.3)	🗆 Yes					
9	Bunker plan is exchanged (21.5, 21.6, 24.1.1)	🗆 Yes					
10	Mooring and fendering arrangement is agreed (22.3.2)	☐ Yes					

ISGOTT Bunker checklist: checks after mooring

Date and time: _	
Port and berth:	
Receiving ship:	
Bunker facility: _	

	Part C. Checks after mooring for the receiving ship					
ltem	Check	Status	Remarks			
11	Fenders are effective (22.4.1)	🗆 Yes				
12	Mooring is effective (22.2, 22.4.3)	🗆 Yes				
13	Access between ship and facility is safe (16.4)	☐ Yes				

	Part D. Checks after mooring for the bunker facility					
ltem	Item Check Status Remarks					
14	Fenders are effective (22.4.1)	🗆 Yes				
15	Mooring is effective (22.2, 22.4.3)	🗆 Yes				
16	Access between ship and facility is safe (16.4)	🗆 Yes				

ISGOTT Bunker checklist: pre-transfer conference

Date and time: _	:	
Port and berth:):	
Receiving ship:):	
Bunker facility:	:	

	Part E. Pre-transfer conference						
ltem	Check	Receiving ship status	Bunker facility status	Remarks			
17	Effective communications are established (21.1.1, 21.4, 24.1.3)	🗆 Yes	🗌 Yes				
18	Bunker watch is established (12.1.6.4, 21.4, 23.11)	🗆 Yes	🗌 Yes				
19	Smoking restrictions and designated smoking areas are established (4.10, 23.10)	☐ Yes	☐ Yes				
20	Naked light restrictions are established (4.10.1, 24.2.1)	☐ Yes	☐ Yes				
21	Safety data sheets are available (1.4.4, 20.1, 21.4)	☐ Yes	☐ Yes				
22	Hazardous properties of the product to be transferred identified in the safety data sheet are discussed (1.2, 1.4, 24.1.2)	☐ Yes	☐ Yes				

AS1. Agreement sheet part 1								
	Bunkers to be transferred (21.4, 21.5, 21.6)							
Product and gradeTonnesVolume (in m³) at loading temperatureLoading temperatureMaximum temperatureMaximum pressu								

ISGOTT Sixth Edition

AS2. Agreement sheet part 2								
	Bunker tanks to be loaded (volume in m³) (21.4, 21.5, 21.6)							
Tank numberProduct and gradeCapacity of tank (volume in m³)Volume of oil in the tank before bunkeringFree capacity of tank (volume in m³)Volume of oil in the tank before bunkeringFree capacity of tank (volume in m³)Volume of oil in the tank before bunkering						Final volume (in m³)		

	AS3. Agreement sheet part 3							
		Operational management controls						
ltem ref	Agreement	Details	Receiving ship initials	Bunker facility initials				
17	Process for starting transfer	Initial flow rate:						
		Increase of flow to full rate:						
		Quantity transferred check intervals:						
18	Process for completing transfer	Slowdown of flow:						
		Transfer stop:						

ISGOTT Bunker checklist: pre-bunkering

Date and time: _	
Port and berth:	
Receiving ship: _	
Bunker facility: _	

	Part F. Receiving ship: technical checks before bunkering						
Item	Check	Status	Remarks				
23	Electrical insulation is effective (12.9.5, 17.4.2, 17.4.5, 18.2.14)	☐ Yes					
24	 Bunker transfer equipment: (18) is in good condition is appropriate line up is checked is properly rigged is secured to manifolds is fully bolted 	☐ Yes					
25	Firefighting equipment is ready for use (5, 23.8)	🛛 Yes					
26	Scuppers and savealls are plugged (23.7.4, 23.7.5, 24.2)	🗆 Yes					
27	Portable drip trays are correctly positioned and empty (23.7.5)	🗆 Yes					
28	Unused bunker connections are blanked and fully bolted (23.7.1, 23.7.6)	☐ Yes					
29	High level and overfill alarm units are operational (12.1.6.6.1, 24.1.3)	☐ Yes					
30	Bunker operation emergency stop is operational (18.5)	☐ Yes					
31	Bunker tank openings are closed (23.3)	🛛 Yes					
32	Oil spill clean-up material is available (20.4, 24.2)	☐ Yes					
33	Medium frequency/high frequency radio antennae are isolated (4.11.4, 4.13.2.1)	☐ Yes					
34	Very high frequency and ultra high frequency transceivers are set to low power mode (4.11.6, 4.13.2.2)	☐ Yes					

ISGOTT Bunker checklist: pre-bunkering

Date and time: _	
Port and berth:	
Receiving ship: _	
Bunker facility: _	

	Part G. Bunker facility: technical checks before bunkering						
Item	Check	Status	Remarks				
35	Electrical insulation is effective (12.9.5, 17.4.2, 17.4.5, 18.2.14)	☐ Yes					
36	 Bunker transfer equipment: (18) is in good condition is appropriate line up is checked is properly rigged is secured to manifolds is fully bolted 	☐ Yes					
37	Firefighting equipment is ready for use (5, 19.4, 23.8)	☐ Yes					
38	Scuppers and savealls are plugged (23.7.4)	🛛 Yes					
39	Portable drip trays are correctly positioned and empty (23.7.5)	☐ Yes					
40	Unused bunker connections are blanked and fully bolted (23.7.1, 23.7.6)	☐ Yes					
41	High level and overfill alarm units are operational (12.1.6.6.1, 24.1.3)	☐ Yes					
42	Bunker operation emergency stop is operational (18.5)	☐ Yes					
43	Bunker tank openings are closed (23.3)	☐ Yes					
44	Oil spill clean-up material is available (20.4, 24.2)	☐ Yes					
45	Medium frequency/high frequency radio antennae are isolated (4.11.4, 4.13.2.1)	☐ Yes					
46	Very high frequency and ultra high frequency transceivers are in low power mode (4.11.6, 4.13.2.2)	☐ Yes					

ISGOTT Bunker checklist: repetitive checks

Date and time: ______
Port and berth: ______
Receiving ship: ______
Bunker facility: _____

	Part H. Receiving ship: repetitive checks during bunkering							
ltem ref	Check	Time	Time	Time	Time	Time	Time	Remarks
Interv	val time: hrs							
11	Fendering is effective	🛛 Yes						
12	Mooring arrangement is effective	☐ Yes						
13	Access between ship and bunker facility is safe	☐ Yes						
17	Communications are effective	□ Yes	☐ Yes	☐ Yes	☐ Yes	☐ Yes	□ Yes	
19	Smoking restrictions and designated smoking areas are complied with	☐ Yes						
20	Naked light restrictions are complied with	□ Yes	☐ Yes					
26	Scuppers and savealls are plugged	□ Yes	☐ Yes					
AS3	Bunker tank contents are monitored	☐ Yes						
Initial	S							

ISGOTT Bunker checklist: repetitive checks

Date and time: ______
Port and berth: ______
Receiving ship: ______
Bunker facility: _____

	Part I. Bunker facility: repetitive checks during bunkering							
ltem ref	Check	Time	Time	Time	Time	Time	Time	Observation
Interv	al time: hrs							
14	Fendering is effective	🛛 Yes						
15	Mooring arrangement is effective	☐ Yes						
16	Access between ship and bunker facility is safe	☐ Yes						
17	Communications are effective	□ Yes	☐ Yes					
19	Smoking restrictions and designated smoking areas are complied with	☐ Yes						
20	Naked light restrictions are complied with	□ Yes	☐ Yes					
38	Scuppers and savealls are plugged	☐ Yes						
AS3	Tank contents are monitored	☐ Yes						
Initial	S							

ISGOTT Bunker checklist: post-bunkering

Date and time: _	
Port and berth:	
Receiving ship:	
Bunker facility:	

	Part J. Receiving ship: checks before disconnecting						
Item	Check	Status	Remarks				
47	Bunker hoses, fixed pipelines and manifolds are drained (12.1.14, 18.4, 24.2)	🗆 Yes					
48	Remote and manually controlled valves are closed (12.1.6.17, 12.1.14.3, 23.7.6)	🗆 Yes					

	Part K. Bunkering facility: checks before disconnecting						
Item	Check	Status	Remarks				
49	Bunker hoses, fixed pipelines and manifolds are drained (12.1.14, 18.4, 24.2)	🗆 Yes					
50	Remote and manually controlled valves are closed (12.1.6.17, 12.1.14.3, 23.7.6)	🗆 Yes					

Declaration

We the undersigned have checked the items in the applicable parts A to G as marked and signed below:

	Receiving ship	Bunker facility
Part A. Checks at the planning stage for the receiving ship		
Part B. Checks at the planning stage for the bunker facility		
Part C. Checks after mooring for the receiving ship		
Part D. Checks after mooring for the bunker facility		
Part E. Pre-transfer conference		
Part F. Receiving ship: technical checks before bunkering		
Part G. Bunker facility: technical checks before bunkering		

In accordance with the guidance noted in chapter 24 of *ISGOTT*, we are satisfied that the entries we have made are correct to the best of our knowledge and that the receiving ship and bunker facility are in agreement to undertake the transfer operation.

We have also agreed to carry out the repetitive checks noted in parts H and I of the *ISGOTT* bunker checklist, which should occur at intervals of not more than _____ hours for the receiving ship and not more than _____ hours for the bunker facility.

If, to our knowledge, the status of any item changes, we will immediately inform the other party.

Receiving ship	Bunker facility
Name	Name
Rank	Position
Signature	Signature
Date	Date
Time	Time

To be completed after any transfer operation:

	Receiving ship	Bunker facility
Part J. Receiving ship: checks before disconnecting		
Part K. Bunkering facility: checks before disconnecting		

Receiving ship	Bunker facility
Name	Name
Rank	Position
Signature	Signature
Date	Date
Time	Time

6 SUPPORT VESSEL OPERATIONS

Overview

Introduction

ALNG's existing charter vessels provide a number of support activities. This chapter provides a general guidance on the Support Vessel activities for LNGc assist and stand-by operations.

Specific details relative to cargo handling are covered in Chapter 8.0, "LNGC Operations."

Existing or spot charter vessels can provide additional miscellaneous support activities as noted in Chapter 2.0, "General Information."

References:

- Chapter 2.0, "General Information"
- Chapter 8.0, "LNGC Operations"

In this chapter

This chapter contains the following information:

- 6.1 LNGC Assist Operations
 - 6.1.1 Communications and Operational Checks
 - 6.1.2 Approach
 - 6.1.3 Static Towing and Departure
- 6.2 Standby Operations

6.1 LNGC Assist Operations

Introduction

This section provides guidance on assistance provided to LNGCs for berthing and unberthing operations at the Terminal. The berthing and unberthing operation is typically carried out at ALNG using four tugs.

Two line handler vessels are used to transport the line handlers to the Terminal where they board via ladder access.

The Support Vessel Masters must ensure that the vessels have adequate stability at all stages of the operation and that draft and trim are appropriate to the prevailing conditions such that the vessels are able to deliver the required bollard pull or thrust throughout the operation.

During all LNGC assist operations personnel **must** be aware of potential parting of the towline and keep clear of the potential "snap back" areas. Tow deck areas should be kept clear and restricted to authorized personnel only.

6.1.1 Communications and Operational Checks

Communications

A primary designated very high frequency (VHF) channel (15 or 17) is utilized between the LNGc, Tugs and Terminal.

Mobile phones or Satellite Phones can be used as secondary way of communication in respect of 500 meters restriction from Terminal.

The chosen communications device must not interfere with internationally recognized distress channels or other facility operations. A secondary back up channel (15 or 17) will be designated.

The Support Vessel Masters are normally under the direction of the Pilot who is supervising the LNGc operation.

Operational checks

The tugs use a checklist before departing from Chioggia Harbour and use a secondary check list prior berthing to confirm vessel readiness; this includes the checks as required for entering the 500-meter safety zone. The checklists includes:

- Confirm all power, propulsion, and steering gear systems are on line and functioning without fault or restriction.
- Confirm towing equipment is functioning and towlines have been prepared.
- Confirm Bridge manning level is correct.
- Assess weather and currents prevailing at the time.
- Review any weather forecast that may be available.
- Assess other traffic movements in the area.
- Advise all personnel that the vessel is about to commence LNGc assist berthing and unberthing operations.
- Ensure that all relevant personnel are advised that no maintenance tasks are undertaken that could compromise the unrestricted use of the power, propulsion, or steering systems.
- Confirm the engine-room is manned.
- Confirm watertight doors are closed.
- Confirm no hot work on deck (welding, incineration) any Hot Work Permit to Work to be withdrawn.

Note: The Support Vessel Masters confirm to the Pilot that the checklists have been completed.

6.1.2 Approach

LNGC assist operations (approach)

The tug Masters ensure that the deck crews are wearing all required personal protective equipment (PPE) and test communications between the bridge and working deck. At all times the deck crews position themselves safely on the working deck with regard to the LNGc assist operation.

Detailed procedures relevant to the site specific operation **must** be in place. Typically operational steps for connection of the towline to the LNGC are:

- The towing pennants are connected to the tow wires and where required positioned using winches between the towing pins ready to receive the LNGc heaving lines and messengers. The pennants and tow wires are examined for any defects and rejected for use if not suitable.
- On direction from the Pilot on the LNGc, the tugs approach the LNGc. The LNGc ideally makes headway at very slow speed (i.e. between 1-2 Knots) with the rudder mid-ships and propeller stopped or at zero pitch.
- The tug making its final approach stern first at the minimum required speed and heading does so that in the event of a propulsion failure, the tug avoids contacting the rudder of the LNGc.
- Once close enough to receive heaving lines from the LNGc, the tugs hold position and the heaving
 lines are transferred followed by messenger lines. The tugs' deck crews connect the messenger
 lines to the towing pennants and the LNGc deck crew heaves the pennants on board the LNGc
 and secures them on the designated towing bitts or brackets utilizing the large eye on the towing
 pennants. Throughout this operation, the tugs hold safe position close to the LNGc and pay out
 slack on the tow wire as required to facilitate connection on the LNGc.
- Once the towing pennants are confirmed secure on the LNGc and the LNGc deck crew is clear, the tugs, on direction from the Pilot, move away from the LNGc paying out the tow wires to initial tow length determined by sea state (normally 100 meters). The tugs keep in line with the LNGc and apply power as directed by the Pilot.
- The Pilot maneuvers the export LNGc to the final approach position directing the tugs power settings and heading as required.
- Throughout the approach, the tugs monitor the wind current and weather by all available means to assist any early detection of squalls that might impede the LNGc approach and reports such to the Pilot.
- During final approach, the Pilot directs the tugs' positions and power as required. Each stage of the berthing and unberthing operation is monitored by the tugs. Once the LNGc is secured to the Terminal, in position and all-fast all wires/ropes, the tugs are directed to disconnect all towing lines and remain on station during the unloading operations.
- The tugs retain connection to the LNGc through the emergency towing-off pennants as per the Oil Companies International Marine Forum (OCIMF) Mooring Equipment Guidelines Section 3.12 (4th edition,2018) and ISGOTT (Vers.6th); certain LNGc present the side bitts for emergency pourposes.

6.1.3 Static Towing and Departure

LNGC assist operation (static towing)

For the duration of the offloading operation the tugs monitor, if requested by Pilot, the LNGc position relative to the Terminal and report hourly the power setting and wind, weather and current direction, and velocity. If a line squall approaches, the tugs should be prepared to provide assistance to the LNGc as directed by the Pilot.

If, as a result of adverse weather conditions, sustained high power usage on main engines and thrusters causes concern, the tug Master should immediately inform the Pilot. If at any time any defect on the tugs develops, the Pilot is informed so that an assessment can be made as to the continued safety of the operation.

LNGC assist operation (departure)

On completion of LNGc offloading, the manifold hoses are disconnected. Unmooring then commences.

The tugs re-establish towline connections to the LNGc. Once hawsers are released and paid out, the tugs are directed to apply power to tow the LNGC at a low speed astern, such that the hawsers and mooring pick up ropes can be paid out in a controlled manner without risk of fouling any Terminal or LNGc fixture. Once clear of the bow the Pilot directs the tugs to tow the LNGc to a designated position at a safe distance from the Terminal.

When at a safe distance from the Terminal the Pilot instructs the tugs to shorten the tow wires and approach the LNGc at a safe position. The LNGc deck crew removes the pennant eyes from the bitts or towing brackets and pay out the slack in a controlled manner. The tugs winch in on the tow wires picking up the slack until the towing pennant eyes are safely on deck and the LNGc messengers detached. The tugs then move clear of the LNGc and complete the operation.

Each tug recovers its tow wire one after the other, *not* at the same time.

Reference: Chapter 8.0, "LNGC Operations"

6.2 Standby Operations

Introduction

This section describes the activities that pertain to standby vessels. When in standby mode, this type of vessel is often referred to as an emergency response and rescue vessel (ERRV).

Standby vessels may be employed as support vessels to subsea interventions and diving operations in addition to the regular standby and rescue functions.

It may be necessary at times to retain a standby or response vessel in close proximity to the Terminal at all times.

The standby vessel may be a dedicated vessel designed to perform standby functions or an existing support vessel. An existing support vessel functioning as standby must have the design and capabilities that are required to perform the various standby duties for which it is being used. The standby vessel's role may be:

- To respond and assist in the following activities as and when required:
 - Search and rescue (SAR)
 - Acting as a Place of Safety
- Facility guard duties including monitoring of other marine traffic, field infringements, and intervention to avoid collision with the Terminal.
- Oil Spill Response assistance.
- Firefighting or fire suppression.
- Personnel transport and transfer (emergencies only).
- Other support and surveillance tasks.

Note: A risk assessment should be conducted to address occasions when the vessel is requested to perform an activity outside the typical standby activity role.

References:

- Shore Base Emergency Response Plan
- Terminal/Pipeline Emergency Response Plan

General duty requirements

The duties of a standby vessel in the event of an emergency are generally defined as follows (minimum requirements):

- In case of an accident:
 - Rescue people from the sea, rafts or lifeboats with daughter craft, fast rescue craft (FRC), mechanical recovery aids or through the rescue zone.
 - \circ $\;$ Accommodate people evacuated from the Terminal and associated facilities.
 - Register rescued and injured people.
 - Classify level of injured personnel and provide information to Doctors in order to perform triage.
 - Care for rescued personnel.

- Function as a temporary On-scene Commander (OSC) and as a temporary communications and coordination center during rescue operations if so designated by ALNG.
- Illuminate the rescue area around the vessel.
- Act as a guard vessel in the safety zone around the Terminal and associated facilities.
- The standby vessel **must** at all times have adequate crew resources and **must** maintain rescue equipment for immediate deployment as appropriate for the emergency scenarios as required by ALNG.

Additional duty requirements

In addition, ALNG may require the following services of the standby vessel:

- Surveillance, monitoring, and communication with personnel working over open water on scaffolding, jacket structures, or close to the sea.
- Surveillance of navigation lights, buoys, and associated equipment associated with the Terminal operations.
- Continuous surveillance of all marine activity in the area especially if a target or vessel(s) is approaching any designated development area or prohibited area.
- Reporting all field infringements, infringement of the 500-meter safety zone, and any drifting
 objects in the field that may be a hazard to navigation or to a facility. Tow such objects clear of
 the field if safe to do so.
- Assistance with firefighting or fire suppression if so equipped.
- Winching operations from helicopter.

Crew readiness

When advised by the Terminal that helicopter operations are to take place, the vessel crew **must** be alerted and the FRC (and crew) and other lifesaving equipment must be brought to immediate state of readiness. The FRC should be capable of being launched within two minutes.

Close standby

Close standby is when the vessel or daughter craft takes up a position close to the Terminal to provide rescue and recovery efforts within the required response times. When engaged in close standby the vessel should remain dedicated to that activity and maintain an optimum position.

The OIM and standby vessel Master should bear in mind that the shipboard mechanical means of rescue may be limited in their capability.

When providing rescue coverage for Terminal over-the-side work:

- The Master should be advised of the number of persons in the over-the-side work party.
- Communications should be tested and the Master should be kept updated on work progress, any suspension(s), and expected time of completion.
- In case of worsening weather, restrictions in visibility, or other conditions that may affect the rescue and response times, the Master should inform the OIM and over side work should cease.

Validation and verification of rescue and recovery arrangements

ALNG may establish performance standards that provide a good prospect of recovering and rescuing persons from the water in all but the most severe conditions, taking into account:

- Performance of protection likely to be worn (for example, immersion suits)
- Period in the water for which people might reasonably be expected to survive and recover after receiving medical attention on the standby vessel or other place of safety
- Number of persons likely to be in the water
- Weather and sea conditions

Validation trials should be conducted, normally at the start of a vessel hire, to demonstrate the specified rescue and recovery performance standards can be met. These trials generally should be conducted on an annual basis.

A program for on-going training of the vessel crews performing rescue and recovery duties should be in place and regular drills or exercises **must** be conducted.

Survivor management and transfer

Each stand-by vessel should have a contingency plan for the safe transfer of casualties from the vessel for further treatment.

The medical condition of the casualties should be established if possible and external sources of medical advice sought if necessary. Casualties should be tagged with details of their identity, medical condition, and any medical treatment applied.

Note: There is a doctor in attendance at all times on the Terminal.

Storage of cargo on standby vessel deck

Where the vessels are used for temporary stowage of cargo on the vessels' deck, ample time **must** be considered for the back loading onto the Terminal when a clean deck is required.

The rescue zone **must** be kept free of deck cargo and other obstacles at all times.

If the standby vessel has additional LNGC assist duties, the area for towing gear deployment and hookup **must** be cleared prior to LNGC assist operations.

Firefighting

In case of a fire on the Terminal the OIM, as the initial on-scene coordinator, directs the actions of the standby vessel. The use of the fire monitors from a standby vessel **must** be initiated by the OIM only after Terminal personnel have been removed to a safe position.

The Master of the vessel **must** never initiate spraying with fire monitors unless the OIM gives a direct order to do so.

The vessel firefighting systems **must** be ready for use at all times and tested on a weekly basis, with any defects or circumstances that may affect the performance of the firefighting systems reported to the OIM. Repairs must be promptly made.

Oil spill response

Standby vessel duties in case of an oil spill from the Terminal are detailed in the *Terminal/Pipeline Emergency Response Plan*.

The standby vessel's crew **must** be trained in the duties and understand their responsibilities that are detailed in the *Terminal/Pipeline Emergency Response Plan*.

The OIM may request the vessel to monitor and track oil spills. Standby vessels **must** report any sighting of an oil spill to the Terminal immediately. Reports to local authorities are to be in compliance with local regulations. The vessel should continue to monitor the spill and report to the OIM at agreed intervals.

Appropriate ALNG Safety, Health, and Environment (SHE) Advisors or Safety, Security, Health, and Environmental Management Systems (SHEMS) personnel should be consulted to ensure that the Vessel emergency response capabilities such as training, firefighting, rescue, dispersant equipment, containment, recovery, and oil recovery tank capacity meets requirements as set out in the emergency response contingency plans.

7 SPECIALIZED VESSEL OPERATIONS

Overview

Introduction

This chapter provides guidelines on Specialized vessel operations including dynamic position (DP), remotely operated vehicle (ROV), and dive support vessel operations.

In this chapter

This chapter contains the following information:

- 7.1 Dynamic Position (DP) General Information
- 7.2 DP Training and Competency
- 7.3 DP Risk Assessment
- 7.4 DP Operations
- 7.5 ROV Operations
 - 7.5.1 (ROV) Vehicle Classifications
 - 7.5.2 ROV Tasks
 - 7.5.3 Environmental Conditions
 - 7.5.4 Hazards
 - 7.5.5 Responsibilities
- 7.6 Dive Support Operations
- 7.7 Other Offshore Specialized Vessels

7.1 Dynamic Position (DP) General Information

DP definitions

International Maritime Organization's (IMO's), Maritime Safety Committee (MSC) Circular 645 *Guidelines for Vessels with Dynamic Positioning Systems* is the principal internationally accepted reference upon which rules and guidelines of other authorities and organizations, including classification societies and International Marine Contractors Association (IMCA) are based. It provides an international standard for DP systems on all types of new vessels built after 01 July 1994.

The equipment classes are defined by their worst case failure mode as follows:

- **Equipment Class 1**: Loss of position may occur in the event of a single fault.
- **Equipment Class 2**: Loss of position is not to occur in the event of a single fault in any active component or system. Normally static components are not considered to fail where adequate protection from damage is demonstrated, and reliability is to the satisfaction of the administration. Single fault criteria include:
 - Any active component or system (generators, thrusters, switchboards, remote controlled valves, and so forth).
 - Any normally static component (cables, pipes, manual valves, and so forth), which is not properly documented with respect to protection and reliability.
- Equipment Class 3: A single failure includes:
 - Items listed above for Class 2, and any normally static component is assumed to fail.
 - All components in any one watertight compartment, from fire or flooding.
 - All components in any one fire subdivision, from fire or flooding including cables where special provisions apply under the MSC Circular.

In addition, for equipment Classes 2 and 3, a single inadvertent act should be considered as a single fault if such an act is reasonably probable.

Reference: IMCA, IMO MSC Circular 645, Guidelines for Vessels with Dynamic Positioning Systems

DP position reference systems

The following tables provide a list of common position reference systems used in connection with DP Systems.

Table 7-1 includes the more common reference systems associated with typical supply vessel operations. These systems require no power and are simply bolted to the installation structure at strategic locations so as to give clear line of sight to the area(s) where the vessel would be station keeping (for example, near the installation crane[s]). With the exception of the Fanbeam system (which requires positioning of reflector[s] on the installation), they require no additional equipment to be installed on the offshore installation.

SYSTEM	DESCRIPTION	COMMENTS
Fan beam	Laser beam with reflector: Measures	High accuracy.
	distance and direction with the use of a laser	May be impaired by fog, snow, or heavy rain,
	beam against a reflector mounted at a fixed	confused by bright lights close to target at
	point on the installation or rig.	night or when sun shines directly at the Fan
		beam lenses and may suffer interference
		from reflective items in the area of the
		reflector such as personnel with reflective
		clothing.
DGPS	Differential Global Positioning System	1 to 5 m accuracy.
	(DGPS): A system that uses signals from	Requires correction signal.
	navigation satellites and land stations with	
	known positions.	
Taut Wire	This system consists of a weight hanging on a	High accuracy, especially in moderate water
	wire that is lowered to the seabed. The	depth.
	vessel's position or movement is registered by	Susceptible to strong tides resulting in
	the change of angles in a sensor fixed to the	inaccuracies, maximum depth limitations,
	wire's point of suspension onboard the vessel.	relative positioning only, possibility of weight
	The wire is kept taut by a winch with tension	dragging resulting in position errors, can be
	function.	mechanically damaged, or fouled.

Table 7-1 Common Position Reference Systems

The following additional guidelines are provided for use of the Fanbeam position reference system.

- Only manufacturer supplied reflectors must be used; homemade reflectors **must not** be used.
- Reflectors should be installed on the Terminal clear of other reflective materials.
- Notices informing Terminal personnel of their importance should be posted.
- Reflectors should be inspected and cleaned on a frequent basis.
- The location of the reflectors **must not** be changed without going through the proper Management of Change (MOC) process. Vessel Operators and Masters must be informed of any changes.
- During DP operations Terminal personnel should be made aware and not work near the reflectors with clothing containing reflective material.
- Lifts and moving of reflective material in the vicinity of the reflectors during DP operations should be avoided.

Surveys and testing

The following survey and tests are required.

- **Initial Survey**: Includes complete survey of the DP system and includes a complete test of all systems and components and the ability to keep position after single failures associated with the equipment class.
- **Periodical Survey**: Conducted at intervals not exceeding five years and includes complete tests as for the initial survey.

- **Annual Survey**: Should be conducted within three months of anniversary date, to ensure that the DP system has been maintained properly, is in good working order, and meets the requirements of its assigned class notation.
- A survey either general or partial should be carried out every time a defect is discovered and corrected, or an accident occurs, which effects safety of the vessel, or when any significant repairs or alterations are made.

Charterer or Company pre hire DP trials

On delivery, ALNG should review DP and Class documentation to ensure compliance with initial survey and that any survey recommendations have been addressed and closed out as required.

In addition, ALNG may require that DP functional trials are conducted and witnessed prior to commencing operations.

These trials should be witnessed by an ALNG or independent qualified inspector with recommendation that the report follows the guidance provided in IMCA M 139.

DP capability plots

Vessel DP capability plots should be available. The purpose of the capability plots is to determine by calculation based on assumed propulsion power, the position keeping ability of the vessel in fully intact conditions and in certain degraded conditions, and in various environmental conditions.

Vessel Master and DP officers where possible, should complete DP footprint plots to measure the actual position keeping performance of the vessel in intact and degraded conditions and in various environmental conditions.

These plots are valuable in assessing the validity of the vessel's DP capability. Where there are differences the Vessel Operator should ensure the results of the footprint plots take precedence over the capability plots. If there is significant difference, the vessel operator should investigate the reason and if appropriate modify the capability plots.

7.2 DP Training and Competency

Training standards

DP Operator training standards are contained in IMO MSC *Circ.* 738 *Guidelines for Dynamic Positioning System (DP) Operator Training*, and its source document, IMCA *M* 117, *Training and Experience of Key DP Personnel*.

The document IMCA *C 002, Competence Assurance and Assessment: Guidance Document and Competence Tables: Marine Division*, Rev 1, also provides guidance.

DP logbook

The Vessel Operator should have in place an appropriate DP logbook scheme, where all key DP personnel are issued with and maintain a personal DP logbook detailing their DP experience.

Example logbook schemes include:

- Nautical Institute (NI) which is required for application for an NI DP certificate. This logbook includes details of training courses attended.
- IMCA DP logbook which can be used by the DP Operator and other key DP personnel to keep a record of DP hours or DP experience.

Nautical institute – DP certification

The NI DP training scheme is the Industry recognized learning route to become a qualified DP Operator (DPO). All DPOs assigned to Company chartered vessels engaged in DP operations should have an NI issued DPO certificate or similar accredited training scheme certification.

The components of the NI scheme include:

- DP basic induction course
- Minimum 30 days DP watch keeping experience and satisfactory completion of a number of DP associated tasks
- DP simulator training course
- At least 180 days watch keeping on Class 1, 2, or 3 DP vessels
- Statement of suitability by master of last DP vessel

The DP limited certificate is issued for operators with DP Class 1 experience only.

Full DP certificates are issued to operators with sufficient DP Class 2 or 3 experience.

Competency categories for DP bridge watchkeeping on DP offshore supply vessels

The following is taken from the IMCA *International Guidelines for the Safe Operation of Dynamically Positioned Offshore Supply Vessels* and is offered as guidance on Bridge Watchkeeping on DP offshore supply vessels (OSV). It is aligned with the *Marine Collision Avoidance Best Practice*.

Vessel operators should consider making two competency requirements, A and B, for persons taking a DP bridge watch on a DP OSV.

- **Category A**: Applies to Master or navigating officers who are considered competent to operate the vessel DP control system unsupervised and are competent ship handlers in manual control on the vessel in which they are serving.
- **Category B**: Applies to navigating officers and others who are competent to operate the DP control system under supervision and considered competent to move the vessel away from the Terminal in manual control.

Table 7-2 provides competency requirements for each category.

Table 7-2 Competency Requirements

CATEGORY	COMPETENCY REQUIREMENTS		
A	 IMO Standards for Training, Certification, and Watchkeeping (STCW) 95 navigating officer certification appropriate to class of vessel. NI DP Certificate. Fully competent in operating the OSV in manual control when in close proximity to the Terminal. Adequate experience on the vessel type (recommended 14 days). Adequate experience of the DP control system type and equipment classification (recommended 14 days). Knowledge of the vessels DP failure modes and effects analysis (FMEA), together with a detailed understanding of the implications of all identified failure modes. Detailed knowledge of the vessels DP operations manuals and adequate knowledge of the contents of the vendor manuals. Knowledge of relevant IMCA guidelines including DP incident reporting. Consideration should also be given to providing manufacturers courses for masters and officers, in particular for the DP control system and position reference systems. 		
В	 STCW 95 navigating officer certification appropriate to class of vessel or other appropriate to class of vessel. Received onboard training of the vessels DP system, using the NI DPO logbook to record training received. Competent in taking control of the vessel in manual control and moving away from the Terminal. 		

Engineers, electricians and electronics officers

Vessel engineers and where relevant electricians and electronics officer should be suitably qualified and experienced in the DP system.

Table 7-3 is taken from the IMCA international Guidelines for the Safe Operation of Dynamically Positioned Offshore Supply Vessels.

Table 7-3 Qualifications for Engineers

POSITION	QUALIFICATIONS	
Chief Engineer	 STCW 95 engineering officer certification appropriate to class of vessel. 	
	 Adequate experience on the vessel type (recommended 14 days). 	
	 Adequate experience of the DP control system type and equipment classification 	
	(recommended 14 days).	
	 Detailed knowledge of the vessels DP FMEA, and adequate knowledge of the vendor 	
	manuals.	
	 Knowledge and understanding of failure modes. 	
	 Adequate knowledge of the vessels DP operations manual. 	
	 Knowledge of relevant IMCA guidelines including DP incident reporting. 	
	Consideration should also be given to providing manufacturers courses for chief	
	engineers, in particular for the DP control system and maintenance requirements and	
	where applicable power generation, power management, and propulsion systems.	
Watchkeeping	STCW 95 engineering officer certification appropriate to class of vessel	
Engineer	 Adequate knowledge of the vessels DP FMEA and vendor manuals 	
	 Adequate experience of the vessel type and nature of the DP operations 	
	Knowledge and understanding of failure modes	

Bridge Officer familiarization

In all cases a formal induction process for all Bridge Watchkeeping Officers and Bridge DP Officers should include familiarization of all propulsion units and maneuvering system including actions to take in an emergency.

7.3 DP Risk Assessment

Setting the separation distance between offshore supply vessel (OSV) and Terminal

Where dynamic position (DP) vessels are engaged in close proximity work to the Terminal, such as supply operations, the minimum *separation distance* should be agreed between the Master and the Offshore Installation Manager (OIM).

Minimum separation distances between the DP supply vessel and the Terminal should be set for each level of proximity. In setting the separation distance consideration should be given to such influences as crane jib radius, hose lengths, size of loads, and cargo storage area.

The IMCA *International Guidelines for The Safe Operation of Dynamically Positioned Offshore Supply Vessels* provides further guidance to the Vessel operator and Offshore Operators in developing a matrix of close proximity situations and the corresponding DP vessel capability, where the least capable vessels should be restricted to only low risk proximity situations and the vessels with greater capability may be used for higher risk situations.

CLOSE PROXIMITY SITUATION	DP OSV CAPABILITY 1	DP OSV CAPABILITY 2	DP OSV CAPABILITY 3
Low risk	Х	Х	Х
Medium risk		Х	Х
High risk			Х

Table 7-4 Example Risk Matrix (From IMCA Guideline)

Close proximity factors

Table 7-5 Close Proximity Factors

ITEM	DESCRIPTION	
Close proximity	• <i>x</i> meters from the installation on lee side	
Low risk	 More than x meters from the offshore installation on weather side 	
Close proximity	 Less than x meters from the installation on lee side (for brief periods only) 	
Medium risk	 x meters from the installation on weather side 	
Close proximity	Less than x meters from the installation on the lee side	
High risk	 Less than x meters from the installation on weather side (for brief periods only) 	

Note: The "x" distances should be set and agreed between the Vessel Master and Offshore Installation Manager (OIM).

DP OSV capability

ITEM	DESCRIPTION
DP OSV Capability	DP1 vessel
1	 Vessel operating within limits of intact thruster capability for existing environmental force conditions
	 DP location manned by a Category A watchkeeper and one other person
	 At least one position reference system in use
DP OSV Capability	DP2 vessel
2	 Vessel operating to identified worst case failure limits in existing environmental force conditions DP location manned by at least one Category A watchkeeper and one Category B watchkeeper
	 Two independent position reference systems in use; third system immediately available
DP OSV Capability	• DP2
3	 Vessel operating to identified worst case failure limits in existing environmental force conditions
	 DP location manned by at two Category A watchkeepers
	 Three independent position reference systems in use

Table 7-6 Example DP OSV Capability Matrix (From IMCA Guideline)

Setting the critical and allowable vessel excursions

Critical and allowable excursion limits must be set. As a guide, the critical limit should not exceed half the separation distance between the vessel and the Terminal and the allowable should not exceed half of the critical limit.

Electronic warning and electronic alarm limits should be set at allowable and critical levels respectively. The same applies to electronic off-heading set values.

Degraded or emergency situations

Degraded or emergency situations exist when the DP vessel finds itself in a degraded condition (that is not in compliance with the appropriate DP offshore supply vessel [OSV] capability conditions) which may include:

- Position or heading excursions outside the acceptable limits for more than brief or isolated periods.
- Power and thrust limits outputs greater than the limits for the capability of the vessel for more than brief or isolated periods.
- Environmental conditions or other conditions considered unsuitable for continued DP operations.
- Increased risk of loss of position or collision for one of the following:
 - DP 2 and 3 capability vessels. Failure in DP equipment that results in loss of redundancy and the vessel operating outside the worst case failure limit
 - DP1 capability vessel. Failure in DP equipment that does not result in loss of position

The first action in a degraded condition is to make the vessel safe. This might mean:

- Stopping all operations (supply)
- Moving the vessel away from the installation to a safe position
- Taking manual control, for example in case where hoses must be disconnected
- Summoning the Master to the Bridge

Once in a safe condition, a risk assessment should be carried out by the vessel personnel considering the degraded condition, its cause or causes, and the associated increase in risk of loss of position with potential to cause collision.

The assessment should help determine the appropriate measure(s) to take, for example:

- To discontinue operations
- Continue in manual control
- To resume operations under different circumstance such as relocation to the leeward side

In all cases the Master must advise the OIM of the degraded condition and agree on the appropriate measures before resuming operations.

Approach operations must not resume without authorization of the OIM.

Emergency situations

In the event the vessel is unable to maintain position, is in imminent threat of collision, or any other Emergency situation, the vessel should take whatever action necessary to prevent injury, avoid collision, make the vessel safe, and avoid environmental pollution and structural damage.

Escape routes

Prior to conducting DP operations the Vessel should identify escape route(s) that provide a clear path for the vessel to follow when making a normal or emergency departure from the installation; these escape routes should be communicated to all DP Operators (DPOs).

Change of operating control mode

There may be occasions when it is appropriate to change from Auto DP control to manual or joystick control. In the case of a supply operation the vessel reverts to a conventional supply vessel mode and is subject to the appropriate controls.

When the vessel transfers back to DP control, a repeat location set-up check should be conducted.

DP incident reports

Any incident or failure of the DP system should be reported immediately to ALNG by the Vessel Operator. Use of the DP system should be discontinued until the system has been surveyed and verified operational.

The Vessel operator should have DP incident reporting procedures.

Non-DP vessels

The guidance in this section can also be applied to non-DP vessels, including:

- Use of the risk assessment process
- Setting of the separation distance from the installation
- Emergency situations
- Escape routes

7.4 DP Operations

DP operations manual and procedures

Each DP Vessel **must** have onboard a DP operations manual and DP procedures, including checklists.

Arrival checklist

A test of the DP system **must** be performed before the vessel enters the 500-meter safety zone to ensure satisfactory operation of the DP system and should include full functional checks of the operation of the thrusters, power generation, auto DP, and joystick or manual controls. The checks should ensure the DP system is set up correctly for the appropriate DP capability class, including manning and reference systems.

These checks must be documented in the form of a checklist and maintained onboard for audit purposes.

Reference: IMCA, Safe Operation of Dynamically Positioned Offshore Supply Vessels

Approaching the Terminal

In addition to the guidelines found in Section 5.5, "Operations Near the Terminal and in the Safety Zone," a DP vessel when approaching and operating inside the safety zone adheres to the following:

- Informs the OIM or designated contact:
 - That the vessel will operate alongside the Terminal in DP mode.
 - That all arrival checks have been completed satisfactorily.
 - Of noted defects or issues that may affect the capability of the vessel.

Reference: Section 7.3, "DP Risk Assessment"

- Informs the OIM where the master considers from the risk assessment, that it is more appropriate to perform the operation in manual or joystick mode, for example when performing shorter duration loading or unloading activities.
- The vessel must not approach the Terminal unless authorized by the OIM to do so.

IMPORTANT

The Terminal should always seek to minimize the length of time a vessel has to remain in close proximity and avoid calling the vessel into the 500-meter safety zone unless operations are ready to commence.

- Approach to the location set-up position **must** be at a safe speed with the vessel not heading directly at the Terminal. The autopilot setting must be overridden prior to entering the exclusion zone.
- Location set-up checks **must** be carried out on every occasion and before the vessel moves into the final working position. These checks should be carried out at a safe distance, in the region of 50 m from the Terminal and whenever possible at a location where in event of a loss of thrust the vessel will drift clear of the Terminal. The set-up checks assess the vessel station-keeping performance, to check the position reference systems are set up correctly and allow the DP system to build up and make ready the mathematical station-keeping model (at least 15 minutes). These checks should be documented in the form of a checklist.

- Conduct final approach to the working location after the set up checks have been completed on DP or in manual control using the DP joystick.
- Safe working location and separation distance are carefully selected and agreed upon between vessel and Terminal (see risk assessments). Factors to consider include:
 - Positioning the vessel to work on the leeward side of the Terminal wherever possible
 - Position and reach of the Terminal crane
 - Terminal obstructions
 - o Interaction with installation thruster where fitted
- Select the most appropriate safe working heading on the basis that it may be necessary to make a rapid escape from the Terminal. It can be advantageous to provide a good steadying vector by positioning the vessel such that environmental forces are opposed by a steady state thrust output (for example, placing bow or stern to wind and seas).
- Keep close proximity time at the Terminal to a minimum. The vessel should move a safe distance away from the Terminal during periods of inactivity, such as when the site crane is not available. If delay is prolonged the vessel should move out of the 500-meter safety zone.
- If possible, when handling hoses, give sufficient hose length to allow the vessel to increase the separation distance.
- Throughout the operation the vessel's bridge watch keeper(s) must maintain constant vigilance; this includes monitoring of environmental conditions and any sudden wind or current changes, lightning strikes in the area, and other potential dangers such as other marine or air traffic and cargo operations.

DP watch handover

Vessel operator should have in place a formal DP watchkeeper handover procedure, including use of a checklist.

Engine room operations

The Engine room should be manned by a qualified engineer with appropriate DP experience. Exceptions may apply to smaller vessels where it is impractical to man the engine room throughout the period while operating within the safety zone, in this case a qualified engineer should be immediately available.

Where carried, the electrician or electronics officer should be on call.

The following should be taken into account by engine staff:

- Do not start or stop equipment or conduct maintenance on machinery that could affect the DP system when the vessel is in DP mode without obtaining permission from the bridge DPO.
- If problems or potential problems are detected with any DP systems or associated equipment, immediately advise the bridge DPO.

7.5 ROV Operations

Introduction

This section provides guidance on remotely operated vehicle (ROV) operations.

ROV operations are frequently undertaken when the vessel on which the ROV is installed is positioned by dynamic position (DP).

Masters and personnel should have a thorough understanding of the following:

- ROV classification types
- Tasks they undertake
- Tools employed by ROV
- Environmental considerations that affect ROV operations
- Hazards that the vessel or facility may present to an ROV
- Responsibilities of the Master, ROV contractor, and ROV Supervisor

The term ROV covers a wide range of equipment and no single vehicle can be described as typical. Not only are there numerous ROV designs, but the same basic ROV can be modified to carry out different tasks.

ROVs can be deployed either as free-swimming or through a tether management system (TMS). For a free-swimming ROV, the surface winch umbilical is directly connected to the vehicle. ROVs can also be deployed through a TMS where the surface winch umbilical is directly connected to the TMS. The TMS is a submersible winch with a tether connected to the ROV. The two main types commonly used are the side entry TMS (garage) or the "top hat" TMS.

7.5.1 (ROV) Vehicle Classifications

Introduction

Five vehicle classifications are identified which can be deployed either in free swimming or TMS modes.

Class I – observation ROVs

These vehicles are small vehicles fitted with camera, lights, and sonar only. They are primarily intended for pure observation, although they may be able to handle one additional sensor (such as cathodic protection [CP] equipment), as well as an additional video camera.

Class II - observation ROVs with payload option

These vehicles are fitted with simultaneously viewable cameras, sonar as standard, and are capable of handling several additional sensors. They may also have a basic manipulative capability. They should be able to operate without loss of original function while carrying two additional sensors and manipulators.

Class III – work-class vehicles

These vehicles are large enough to carry additional sensors or manipulators (or both). Class III vehicles commonly have a multiplexing capability that allows additional sensors and tools to operate without being hard-wired through the umbilical system. These vehicles are generally larger and more powerful than Classes I and II. Wide capability, depth, and power variations are possible.

Class IV - towed and bottom-crawling vehicles

Towed vehicles are pulled through the water by a surface craft or winch. Some vehicles have limited propulsive power and are capable of limited maneuverability. Bottom-crawling vehicles use a wheel or track system to move across the seafloor, although some may be able to "swim" limited distances. These vehicles are typically large and heavy, and are often designed for one specific task, such as cable burial.

Class V - prototype or development vehicles

Vehicles in this class include those still being developed and those regarded as prototypes. Specialpurpose vehicles that do not fit into one of the other classes are also assigned to Class V.

7.5.2 ROV Tasks

Introduction

ROV tasks are included in the information units that follow.

Observation

Observation is the simplest work mode. It can be undertaken by most ROVs by means of a video camera but without additional equipment and is generally carried out by Classes I and II. It includes tasks where the vehicle moves around an object and situations where the vehicle is effectively stationary, such as when monitoring divers.

Survey

Surveying generally consists of seabed observation, sometimes accompanied by acoustic mapping. Surveys are usually undertaken before and after pipeline, umbilical, and cable installation. They may also be undertaken prior to or after seabed construction or equipment installation or removal. The purpose of the survey may be:

- Fixing geographical coordinates
- Ensuring the target is within a permitted corridor or area
- Ensuring the target is adequately buried
- Identifying any unsupported areas or lengths of pipeline
- Examining the physical condition of the target
- Ensuring debris has been located, identified and, if necessary, removed

Depending on the level of detail required, surveys can be performed by any class of ROV, but are generally carried out by Classes II, III, or IV.

Inspection

It is often difficult to distinguish between inspection and survey tasks, particularly as an ROV may carry out both types of tasks in a single dive. Inspection tasks usually concentrate on specific, pre-defined areas of offshore structures and subsea equipment. These tasks often include detailed visual examination and other nondestructive tests that may require the ROV to be fitted with additional sensors, such as CP measurement probes.

Inspection tasks are normally carried out by Class II or III vehicles.

Construction

These tasks require a vehicle with two manipulators (that is, normally Class III). Such vehicles can carry out a wide range of tasks involving physical intervention, including removal of debris, and connection or disconnection of lifting strops and actuation of valves. Cameras held by manipulators can be used to obtain pictures in areas of restricted access or at difficult angles. Some construction projects, particularly those in deep water, use seabed equipment that can be operated by one ROV or by a number of ROVs simultaneously.

Intervention

Many ROVs have tool packages that are specifically designed for use with particular items of subsea equipment such as manifolds, wellheads, and control pods. For example, an ROV may be capable of changing a failed well control valve and returning it to the surface for repair. It is also common for ROVs to support drilling by undertaking tasks such as replacing AX/VX ring seals, connecting or disconnecting hydraulic and electrical lines, and operating valves.

Burial and trenching

Some ROVs fitted with suitable trenching equipment are used where soil characteristics are favorable for burial or trenching operations. Performance of a burial and trenching vehicle is largely dependent on how accurately the prevailing soil conditions on the work location(s) have been established and how the actual conditions experienced correspond to the inherent as-designed trenching capability of the vehicle.

7.5.3 Environmental Conditions

Introduction

The Master, officers, and crew of any vessel on which an ROV is installed **must** be aware of the additional hazards that exist and the constraints placed on the vessel when operating with an ROV on board. Ideally the positioning of the ROV umbilical winch and launch and recovery equipment is clearly visible from vessels aft bridge control position so that launch and recovery operations can be monitored. Remote TV monitoring may also be used. It is common practice for television monitors to be positioned on the bridge of a vessel so that the status of the ROV operation is available to bridge personnel.

The safe and efficient deployment and operation of ROVs depends on suitable environmental conditions. For any given situation, the combination of conditions can be dramatically different and it is the responsibility of the ROV supervisor to assess all available information before deciding to conduct ROV operations. The decision on conducting an ROV operation rests with the ROV Supervisor. However the Master can and should suspend or delay any ROV operation when the environmental conditions affect the operation of the vessel itself. (An example is a strong surface current requiring sustained high power inputs from main engines and thrusters to maintain position for ROV operations in close proximity to a facility.)

ROV contractors normally define clear environmental operating limits. The Vessel Master should consult with the ROV supervisor to ensure that they both agree and understand the implications of all limitations that apply to vehicles and deployment systems.

Environmental aspects that affect ROV operations are highlighted below.

Weather

While ROVs themselves are not normally sensitive to weather, the cost and efficiency of ROV operations can be affected in a number of ways:

- Wind speed and direction can make station keeping difficult for the support vessel and adversely affect ROV deployment.
- Rain, fog, or other conditions can reduce surface visibility and create a hazard for the support vessel.
- Adverse combinations of wind, rain, and snow can make deck work extremely hazardous for the ROV crew.

Hot weather and humidity can cause the ROVs electronics to overheat or be susceptible to moisture ingress during deck checks. Armored or live boat umbilicals operationally in use or stored in open deck areas may also be susceptible. Operations should, therefore, be carefully monitored with regard to the safety of both personnel and equipment.

Sea state and swell

Sea state can affect every stage of an ROV operation.

Safety **must** always be considered carefully when launching or recovering an ROV and particularly from a support vessel in rough seas. ROV operators should understand the effect of a heaving support vessel on a cable attached to a relatively motionless ROV and be aware that the ROV handling system can be overloaded or that personnel on deck may be exposed to the risk of an accident.

In rough sea conditions, personnel involved with launch and recovery **must** wear all necessary personal protective equipment and fully understand their own role as well as the roles of others involved in the operation, such as the master of the support vessel. Good communication is vital for avoiding accidents.

In certain situations, purpose-built deployment systems, such as motion compensation systems, can either reduce or better accommodate the effect of wave action, thereby enabling ROV operations to be conducted in higher than normal sea states while maintaining safety standards.

Currents

Currents can cause considerable problems in ROV operations. Currents do not remain constant for long, even close to the seabed. Currents vary with location and surface currents can be quickly changed by the wind. Layered currents at different depths can also occur. Tide meters are useful indicators of current strength and direction at any particular depth.

Factors that affect ROV operations, including their maneuverability in currents, include:

- Length and diameter of umbilical cable
- Propulsive power
- Depth and orientation to the current
- Non-uniformity of current profile
- Umbilical "strumming" or "spinning" in deep water (this may necessitate the use of specially designed umbilicals)
- Vehicle hydrodynamics (that is, surface area and profile)

Seabed characteristics

When planning an ROV operation, determine local seabed conditions and topography. Rocky outcrops or seabed equipment (manifolds, pipelines, and so forth) make collisions more likely, add to the risk of abrasion to the vehicle's tether, and affect operations by blocking video and sonar equipment.

Soft or silt seabed bottom conditions can make operations very difficult because particulate material can be stirred up by a heavy landing or thruster use close to the seabed.

Pilot experience

The operator or pilot experience is an important factor in ROV operations, particularly in areas of strong current. Knowledge of the vehicle's capabilities and limitations is essential.

7.5.4 Hazards

Introduction

The following hazards on a vessel or a facility present a potential risk to ROV operations:

- Propellers and thrusters suction and wash into which the ROV umbilical can be drawn.
- Water intakes and discharges.
- Projections from the hull that can snag the umbilical.
- Loss of position by DP, joystick, or manual control, particularly if the ROV is "stabbed" into or attached to a piece of subsea equipment.
- Other vessels coming alongside the ROV vessel.
- Operations on deck that could potentially damage ROV equipment.
- Misunderstood or poor communications between bridge and ROV.
- Inexperienced bridge personnel and main deck personnel (MOB).
- Vessel propulsion and thruster failure.
- Vessel equipment failure (power supplied by vessel to ROV equipment).
- Simultaneous operations (SIMOPS) on a facility under which an ROV is working.

7.5.5 Responsibilities

Introduction

This section contains responsibilities related to ROV work.

Master of a vessel

The Master of the vessel or floating structure from which ROV work is to take place has overall responsibility for safety of the vessel and all personnel on board. The Master should, if required, instruct the ROV Supervisor to suspend or terminate ROV operations for safety or operational reasons. The Master should also:

- Ensure the ROV team on-board participates in the vessel permit to work system, Job Safety Analysis (JSA), safety meetings, and safety programs as appropriate.
- Ensure appropriate interface during any risk assessment relevant to ROV operations.
- Ensure communications between the ROV team and bridge are clear, succinct, and completely understood.
- Position the vessel optimally relative to environmental forces to afford the safest and most stable platform for launch, recovery, and all phases of the ROV operation.
- Safely position the vessel relative to any installation such that in the event of any propulsion failure, the vessel will drift clear. If ROV operations require working on the weather side of an installation, revise the work program, if possible, to avoid working the weather side until environmental conditions are more favorable or develop suitable mitigation measures.
- Advise the ROV Supervisor of any vessel equipment defect that would require the ROV to be recovered and operations suspended.
- Ensure that emergency procedures for cutting the ROV umbilical are understood by all involved in the operation.
- Understand that maintenance of the ROV equipment presents a potential risk to the ROV team, vessel, and crew (for example, stored energy in the form of hydraulic accumulators, springs electrical energy, and wires under tension). Maintenance work should utilize a JSA that clearly identifies all relevant risks.

ROV contractor

The ROV contractor is responsible for providing written documentation defining the management structure for an ROV operation. In addition, there should be a clear handover of supervisory responsibilities at an appropriate stage of operation, again recorded in writing.

The ROV contractor is responsible for ensuring that:

- A risk assessment has been carried out and necessary resulting actions taken.
- The ROV support location is suitable and safe.
- There are sufficient competent personnel in the ROV team.
- Suitable plant and equipment is supplied, correctly certified, and properly maintained.
- A suitable work plan is prepared and is available that includes emergency and contingency plans.
- Records of all relevant project details are kept.
- Adequate arrangements exist for first aid and medical treatment of personnel.
- There is a clear reporting and responsibility structure in writing.
- All relevant regulations are complied with.

ROV Supervisor

ROV Supervisor are responsible for the operation that they have been appointed to supervise, and they should only hand over control to another suitably qualified person. Documentation of such a handover should be entered in the relevant operations logbook.

The supervisor with overall responsibility for the operation is the only person who can order the start of an ROV operation, subject to appropriate work permits and so forth. Other relevant parties, such as the Master or Offshore Installation Manager (OIM), shall be empowered to instruct the ROV Supervisor to terminate work for safety or operational reasons.

The ROV Supervisor **must** liaise closely with the Vessel Master. In such circumstances, the supervisor **must** recognize that the Vessel Master has responsibility for the overall safety of the vessel and all persons on board.

The supervisor can give direct orders relating to health and safety to any person taking part in the ROV operation, including a representative of the client. For example, the ROV Supervisor may order personnel to leave the ROV control area or to operate equipment.

To ensure that the ROV operation is carried out safely, the supervisor should adhere to the following points:

- Be satisfied that he or she is competent to carry out the work and that he or she understands his or her own areas and levels of responsibility and who is responsible for any other relevant areas. These different responsibilities should be documented.
- Be satisfied that the personnel on the ROV team are competent to carry out the work required of them.
- Check that the equipment proposed to use for any particular operation is adequate, safe, properly certified, and maintained. Ensure that the equipment is adequately checked by himself or herself or another competent person prior to use. These checks should be documented on an operation checklist, and recorded in the operations log.
- When the operation uses, or plans to use, complex or potentially hazardous equipment, ensure that the possible hazards are evaluated and fully understood by all parties and that any necessary training is given if required. This is carried out as part of the risk assessment during the planning of the operation and should be documented. If the situation changes, the work should not proceed until the risk assessment has been re-evaluated to determine if the controls are still adequate and if not, appropriate changes made. Supervisors meet their responsibilities by ensuring that this documentation exists and follow any guidance contained in it, such as manufacturers' instructions.
- Ensure that all relevant parties are aware that an ROV operation is going to start or continue. They also need to obtain any necessary permission before starting or continuing the operation, normally through a permit-to-work system.
- Should have clear audible and, if possible, visual communications with any critical personnel under supervision. For example, a supervisor is able to oversee the raising and lowering of an ROV adequately if there is a direct audio link with the winch operator, even though the winch may be physically located where the supervisor cannot see it or have direct access to it.

Other ROV personnel

Other ROV personnel should act in a responsible manner, follow the ROV supervisor's instructions, and adhere to all applicable ALNG procedures. Should any of the ROV personnel identify that any aspect of the job is unsafe, it is their responsibility to request that the work be stopped.

Other personnel

The actions of other personnel can have a bearing on the safety of the ROV operation even though they are not members of the ROV team. These other personnel include:

- ALNG personnel, if ALNG appoints an on-site representative; this person should have the necessary experience and knowledge and be competent for this task.
- Primary contractor (for example Engineering, Procurement, and Construction Contractor [EPC]) carrying out work for the Company and overseeing the work of the ROV contractor according to the contract.
- OIM responsible for the zone inside which ROV work is to take place.

7.6 Dive Support Operations

Introduction

This section describes the activities and responsibilities of the Vessel Master when a vessel is engaged in dive support operations.

The high risk and the criticality of this activity request a strong preparations and cooperations between parties involved for developing procedures to support diving activities. This is done on a case-by-case basis, as diving activities are required. The procedures are developed in conjunction with stakeholder or industry standards, documents, and practices (or all).

Reference: The International Association of Oil and Gas Producers (OGP) *Diving Recommended Practice*

Vessel Master responsibilities

Master's responsibilities include:

- Identify and discuss potential risks with the diving contractor during preparation of the diving plan.
- Be aware of the limitations on rate of diver ascent and time required to recover divers from working depth.
- Establish agreed means of communication with the Diving Supervisor and advise on matters considered relevant to the diving operation (for example, changes in the sea condition, visibility, and so forth).
- When diving from vessels using DP system for maintaining station, ensure that in the event or likely event of "drift off" the Diving Supervisor is directly informed and if necessary recovery of the divers is arranged.
- Prevent the occurrence of activities that may endanger those involved in the dive project and where necessary notices should be posted at machinery vital to the diving operation to prevent inadvertent stopping or starting.
- Prohibit diving operations while vessel is underway.
- Ensure safety of personnel working in the area, a safe location for the diving project, and secure onboard equipment and plant.
- Where the vessel provides diving equipment, ensure such equipment is suitable for the safe conduct of the diving project and is maintained in safe working condition.

The Master may terminate the dive for safety reasons. Where time permits, this would normally be in consultation with the Dive Supervisor.

7.7 Other Offshore Specialized Vessels

Other specialized vessels

Specialized Project marine operations vessels may include:

- Heavy lift crane barge or vessel
- Installation vessels
- Pipe and cable lay vessels
- Accommodation vessels
- Heavy lift transportation vessels
- Other specialized vessels used in the offshore oil and gas industry

Many of the general marine safety and operational guidelines that are addressed in this *Marine Operations Manual* (MOM) also apply to these types of vessels.

Details on the specialized type of operation or activity these vessels are contracted to perform should be contained within the specific Project documentation and procedures.

In case vessels need to be berthed at Terminal a dedicated mooring analysis and ad hoc mooring plan must be prepared by Marine Specialist and submitted to Vessel Master, OIM and Chioggia Pilot.

Level 2 and 3 vessel inspections

Level 2 and 3 vessel inspections are directed at specialized project marine vessels such as those listed above, where the level of inspection is directed more towards the vessels specialized activity and the associated equipment such as heavy lift crane operations, dive support, accommodation vessels, and so forth.

ALNG typically uses a comprehensive Marine Safety Checklist to evaluate vessel and operator qualifications as part of the pre-award process and during operations. ALNG stakeholder and industry processes are available to be used when anticipating use of these types of vessels.

8 LNGC OPERATIONS

Overview

Introduction

The ALNG Terminal present one marine berth to which Liquefied Natural Gas Carriers (LNGCs) of up to 320 m in length are conventionally moored under tug assistance. LNGCs typically remain at the Terminal for approximately 24 hours (Conventional Vessel) and 32 hours (Q-Flex Vessel).

Berthing operations are conducted day and night. A total of approximately 18 mooring lines contained on self-stowing winches are used during each mooring operation.

The purpose of this chapter is to serve as the interface document between the LNGc and Terminal operations.

For a further detailed understanding of the step-by-step procedures involved in connection, testing and disconnection, purging and draining of the loading arms, reference **must** be made to the FMC Technologies (FMC) *Operations Procedures Manual* for the loading arms and ALNG document ITAT-AKO-30-OP694-PP-800 LNG Offloading System.

In this chapter

This chapter contains the following information:

- 8.1 Using This Chapter
- 8.2 Cargo Handling
 - 8.2.1 Pre-Checks
 - 8.2.2 Berthing
 - 8.2.3 Setting the Gangway
 - 8.2.4 Establishing the Ship/Terminal Communication and ESD Systems
 - 8.2.5 Ship/Terminal Pre-Transfer Meeting
 - 8.2.6 Connecting the Vapor Return Arm
 - 8.2.7 Connecting the Liquid Discharge Arms
 - 8.2.8 Purge with N2 and Leak Test the Ship/Terminal Joint
 - 8.2.9 Returning Boil-off Vapor to LNGc
 - 8.2.10 Pre-Transfer ESD (1) Test Under Warm Conditions
 - 8.2.11 Cooling Down the Liquid Loading Arms
 - 8.2.12 Pre-Transfer ESD (1) Test Under Cold Conditions
 - 8.2.13 Start Transfer
 - 8.2.14 During Transfer
 - 8.2.15 Rate Down
 - 8.2.16 Draining/Inerting the Liquid Loading Arms with N2

- 8.2.17 Purging/Inerting the Vapor Return Arm with N2
- 8.2.18 Disconnecting the Liquid Loading Arms
- 8.2.19 Disconnecting the Vapor Return Arm
- 8.2.20 Ship/Terminal Post-Transfer Meeting
- 8.2.21 Disconnecting the Ship/Terminal ESD Pneumatic Hose
- 8.2.22 Removing the Ship/Terminal Communication System
- 8.2.23 Removing the Gangway
- 8.2.24 Unberthing
- 8.3 ESD Cause and Effects
 - 8.3.1 Loading Arms
 - 8.3.2 Terminal/LNGc Activated ESD
- 8.4 Liquid and Vapor Line Operating Envelopes
- 8.5 LNG Loading Arm Connection Assistance System
 - 8.5.1 LNG Carrier Manifold
 - 8.5.2 Loading Arm
 - 8.5.3 Cable Guided Spool Arrangements
- 8.6 Gangway Arrangement and Operating Envelopes
 - 8.6.1 Gangway Profile
 - 8.6.2 Gangway Plan
 - 8.6.3 Gangway Spring Arrangements
- 8.7 Ship/Terminal Connection Pin Configurations
 - 8.7.1 SeaTechnik Fiber Optic
 - 8.7.2 SeaTechnik Electric Wire Link
 - 8.7.3 Nitta Moore Pneumatic Hose Connection
- 8.8 General Information LNGc Mooring and Offloading Operations
- 8.9 Pre-Transfer Meeting Agenda

8.1 Using This Chapter

Users

This chapter is intended for all personnel involved in the LNGc berthing and offloading operations, including the following key figures:

- LNGc Master
- LNGc Officers and Crew
- LNGc Operator
- Loading Master (also referred to as the Marine Specialist)
- Pilot
- Offshore Installation Manager
- Terminal Operations Supervisor
- Offshore Operators
- Marine Specialist

Chapter organization

This chapter includes:

- A primary section (Section 8.2) which provides a general overview of various cargo handling processes
- Subsequent sections providing supplementary information on specific aspects related to the offloading processes
- A section of general information relating to the LNGc mooring and unloading operations
- Samples of documents and forms related to LNGc operations

References

The Terminal and each LNGc should have detailed procedures for the operations of their respective facilities. Additional information and regulations about the Adriatic LNG Terminal can be found in:

- Terminal Regulations and Information Booklet
- Port Regulations
- Terminal Measurement Manual

The Loading Master specific responsibilities are performed and has been included into Marine Specialist job position.

Reference: ALNG Loading Master Procedures

8.2 Cargo Handling

Introduction

This section provides a general overview of the many cargo handling processes.

Terminal/ LNGc

Each topic in this section features a table that describes a process. Each task within this process is performed at one of two locations, the *Terminal* or the *LNGc*.

To identify where to perform a particular task, the table features a column titled "Who does it?" Refer to the following table for an example.

Table 8-1 Example Terminal or LNGC Table

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/ LNGc	Each task is performed on the Terminal and LNGc:
		Review the immediate 24 hour forecast
		Make a decision on berthing

In this section

This section contains the following information:

- Pre-Checks
- Berthing
- Setting the Gangway
- Establishing the Ship/Terminal Communication System
- Ship/Terminal Pre-Transfer Meeting
- Connecting the Vapor Return Arm
- Connecting the Liquid Discharge Arms
- Purge with N2 and Pressure Test the Ship/Terminal Joint
- Returning Boil-off Vapor to Ship
- Pre-Transfer ESD (1) Test Under Warm Conditions
- Cooling Down the Liquid Loading Arms
- Pre-Transfer ESD (1) Test Under Cold Conditions
- Start Transfer
- During Transfer
- Rate Down
- Draining/Inerting the Liquid Loading Arms with N2
- Purging/Inerting the Vapor Return Arm with N2
- Disconnecting the Liquid Loading Arms
- Disconnecting the Vapor Return Arm
- Ship/Terminal Post-Transfer Meeting
- Disconnecting the Ship/Terminal ESD Pneumatic Hose
- Removing the Ship/Terminal Communication System
- Removing the Shore Gangway
- Unberthing

8.2.1 Pre-Checks

Introduction

This topic describes the pre-checks process.

The <u>Terminal Operating staff</u> carries out the pre-checks listed in the following table. These checks are completed within 24 hours prior to the estimated arrival time of each LNGc.

Process

The following table lists the tasks for this process.

Table 8-2 Pre-Checks for	LNGC	Unloading
--------------------------	------	-----------

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal	Verify that the following equipment is operating properly:
		Four loading arms
		 Connection assistance system*
		 Shore gangway
		 Valves on the liquid and vapor lines (and their local and remote controls)
		 Fire-fighting appliances
		 Water spray system*
		 Fire detection plant system*
		 Shore activated emergency shutdown (ESD)*
		 Ultra high frequency / very high frequency (UHF/VHF) communication system*
		 Gas detection system*
		 Mooring line tension monitoring system*
		 Berth approaching meters
		Weather observation equipment
		Berth lighting facilities
		 Quick release hooks*
		 Other items per Ship/Shore checklist
		 Terminal tank pressure reduced to 180 m bar prior LNGc berthing
		Note: * In case of back to back shipments within 24 hours, the items
		marked with * only need to be re-checked prior to second vessel berthing.
		References:
		 Loading Arm Operating Procedures
		 Terminal Off-Loading Procedure
		 Terminal Pre-Arrival Checklist
2.	Terminal/Marine	Review the latest weather forecasts, and Terminal status, and make a
	Specialist	decision on the berthing schedule.
3.	Terminal	Confirm that the liquid transfer lines are cooled down and under circulation.

8.2.2 Berthing

Introduction

This topic describes the process for berthing.

Both Terminal and LNGc personnel perform the berthing check tasks as indicated in this section, and as further specified in the *Terminal Regulations and Information Booklet*.

Reference: Terminal Regulations and Information Booklet

Process

The following table lists the tasks for this process.

Table 8-3 Berthing

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	Prior to berthing, the Terminal, LNGc, and Pilot review the immediate 24
		hour forecast and then make a decision on berthing.
2.	Terminal/LNGc	 Normally the Loading Arms are connected to ship's manifold in "Manual Mode". If identified the need and requested by Marine Specialist during the Compatibility process, the Terminal passes the connection assistance system to the LNGc through tug or FSIV (Fast Support Intervention Vessel) (See Section 8.5 for description of the system.) Notes: If vessels is not already fitted with the connection assistance system, the Terminal representative may board the LNGc to assist the LNGc crews on the fitting of the connection assistance system. However, when it is plan the connection in manual condition, the Terminal Representative check is the area is free of obstructions. Loading Arms connection and disconnections are conducted using the connection assistance system when connection assistance system is installed. Reference: Section 8.5, "LNG Loading Arm Connection Assistance
3.	Terminal/LNGc	<i>System"</i> The Marine Specialist at this time may conduct a pre-berthing safety walk
		around the LNGc.
4.	Terminal/LNGc	On boarding, the Pilot on the LNGc notifies the Terminal through VHF radio of the LNGc readiness to start berthing approach and confirms Terminal readiness and Linehandler team ready on Terminal
5.	Terminal/LNGc	Prior to entering the Terminal safety zone the Pilot reconfirms Terminal readiness and permission to make final approach and berthing.
6.	Terminal/LNGc	The Terminal switches on the berth monitoring system.
7.	Terminal/LNGc	The LNGc carries out berthing and mooring of the LNGc.
8.	Terminal/LNGc	The Terminal monitors the berthing and mooring and agrees to the LNGc position at the Terminal (when requested by the LNGc). <i>Note: Terminal and LNGc maintain a log of events throughout operations (time sheet).</i>
9.	Terminal/LNGc	Both the Terminal and LNGc coordinate with mooring teams on line transfer from LNGc to Terminal. The Terminal confirms the mooring line transfer sequence with the LNGc.

Marine Operations Manual - LNGC Operations

TASK	WHO DOES IT?	DESCRIPTION
		The Terminal confirms any special line transfer requirements, including
		use of line throwing apparatus.
10.	LNGc	The LNGc notifies the Terminal that the berthing and mooring is complete
		and vessel is "All Fast."
11.	LNGc	On steam turbine LNGc, the LNGc reports that the steam is shut-off to the
		main turbine and the turning gear is engaged.
		Note: This must be confirmed prior to positioning of gangway.

8.2.3 Setting the Gangway

Introduction

This topic describes the process for setting the gangway between the Terminal and LNGc.

When the mooring operations are complete, and it is confirmed that the LNGc is fast and secure, the gangway is maneuvered and set by the Terminal.

This activity is conducted by the Terminal in coordination with the LNGc.

Process

The following table lists the tasks for this process.

Table 8-4 Setting the Gangway

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal	The Terminal acknowledges with the LNGc readiness for setting the gangway, including confirmation of clearance requirements. Note : Prior to LNGc arrival the gangway landing arrangement should be confirmed (deck ladder or rail saddle arrangement).
2.	Terminal	The Terminal removes any lashing device on the gangway.
3.	Terminal	The Terminal lifts the gangway to allow it to turn freely.
4.	Terminal	The Terminal maneuvers the gangway until it is above the deck.
5.	Terminal	The Terminal stops the gangway above the dedicated position on deck and handrail.
6.	Terminal/LNGc	The Terminal lowers the gangway smoothly to the dedicated position on the deck and handrail.
7.	Terminal	The Terminal then lowers the crane wire to ensure slack on the hoist without interfering with transfer of personnel across the gangway.
8.	Terminal	The Terminal turns the crane hydraulics to neutral position.
9.	Terminal/LNGc	Secure the safe lines positioned at the gangway to the deck on the LNGc. (See Section 8.6.) Reference : Section 8.6, "Gangway Arrangement and Operating Envelopes"
10.	LNGc	LNGc crew should monitor the gangway position and notify Terminal of any requirement to adjust position or slack on crane wire.

8.2.4 Establishing the Ship/Terminal Communication and ESD Systems

Introduction

This topic describes the process for establishing the Ship/Terminal communication and ESD systems.

The Terminal is provided with two primary Ship/Terminal communication links: fiber optic and copper cable (electrical) and a backup Pneumatic system.

Note: Where LNGc are fitted with a fiber optic and electrical system, the fiber optic system is used as the preferred primary link.

Reference: Section 8.7, "Ship/Terminal Connection – Pin Configurations"

Process

The following table lists the tasks for this process.

Table 8-5 Ship/Terminal Communication and ESD Systems

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal	The Terminal checks to determine if the fiber optic and electrical link are
		inhibited (check that the corresponding switch is on "BY-PASS" position) and
		confirms with LNGc that the LNGc system is powered off.
2.	Terminal	The Terminal extends the fiber optic, electrical link, and pneumatic hose to
		the LNGc through messenger line from LNGc.
3.	Terminal/LNGc	The Terminal, in coordination with LNGc, plugs the fiber optic, electrical link,
		and pneumatic hose into the dedicated sockets on the LNGc.
4.	Terminal/LNGc	The Terminal supplies power to the shore communication system and then
		LNGc powers their system.
5.	Terminal/LNGc	The Terminal and LNGc execute communication tests one at a time of both
		fiber optic and electrical systems (healthy signal, hot line, and phone).
6.	Terminal/LNGc	Confirms that the supplied pressure setting for the pneumatic system is
		between 3.5 barg and 5 bar (g) Note the trip pressure is 3.0 barg.
7.	Terminal	Confirm the pressure in the ESD pneumatic hose is above 3.5 barg.
8.	Terminal/LNGc	The Terminal requests that the LNGc lines-up their pneumatic ESD system
		and opens the isolation valve.
9.	Terminal/LNGc	Select pneumatic system (Terminal first) and confirm healthy signal.
10.	Terminal/LNGc	On completion of tests, the agreed primary system is selected (Terminal
		first) and confirmed healthy and the other systems cables are disconnected.
		<i>Note</i> : Default primary system is the fiber optic.
11.	Terminal/LNGc	The Terminal brings onboard the LNGC mooring tension monitoring laptop
		and confirms that the mooring tension monitoring system is enabled and
		the readout is available at the LNGC.
		Note : The mooring tension laptop can receive data only through wireless signal.

8.2.5 Ship/Terminal Pre-Transfer Meeting

Introduction

This topic describes the process for the Ship/Terminal pre-cargo transfer meeting.

Before the cargo transfer operations begin, a pre-transfer meeting is held onboard the LNGc. See *Terminal Regulations and Information Booklet* – Ship/Terminal (Ship/Shore) pre-transfer meeting agenda and required information.

Note: Upon prior agreement between Terminal and LNGc personnel, connection of the vapor return and loading arms, purging and leak testing may take place concurrently with the pre-transfer meeting. The meeting may also be held after the connection and pressure testing of the vapor and loading arms, and completion of the custody transfer measurement. This ensures that the vapor arm is available for LNGc use prior to closing of carrier boil-off gas (BOG) valve and after custody transfer opening measurements.

Reference: *Terminal Regulations and Information Booklet*

Process

The following table lists the tasks for this process.

Table 8-6 Ship/Terminal Communication and ESD Systems

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	Complete safety inspection walk round of LNGc.
2.	Terminal/LNGc	Hold a pre-transfer meeting in the LNGc meeting room. The Marine
		Specialist attends this meeting on behalf of the Terminal.
3.	LNGc	Confirms that "Steam is off the main engine and turning gear is
		engaged." For steaming vessel or main engine disengaged properly
4.	Terminal/LNGc	Confirm the discharge schedule.
5.	Terminal/LNGc	Exchange all necessary information concerning cargo data and
		transfer requirements, including ramp-up and ramp-down
		procedures, required tank pressure, and so on.
6.	Terminal/LNGc	Exchange all necessary information concerning security, facilities,
		safety, and equipment on the LNGc and the Terminal.
7.	Terminal/LNGc	Complete the Ship/Terminal Safety Checklist (except items following
		the ESD test under cold condition).
8.	Terminal/LNGc	Review the latest weather forecast and make a decision whether or
		not to commence transfer.

8.2.6 Connecting the Vapor Return Arm

Introduction

This topic describes the process for connecting the vapor return arm.


The vapor return line is the first arm connected. Due to the motion of the LNGc alongside the Terminal, all arms are connected using the cable assistance system. See Section 8.5, "LNG Loading Arm Connection Assistance System."

Note: The vapor return arm is connected before the liquid loading arms.



IMPORTANT

During the Compatibility process Marine Specialist ensure the possibility for vessel to lower the manifolds handrails in case of need and when the horizontal distance between ship's handrail and manifold flanges are less than 3 meters.

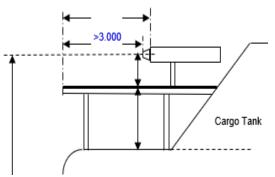

If requested by Marine Specialist the LNGC manifold handrails must be lowered and collapsed one by one prior to loading arm connections and then re positioned after completion of loading arm connections. During the period handrails are lowered access is limited to the manifold area while Terminal staff is performing the loading arm connections. No personnel are to pass adjacent to an area that is open to the sea side. A temporary lashing line is fitted to obstruct the open path to the sea side while the handrails are collapsed. After the loading arms are connected, the handrails must be placed back in the upright position.

Reference: Section 8.5, "LNG Loading Arm Connection Assistance System"

Process

The following table lists the tasks for this process.

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal	Check that the vapor return arm is depressurized.
2.	Terminal/LNGc	Confirm that the cable assistance system spools are fitted and secure at manifold and manifold handrails, if necessary, are lowered
3.	Terminal/LNGc	Prior to connection, the Terminal checks on all the presentationflanges at the LNGc manifold area; they should be free of any surfacedamage or scores.
4.	LNGc	Starts the water curtain at the manifold area.

TASK	WHO DOES IT?	DESCRIPTION
5.	Terminal/LNGc	The Terminal requests that the LNGC prepares the manifold for
		connecting the vapor return arm with manifold valves and bypass
		valves confirmed shut.
6.	Terminal	Confirms powered emergency release coupling (PERC) shaft pins
		removed and loading arms ready for connection.
7.	Terminal/LNGc	The Terminal passes the cable assistance system messenger and
		wires to the LNGc for a connection through the manifold cone.
8.	Terminal	Confirms that the cable assistance system wire is secure and that the
		LNGc is ready for maneuvering and connecting the vapor return arm.
9.	Terminal	Opens the protective cover on the vapor return line coupler and
		checks that flange is free of surface damage or scores.
10.	Terminal/LNGc	The Terminal, in coordination with LNGc, maneuvers the vapor return
		arm to the LNGc side.
		Note: Take care to ensure personnel are clear of the arm maneuvering
		area.
11.	Terminal/LNGc	The Terminal connects the vapor return arm to the LNGc manifold
		and sets the support jack.

8.2.7 Connecting the Liquid Discharge Arms

Introduction

This topic describes the process for connecting the liquid discharge arms.

After completing the connection of the vapor arm, the liquid arms are connected one by one. Due to the motion of the LNGc alongside the Terminal, all arms are connected using the cable assistance system. See Section 8.5: "LNG Loading Arm Connection Assistance System."

Notes:

- Liquid loading arms are connected one by one in coordination with the LNGc according to a pre-established sequence.
- Normally three liquid loading arms are used. Where a reduced flow of LNG is required for an extended period, fewer arms may be connected. This is confirmed at the pre-transfer meeting.
- The LNGc is responsible, prior to berthing, for fitting the targeting spool pieces and having 60 mesh loading strainers in place.

Reference: Section 8.5: "LNG Loading Arm Connection Assistance System"

Process

The following table lists the tasks for this process.

Table 8-8 Connecting the Liquid Discharge Arms

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal	Checks that the liquid loading arm is depressurized and liquid line valves are
		closed.
2.	Terminal/LNGc	Confirm that the cable assistance system spools are fitted and secure at manifold
		and manifold handrails, if necessary, are lowered
3.	Terminal/LNGc	Prior to connection, the Terminal checks all the presentation flanges at the LNGC's
		manifold area. The flanges should be free of any surface damage and scores.
4.	Terminal/LNGc	Requests that the LNGc prepare its manifold for connecting liquid loading arm and
		confirms loading strainers are in place and clear with the double shut and ESD
		valves fully shut.
5.	Terminal	Confirms PERC shaft pins are removed and loading arms are ready for connection.
6.	Terminal/LNGc	The Terminal passes the cable assistance system messenger and wire to the LNGc
		for connection through the manifold cone.
7.	Terminal	Confirms that the cable assistance system wire is secure and that the LNGc is ready
		for maneuvering and connecting the liquid return arm.
8.	Terminal	Opens the protective cover on the liquid line coupler and checks flanges are free of
		surface damage and scores.
9.	Terminal/LNGc	The Terminal, in coordination with the LNGc, maneuvers the liquid loading arm to
		the LNGc.
		<i>Note</i> : Ensure personnel are clear of the arm maneuvering area.
10.	Terminal/LNGc	The Terminal connects the liquid loading arms to the LNGc manifold and sets the
		support jack.
11.	Terminal	Sets the loading arm positioning monitoring system, and sets loading arms for leak
		and ESD testing.
		Reference: Loading Arm Procedures
12.	LNGc	Re-positions manifold handrails in the upright position if previously collapsed

8.2.8 Purge with N2 and Leak Test the Ship/Terminal Joint

Introduction

This topic describes the process for purging with N2 and carrying out the leak pressure testing at the Ship/Terminal connecting point.

Upon completing the connection of the vapor and liquid arms, each arm is purged to less than 2% O2 by volume and pressure tested at a minimum of 5 bars. The manifold face connection is checked for leaks using N2 supplied from the Terminal.

Note: The following steps are executed on all arms one by one. All steps are reported to the LNGc to ensure good coordination.

Note: LNGc must have a correctly calibrated portable O2 meter available, together with test certificate.

Process

The following table lists the tasks for this process.

Table 8-9 N₂ Purging

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal asks the LNGc to confirm that its manifold ESD valve
		and drain and vent valves are closed.
2.	Terminal	Verifies that the PERC double block valves are open.
3.	Terminal	Starts the flow of nitrogen to the arm and starts the pressurizing arm.
4.	Terminal	Allows the pressure in the liquid arms to build up to 5 barg and
		1.75 barg for the vapor arm, then closes the nitrogen supply.
5.	Terminal/LNGc	Checks for leakage at the LNGc manifold face by observing any
		pressure drops in the system and performing a soap solution test.
6.	Terminal/LNGc	The Terminal, upon completion of the pressure test, depressurizes
		the arms on the terminal through the low pressure (LP) flare lines
		with the LNGc depressurizing the residual pressure in the manifold to
		atmosphere.
7.	Terminal/LNGc	Restarts the flow of nitrogen to commence purging.
8.	Terminal/LNGc	Measures the O2 content in the loading arm through the LNGc
		manifold vent valve. Continues purging by raising and venting the
		pressure through the manifold bypass valve until the O2 content in
		the arm is 2% or less, as confirmed by the LNGc personnel.
9.	Terminal	Request that the LNGc confirm its manifold ESD valves, bypass, and
		all vent valves are closed.
10.	Terminal	Terminal staff inserts the PERC pins and arms the PERC by moving the
		valve to energize the micro switch.

8.2.9 Returning Boil-off Vapor to LNGc

Introduction

This topic describes the process for returning the boil-off vapor to the LNGc

Note: The Terminal system is free flow and can be controlled by the LNGc by using the LNGc vapor valve.

Process

The following table lists the tasks for this process.

Table 8-10 Returning	Boil-off Vapor to LNGC
----------------------	------------------------

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal asks the LNGc to confirm its readiness for establishing
		the vapor return line.
2.	Terminal	Determines if the Terminal LNG storage tank pressure must be
		decreased prior to the return of vapor. (Terminal tank pressure
		should be reduced to 180 m bar prior to berthing operations.)
3.	Terminal	Lines up and opens the vapor return line.
4.	Terminal	Terminal notifies LNGc that displacement vapor can be returned to
		the Terminal by the LNGc if required after initial gauging (Step 5).
5.	Terminal/LNGc	The LNGc conducts the initial gauging in coordination with Terminal
		and Cargo Surveyor by confirming that:
		 All spray pumps and compressors are stopped.
		• The gas valve to the boilers is shut and the vapor return valve is
		shut.
		Note : Continual gas burning throughout discharge is allowed if agreed by Shipper and User.
		Reference: Terminal Measurement Manual for detailed
		instructions
6.	Terminal/LNGc	The LNGc notifies the Terminal when the LNGc vapor manifold ESD
		valve is to be opened.
		Note: This occurs normally only after completing the Warm ESD; this is confirmed by the LNGc
7.	Terminal/LNGc	Mutually confirm that the vapor return line is established.
8.	Terminal	Checks the vapor line and vapor arm conditions after the vapor
		return is established.
9.	LNGc	Monitors tank pressures and informs Terminal if pressure is
		increasing.

8.2.10 Pre-Transfer ESD (1) Test Under Warm Conditions

Introduction

This topic describes the process for the Pre-Transfer ESD (1) Test under warm conditions.

Prior to the cool down of the loading arms, the ESD system is tested under warm conditions.

See Section 8.3 for the ESD cause and effects information and Section 8.4 for information about loading arm operating envelopes.

Note: The LNGc may also elect to carry out a warm ESD initiated from the LNGc at this time.

References:

- Section 8.3, "ESD Cause and Effects"
- Section 8.4, "Liquid and Vapor Line Operating Envelopes"

Process

The following table lists the tasks for this process.

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal verifies that Terminal and LNGc ESD valves are open
		and LNGc manifold manual or inner valves are closed.
2.	Terminal/LNGc	Ensures that the primary ESD is enabled.
3.	Terminal/LNGc	The Terminal manually activates the ESD advising the LNGc when it is activated.
4.	Terminal/LNGc	Witnesses the closure of the:
		 LNGc manifold ESD valves and records timing.
		 Terminal ESD valves and records timing.
		Loading arm emergency release system (ERS) double-block valves.
		Signal stop of the LNGc pumps.
5.	Terminal	Checks the ESD effects on the Terminal and reports to the LNGc
6.	LNGc	Checks the ESD effects on the LNGc and reports to Terminal.
7.	Terminal/LNGc	Resets the ESD from the Terminal side first, followed by resetting
		from the LNGc; confirms healthy signals. Resets the ESD shutdown
		from the Jetty cabin and reopens the ERS double block valves. Reports
		mutually.
8.	Terminal/LNGc	Both the LNGc and the Terminal ensure that the ESD valves on their
		respective sides are opened and they report mutually.
9.	Terminal/LNGc	Resets the ESD from the Terminal side first, followed by the resetting
		from the LNGc; confirms healthy signals. Reports mutually.

8.2.11 Cooling Down the Liquid Loading Arms

Introduction

This topic describes the process for cooling down the liquid arms.

Upon satisfactory completion of the warm condition ESD tests, the LNGc cools down the liquid arms by a slow, controlled pumping of the LNG to the Terminal (reference Task 6 below). When the cool down is complete, the LNGc closes its valves in readiness for ESD testing under cold conditions.

Cases

These two cases are considered based on the LNGc side conditions. The procedure and schedule for each case is confirmed at the pre-transfer meeting.

Table 8-12 Cool Down Cases

CASE	LNGC DISCHARGE LINE CONDITION	CARGO TANK CONDITION	PROCEDURE
Case 1	Cold	Ready to discharge	Cool down all liquid loading arms
Case 2	Warm	Ready to discharge	Transfer linesLiquid loading arms

Process

The following table lists the tasks for this process.

Table 8-13 Cooling Down the Liquid Loading Arms

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal	 Ensures that the liquid transfer line LNG circulation is stopped, and that the tank(s), lines, ESD valves, and loading arms are lined up for receipt of LNG for cool-down, with PERC shaft pins in place. Note: The main block valves must be closed and cool-down drain valves must be open.
2.	LNGc	 Completes these tasks: Lines up transfer for cooling down. Opens the three liquid manifold ESD valves. Partially opens the liquid manifold cool-down valves.
3.	Terminal/LNGc	The Terminal and LNGc mutually confirm cooling-down readiness. Note: LNGc advises if vapor return should be started at this time and confirms line up is complete.
4.	LNGC	Completes any internal line-up and starts the cool-down flow of LNG to the loading arms, using one or two spray pumps as agreed with the Terminal during the pre-transfer meeting. Notifies Terminal when started. Note : Cool-down of loading arms should take between 60 to 90 minutes based on a target cool-down rate of 2 C/minute.
5.	Terminal	Checks the liquid loading arms and shore loading lines for leaks and tightens the support jacks as required.

TASK	WHO DOES IT?	DESCRIPTION
6.	Terminal/LNGc	Monitors cool-down rate and coordinates on increasing LNG flow to
		loading arms as required to meet target cool-down rate.
7.	Terminal/LNGc	Stops liquid flow to the loading arms as each loading arm indicates
		liquid full (inboard arm iced over) and indicates temperature sensor
		reading at base of loading arms.
		 The Terminal closes the loading arm cool-down valves.
		 The LNGc closes the manifold cool-down valves.

8.2.12 Pre-Transfer ESD (1) Test Under Cold Conditions

Introduction

This topic describes the Pre-Transfer ESD (1) Test under cold conditions process.

Process

The following table lists the tasks for this process.

Table 8-14 Pre-Transfer ESD (1) Under Cold Conditions

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal and the LNGc check the positions of the valves on the
		liquid and vapor return lines.
2.	Terminal	Requests that the LNGc confirms its liquid and vapor manifold ESD
		valves are open.
3.	LNGc	Confirms readiness.
4.	LNGc	Manually activates the primary ESD advising Terminal on activation.
5.	Terminal/LNGc	Witnesses the closure of the:
		 LNGc manifold ESD valves and records timing.
		 Terminal ESD valves and records timing.
		 Signal stop of the LNGc pumps.
		Note : On ESD signal from LNGc the loading arm emergency release double
		block valves remain open.
6.	Terminal	Checks the ESD effects on the Terminal and reports the results to the
		LNGc.
7.	LNGc	Checks the ESD effects on the LNGc and reports the results to the
		Terminal.
8.	Terminal/LNGc	Resets the ESD from the Terminal side first followed by the resetting
		from the LNGc and reports mutually.
9.	Terminal/LNGc	The LNGc and the Terminal ensure that the ESD valves on each side
		are opened and then mutually confirm the readiness for the ESD test
		from the Terminal.
10.	Terminal	Manually activates the primary ESD advising LNGc on activation.
11.	Terminal/LNGc	Witnesses the closure of the:
		 LNGc manifold ESD valves and records the timing.
		 Terminal ESD valves and records timing.
		 Loading arm ERS double-block valves.
		 Signal stop of LNGc pumps.
12.	Terminal	Checks the ESD effects on the Terminal and reports the results to the
		LNGc
13.	LNGc	Checks the ESD effects on the LNGc and reports the results to the
		Terminal.
14.	Terminal/LNGc	Resets the ESD from the Terminal side first followed by resetting from
		the LNGc, confirming healthy signals. Reports mutually.
15.	Terminal/LNGc	Both the LNGc and the Terminal ensure that the ESD valves on their
		respective sides are opened and report mutually their respective
		readiness for bulk transfer.

8.2.13 Start Transfer

Introduction

This topic describes the Start Transfer process.

The LNGc commences the discharge, as agreed at the pre-transfer meeting, upon completion of the following:

- Satisfactory cold condition ESD tests
- All pre-transfer checks
- All safety checklists

Notes:

- The inspection is conducted, the safety checklist completed, and both are accepted by the LNGc and the Terminal prior to start of the transfer.
- Items of part 8 and part 9 in the Ship/Terminal Safety Checklist ISGOTT (6th Ed.) are re checked at intervals not exceeding that agreed upon at the pre-transfer meeting.
- Prior to starting bulk transfer, the Marine Specialist or designee faxes to the Harbor Master a copy of the completed and signed Ship/Terminal Safety Checklist.

Process

The following table lists the tasks for this process.


Table	8-15	Start	Transfer
TUNIC	0.12	Juit	nunsier

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	Lines-up their respective systems for bulk transfer operations.
2.	Terminal	Verifies:
		 Loading arm PERC system is armed and in transfer mode.
		 Vapor return system is open.
3.	LNGc	Informs the Terminal when liquid manifold manual valves are opened
		and liquid manifold cool-down valves are closed.
4.	Terminal/LNGc	Mutually confirms readiness for the start of transfer.
5.	Terminal/LNGc	The LNGc starts to transfer the cargo at the requested rate from the
		Terminal.
		Note: Ramp up rates to be agreed during pre-transfer meeting.
		Reference : Figure 8.1, Example of Ramp up Rate (7 Pumps), for
		example
6.	Terminal/LNGc	The LNGc and the Terminal monitor the conditions of the transfer
		lines and arms (watching for vibrations, leaks, ice buildup, and
		noises).
7.	LNGc	Confirms with the Terminal the vapor return requirements and the
		opening of the vapor return control valve.
8.	Terminal/LNGc	The LNGc and the Terminal check the vapor lines and vapor arm
		conditions after the Terminal confirms the vapor return to the LNGc
9.	Terminal/LNGc	The LNGc starts to increase transfer rates, as required to meet the
		Terminal's requests at the rate agreed to at the pre- transfer meeting.
10.	Terminal	The Terminal and the LNGc monitor the transfer lines and arms
		conditions after each pump start-up.

Marine Operations Manual - LNGC Operations

TASK	WHO DOES IT?	DESCRIPTION
11.	Terminal/LNGC	The LNGc increases the liquid flow rate in accordance with Terminal's
		requests.
12.	LNGc	Notifies the Terminal when the full liquid flow rate is reached.
13.	Terminal/LNGc	The Terminal requests that the LNGc report its loading lines and
		manifold pressures and temperatures.

Figure 8-1 LNGc Ramp Up / Ramp Down Schedule

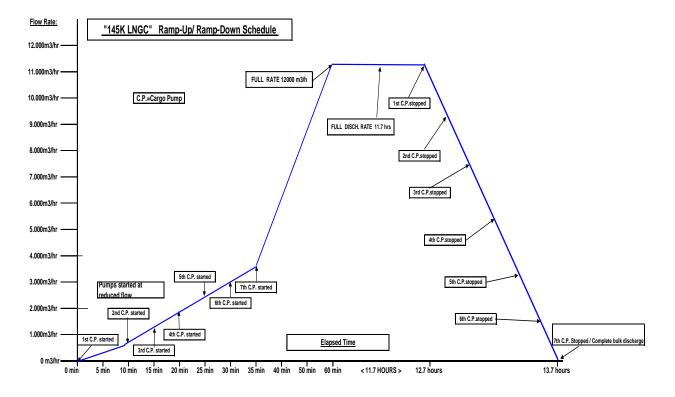

8.2.14 During Transfer

Introduction

This topic describes the During Transfer process.

Both the LNGc and the Terminal maintain a vigilant watch on the transfer operations, as required by the Terminal Regulations.

As much as possible, any change in a transfer requested by one side is agreed by the other side before being implemented.

Process

The following table lists the tasks for this process.

Table 8-16 During Transfer

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	 The Terminal asks, if necessary, the LNGc to provide status update on these items: Estimated discharged quantity Estimated quantity remaining for discharge Estimated time of completion LNGc manifold and tank pressures Note: Any change in unloading rate should be immediately reported to the Terminal.
2.	Terminal/LNGc	Monitors the mooring lines and tension.
3.	Terminal/LNGc	Monitors the position of the loading arms and gangway and advises the LNGc or Terminal of any changes.
4.	Terminal	During the first hour of transfer, the Terminal verifies that the LNG density is as per the certificate of quality. <i>Note</i> : If the density difference or improper mixing in shore tank is observed, shutdown of transfer maybe required.
5.	LNGc	Notifies the Terminal of progress of any actual or expected changes in conditions on the LNGc which would affect the transfer or safety.
6.	Terminal	Notifies the LNGc of progress of any actual or expected changes in conditions on the Terminal, which would affect the transfer or safety.
7.	Terminal/LNGc	The Terminal and the LNGc complete the periodic Ship/Terminal Safety Checklist.
8.	Terminal/LNGc	The Terminal and the LNGc monitor the weather conditions and forecasts. <i>Note:</i> For membrane LNGc, evaluate the forecast prior to entering partial fill limits and determine if it is "go" or "no go."

8.2.15 Rate Down

Introduction

This topic describes the Rate Down process.

The LNGc keeps the terminal informed on the draining activities and tells them when discharge is complete.

Process

The following table lists the tasks for this process.

Table 8-17 Rate Down

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The LNGc notifies the terminal one hour before beginning the rate
		down.
2.	LNGc	Reduces the transfer rate and stops the pumps one by one for rate
		down as required.
3.	LNGc	Notifies the Terminal of each pump stop.
4.	LNGc	Notifies the Terminal when vapor return is no longer needed and the
		main vapor return valve can be closed.
5.	LNGc	Stops the last transfer pump as required.
6.	LNGc	Notifies the Terminal of the transfer completion (when all the LNGc
		transfer pumps are stopped).
7.	Terminal	Closes the main valves in the unloading line from each loading arm.
8.	Terminal/LNGc	Mutually confirms that the liquid flow is stopped.
9.	LNGc	Notifies the Terminal that the LNGc manifold ESD valves are closed.

8.2.16 Draining/Inerting the Liquid Loading Arms with N2

Introduction

This topic describes the process for draining/inerting the loading arms with N2.

Upon completion of the transfer, the loading arms are fully drained to the Terminal and the LNGc prior to beginning the tank gauging.

Upon completion of the gauging, the liquid arms are inerted with nitrogen from the Terminal.

Note: Final gauging may be conducted any time after the completion of liquid loading arm draining.

Note: The PERC pins must be removed to disable the loading arm release while personnel are working at the LNGc manifold area.

Process

The following table lists the tasks for this process.

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal asks the LNGc to prepare for draining/inerting the liquid
		loading arms.
2.	Terminal	Checks that the LNGc liquid manifold manual valves are closed.
3.	Terminal	Supplies nitrogen into the liquid loading arms to 5 barg and drains
		Terminal side of the loading arms to the Terminal first.
4.	Terminal	On completion of draining loading arms to Terminal, the Terminal
		advises the LNGc to line up for draining lines to the LNGc side.
		Terminal staff disables the ESD disconnection by removing the PERC
		pins and moving the valve to de-energize the micro switch.
5.	Terminal/LNGc	LNGc to commence draining line by line building pressure inline to 5
		barg and then opening the manifold by pass valve. This may need to
		be to be repeated two or three time to fully drain lines.
		Note: Carrier should drain lines such that they are kept in the same
		condition as the initial Custody Transfer System (CTS).
6.	Terminal/LNGc	Upon completion of draining, the Terminal requests the LNGc to close
		its liquid manifold cool-down valve.
7.	Terminal/LNGc	The Terminal witnesses the draining completion on the LNGc liquid
		manifold drain valve (in coordination with LNGc).
8.	Terminal/LNGc	Inhibits ESD system and reports mutually.
9.	LNGc	The LNGc:
		 Conducts final gauging in coordination with the Terminal.
		 Confirms master gas valve to boilers is shut.
		Note: Continual gas burning throughout discharge is allowed on
		agreement between Shipper and User.
		Confirms full closure of manifold ESD valves.
		References:
		Measurement Manual
10	Terminal/LNGc	Procedure Manual
10.	Terminal/LINGC	Terminal asks the LNGc to line up the liquid manifolds for nitrogen purging back to the vessel.
11	Terminal	
11.	Terminal Terminal/LNGc	Inerts the liquid loading arms with nitrogen back to the LNGC.The Terminal and the LNGc check the hydrocarbon content through
12.	Terminal/Lindc	
		the LNGc's liquid manifold vent valve.
		IMPORTANT
		Venting to atmosphere should be restricted to the absolutely strict
		minimum.
		Note: LNGc should have a fresh water hose available if required to clear
		ice.
13.	Terminal/LNGc	Continues inerting until the hydrocarbon content drops below 1% vol
		as confirmed by LNGc personnel.
14.	Terminal	Stops the nitrogen supply and closes the valves on the liquid lines.
15.	Terminal/LNGc	The Terminal asks the LNGc to depressurize the lines and close its
		liquid manifold drain and vent valve and ESD valve.

Table 8-18 Draining/Inerting Liquid Loading Arms with N_2

8.2.17 Purging/Inerting the Vapor Return Arm with N2

Introduction

This topic describes the process for purging/inerting the vapor return arm with N2.

Note: After the liquid arms are inerted, the vapor line is inerted.

Process

The following table lists the tasks for this process.

Table 8-19 Purging/Inerting the Vapor Return Arm	with N ₂
--	---------------------

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal asks the LNGc to prepare for purging and inerting the
		vapor return arm.
2.	Terminal/LNGc	The LNGc closes its vapor manifold ESD valve. This is witnessed by the
		Terminal.
		The Terminal then closes its vapor valve.
3.	Terminal	Supplies nitrogen in the vapor return line.
4.	Terminal/LNGc	The Terminal asks the LNGc to open its vapor manifold by-pass valve.
5.	Terminal/LNGc	The Terminal and the LNGc check the hydrocarbon content through
		the LNGc liquid manifold vent valve.
		Note: Venting to atmosphere should be restricted to the absolutely strict
		minimum.
6.	LNGc	Continues inerting until hydrocarbon content drops below 1% vol.
7.	Terminal	Stops the nitrogen supply and closes the valves on the vapor return
		line.
8.	Terminal/LNGc	The Terminal asks the LNGc to depressurize the line and close its
		vapor manifold vent valve.

8.2.18 Disconnecting the Liquid Loading Arms

Introduction

This topic describes the process for disconnecting the liquid loading arms. The liquid arms are disconnected using the connection assistance system.

Note: The liquid loading arms are disconnected prior to the disconnection of the vapor arm, and then stored one by one.



IMPORTANT

See point 8.2.6

Process

The following table lists the tasks for this process.

Table 8-20 Disconnecting the Liquid Loading Arms

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal and the LNGc verify the closure of all the LNGc liquid
		manifold ESD and manual valves.
2.	Terminal	The Terminal:
		 Prepares for the arm disconnect
		Confirms ESD is inhibited
		 Deactivates the position monitoring system
		 Removes the jacks
3.	Terminal	Notifies the LNGc of the ESD inhibition.
4.	Terminal/LNGc	The LNGc de-ices the manifold flanges with fresh water as required.
5.	Terminal/LNGc	Terminal and the LNGc confirm that the liquid arms are
		depressurized.
6.	Terminal/LNGc	Terminal and the LNGc confirm that the connection assistance system
		is set for arm disconnection and manifold handrails are ready to be
		lowered if necessary.
7.	Terminal	Disconnects the liquid loading arm.
8.	Terminal	Retracts the loading arm to the intermediate position.
9.	Terminal	Slacks the cable to allow the disconnection of the cable from the
		spool.
10.	Terminal/LNGc	The Terminal and the LNGc disconnect the cable and roll back to the
		Terminal end.
11.	Terminal/LNGc	The Terminal and the LNGc visually check the integrity of the LNGc
		liquid arm strainer.
12.	LNGc	Installs the blinds on the LNGc liquid manifold.
13.	Terminal	Maneuvers the loading arm to the stored position and installs the
		blinds.

8.2.19 Disconnecting the Vapor Return Arm

Introduction

This topic describes the process for disconnecting the vapor return arm. The vapor arm is disconnected using the connection assistance system.

Process

The following table lists the tasks for this process.

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal and the LNGc verify the closure of the LNGc vapor
		manifold ESD and by-pass valves.
2.	Terminal	The Terminal:
		 Prepares for the arm disconnect
		 Deactivates the arm PERCs
		 Removes the jacks
3.	Terminal/LNGc	The Terminal and the LNGc confirm that the vapor arm is
		depressurized.
4.	Terminal/LNGc	The Terminal and the LNGc confirm that the connection assistance
		system is set for arm disconnection.
5.	Terminal	Disconnects the vapor return arm.
6.	Terminal	Retracts the vapor return arm to the intermediate position.
7.	Terminal	Slacks the cable to allow the disconnection of the cable from the
		spool.
8.	Terminal	The Terminal and the LNGc disconnect the cable and roll back to the
		terminal end.
9.	LNGc	Installs the blinds on the LNGc vapor manifold.
10.	Terminal	Maneuvers the vapor return arm to the stored position and installs
		the blinds.
11.	LNGC	If collapsed before return the arm, than return handrails to the
		upright position.

8.2.20 Ship/Terminal Post-Transfer Meeting

Introduction

This topic describes the process for conducting the Ship/Terminal post-transfer meeting.

Note: *This meeting is held prior to the departure of the LNGc.*

Process

The following table lists the tasks for this process.

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal and the LNGc hold a post-transfer meeting in the LNGc
		meeting room.
		Note : The Marine Specialist must attend this meeting.
2.	Terminal/LNGc	The Terminal and LNGc complete and agree on the Safety Checklist.
3.	Terminal/LNGc	The Terminal and the LNGc exchange all necessary information
		concerning departure.
		Any issues encountered during the LNGc stay are discussed at this
		stage, together with any noticeable incidents.
4.	Terminal/LNGc	The Terminal and the LNGc complete and agree on all the required
		documents and records.

8.2.21 Disconnecting the Ship/Terminal ESD Pneumatic Hose

Introduction

This topic describes the process for disconnecting the Ship/Terminal ESD pneumatic hose.

Process

The following table lists the tasks for this process.

Table 8-23 Disconnecting the Ship/Terminal ESD Pneumatic Hose

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal	Notifies the LNGc of the ESD pneumatic hose disconnection.
2.	Terminal/LNGc	The Terminal and LNGc confirm that the ESD link is inhibited and they report mutually.
3.	Terminal/LNGc	The Terminal depressurizes the ESD pneumatic hose after the closure of the LNGc pneumatic valve.
4.	Terminal	Disconnects and removes the ESD pneumatic hose from the LNGc

8.2.22 Removing the Ship/Terminal Communication System

Introduction

This topic describes the process for removing the Ship/Terminal communication system.

Process

The following table lists the tasks for this process.

Table 8-24 Removing the Ship/Terminal Communication System

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal	Notifies the LNGc of the disconnection of the primary link.
		Note : To be completed by Terminal staff.
2.	Terminal/LNGc	The Terminal, in coordination with the LNGc, removes the primary link from the LNGc

8.2.23 Removing the Gangway

Introduction

This topic describes the gangway removal process.

Note: The Terminal removes the gangway at the LNGc request.

Process

The following table lists the tasks for this process.

Table 8-25 Removing the Gangway

TASK	WHO DOES IT?	DESCRIPTION
1.	Terminal/LNGc	The Terminal and the LNGc ensure that all the Terminal/shore
		personnel have departed from the LNGc, and that the LNGc crew and
		pilot are on board the LNGc, confirm "tensor monitor and terminal
		bag" has been returned to Terminal.
2.	LNGc	Releases the gangway "spring lines" and coil at the gangway landing
		platform.
3.	Terminal/LNGc	When the gangway is clear of personnel, the Terminal, in coordination
		with the LNGc, lifts the shore gangway and maneuvers to the stored
		position.
4.	Terminal	Secures the gangway.

8.2.24 Unberthing

Introduction

This topic describes the unberthing process.

Reference: Terminal Regulations and Information Booklet

Process

The following table lists the tasks for this process.

Table 8-26 Unberthing

TASK	WHO DOES IT?	DESCRIPTION	
1.	Terminal	Ensures that the berthing aid system is in unberthing mode.	
2.	Terminal/LNGc	The Terminal and the LNGc mutually confirm the readiness for unberthing.	
3.	LNGc	Carries out the unberthing of the LNGc	
4.	Terminal/LNGc	The Terminal, directed by the LNGc, coordinates with the line handling team(s) on the release of the mooring lines.	
5.	Terminal	Monitors and reports LNGc position at the Terminal.	
6.	Terminal/LNGc	The LNGc removes the connection assistance system to tug or crew supply vessel for the return to the terminal.	

8.3 ESD Cause and Effects

Introduction

This section is primarily intended to provide a general overview of ESD causes and effects.

In this section

This section includes the following topics:

- Loading Arms
- Terminal/Carrier Activated ESD

8.3.1 Loading Arms

Loading arm ESD system

In order to minimize the potential hazard of a release of LNG and protect the loading arm system, the loading arms are fitted with a positioning monitoring system.

This system displays the real time position of the loading arms and activates the following alarms if any of the loading arms go outside the set parameters for each alarm point.

ALARM	DESCRIPTION	
Pre Alarm	Warns operator if the loading arms go outside a square working area with sides of 2 m	
	around the loading arm flange center point. If one of the arms goes outside this area an	
	intermittent horn signal and light alarm is generated.	
ESD-1 (Terminal	Allows a rapid shutdown LNGc transfer system and emergency closure of the Terminal	
Initiated)	shutdown valves including the double valves of the powered emergency release couplin	
	on the loading arms.	
ESD-1 (Vessel	Allows a rapid shutdown LNGc transfer system and emergency closure of the Terminal	
Initiated)	shutdown valves.	
ESD-2	Allows the automatic uncoupling of the loading arms to protect the loading arm system	
	and allows rapid preparation for departure of the LNGc in an emergency situation.	

Table 8-27 Position Monitoring System Alarms

ESD1

The following table lists the cause and effects for a Loading Arm ESD (1).

Table 8-28 Loading Arm ESD (1) Cause and Effect

	EFFECT			
CAUSE	LNG CARRIER	TERMINAL		
 Loading arm out of 	 ESD alarm activated 	ESD (1) alarm activated		
position first step limit	 Trip LNGc cargo and 	 Start to close Terminal ESD valves (50 		
 Manual activation 	spray pumps	seconds) and PERC double valves – all arms		
from Terminal	 Start to close ESD Valves 	(5 seconds)		
	(30 seconds)	 Loading arm hydraulic pump starts 		

ESD2

The following table lists the cause and effects for a Loading Arm ESD (2).

Table 8-29 Loading Arm ESD (2) Cause and Effect

		EFFECT			
CAUSE			LNG CARRIER	TERMINAL	
 Loadin 	g arm out of position second	•	N/A	•	ESD (2) alarm activated
step limit				•	Powered emergency couplings (PERC)
 Manua 	l activation from Terminal				release

8.3.2 Terminal/LNGc Activated ESD

Terminal LNGc linked ESD system

The following table lists the causes, and their effects, that initiate an emergency shutdown of transfer pumps on the LNGc and the closure of Terminal and LNGc ESD valves.

ADDITIONAL ESD (1) TRIP CAUSE			
LNGC	TERMINAL		
 ESD signal shut-down from Terminal 	ESD Signal shut-down from LNGc		
 LNGc auto trips including: 	 Terminal auto trips including: 		
 Fire, gas detection and alarm 	 Low low pressure in loading arm hydraulic system 		
 Loss of power 	 Fault in emergency release system 		
 Tank or header low pressure 	 Fire or gas alarm (PERC double ball valves close 		
 Tank levels high 	after 20 seconds delay)		
	 Transfer automated valve closed 		
	 Loss and failure of ship/shore link 		
	EFFECT		
ESD alarm activated	ESD (1) alarm activated		
 Trip LNGc cargo and spray pumps 	Local Klaxon alarm		
 Start to close ESD valves (28 seconds) 	 Start to close Terminal ESD valves (50 seconds) 		
	 Loading arm hydraulic pump starts 		

8.4 Liquid and Vapor Line Operating Envelopes


Introduction

This section provides details on the Terminal liquid and loading arm operating limits and limits for ESD1 and ESD 2 activation.

Loading arm moving area

The following diagrams illustrate the loading arm moving area.

Figure 8-2 Loading Arm Envelopes – Plan

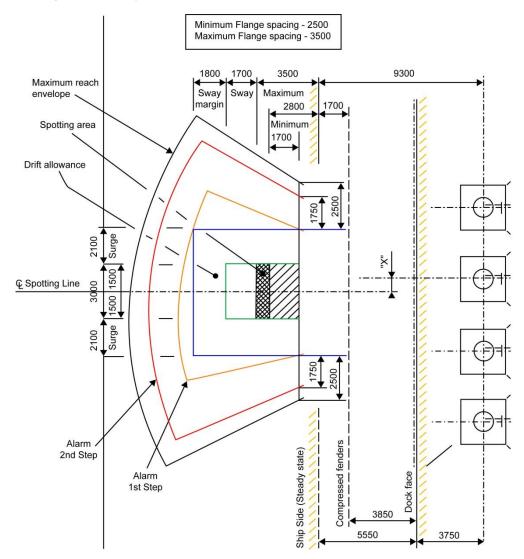

Maximum reach Outboard Arm 35' (10668) Inboard Arm 33' (10058) envelope Alarm 1st Step \odot 870 Minimum Alarm 2nd Step 2030 Minimum 5 1100 (•) 1850 Heave 1100 (•) 1200 Minimum 90 (•) GBS Subsidence Spotting area 1850 Heave 2750 11 1 1750 3750 2131 (•) 1700 22100 Maximum 2030 Minimum 870 Minimum 16000 Minimum 2800 Minimum 1700 1800 1700 9300 Sway Sway 3500 Minimum 29600 HHW 28600 LLW

Figure 8-3 Loading Arm Envelope – Elevation

8.5 LNG Loading Arm Connection Assistance System

Introduction

This section illustrates and describes the LNG loading arm connection assistance system.

In this section

This section contains the following topics:


- LNG Carrier Manifold
- Loading Arm
- Cable Guided Spool Arrangements


8.5.1 LNG Carrier Manifold

LNGc manifold

The following diagram depicts the LNGc manifold arrangement with alignment code.

Figure 8-4 LNGc Manifold Arrangement with Alignment Code

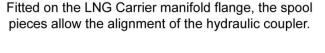

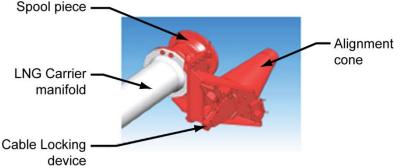

Targeting system general principles

The objective of the targeting system is to progressively apply the relative movements of the LNGc on the loading arm during the approach to the manifold of the LNGc. A cable that is kept under tension guides the style 80 Terminal swivel joints assembly toward the manifold. During this phase, the loading arm is in free wheel mode, and is only guided by the cable.

The cable is kept under tension between the manifold of the LNGc and the base riser of each loading arm. Its tension is kept constant using a constant tension winch located at the base riser of the loading arms. The constant tension winch uses a hydraulic motor that is maintained with a constant oil pressure. If the difference between the LNGc and the Terminal increases, the winch lets the cable unroll while maintaining constant tension; if it decreases, it rolls the cable with the same tension. In all cases, the tension in the cable remains the same.

For the approach of the loading arm toward the manifold of the LNGc, the loading arm is set in the free wheel mode. The style 80 is guided along the cable that passes on the side of the Chiksan hydraulic quick

connect/disconnect (QC/DC). A special hydraulic acquisition winch located near the QC/DC pulls the style 80 in one direction or the other, using friction on the cable.

The cable passes through a female conical guide at the style 80 on the loading arm side, and it is connected to the top of the corresponding male conical guide at the LNGc side.

At the end of the approach phase, the cones engage into each other and ensure the alignment of the two elements. In addition to this, four guides are placed around the QC/DC to finalize its correct alignment before closure.

Once the loading arm is connected, the constant tension is released. Only a minimum tension is maintained to avoid any slack cable. The other loading arms are then connected using the same procedure.


For disconnection, the same principle is used. The only difference is that the acquisition winch is activated in the other direction. The major reason to use the same procedure is to avoid any risk of interference or shock with any part on the LNGc.

8.5.2 Loading Arm

Loading arm

The following graphic depicts a loading arm and identifies its major components.

Figure 8-5 Loading Arm and Major Components

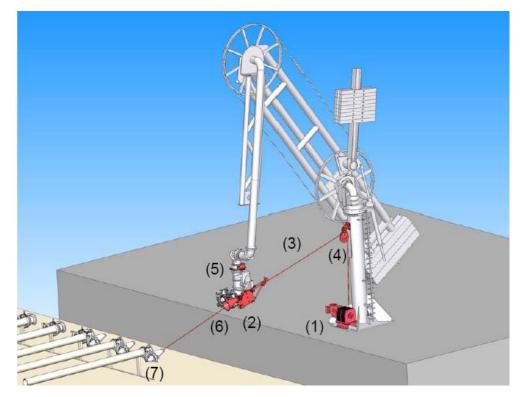

Notes:

- 1. Constant tension hydraulic winch
- 2. Approach hydraulic winch
- 3. Constant tension cable
- 4. Return pulley
- 5. The style 80 rotation system
- 6. The alignment conical guides
- 7. The LNGc's spools

ESD (2) and PERC release

In the event of an ESD (2) and the release of the PERC (powered emergency release coupling), the emergency disconnection is identical to a conventional system with two specific actions implemented:


- The constant tension winch is in free wheel and the cable is run out and released if the LNGc moves away from the berth.
- A fast retraction of the loading arm is activated just after the emergency disconcertion to avoid interference or damage between the two ball valves at the coupling.

8.5.3 Cable Guided Spool Arrangements

Typical spool configuration

The following graphic illustrates a typical configuration with the spools at the LNGC manifolds.

Figure 8-6 Typical Configuration with Spools at LNGC Manifolds

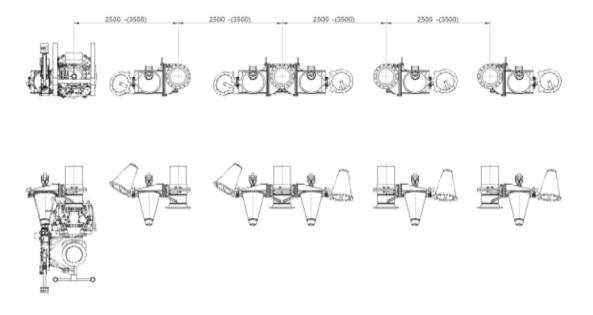

Spool weights and dimensions

The following table lists the spool weights and dimensions.

Table 8-31 LNGC Manifold Spools

SPOOL	DIMENSIONS	WEIGHT
Left or Right	Width 1400 mm	600 kg
	Length 1250 mm	
	Height 780 mm	
Double	Width 2180 mm	1050 kg
	Length 1250 mm	
	Height 780 mm	

8.6 Gangway Arrangement and Operating Envelopes

Introduction

This section provides information pertaining to gangway arrangements and operating envelopes.

In this section

This section contains the following information:


- Gangway Profile
- Gangway Plan
- Gangway Spring Arrangements

8.6.1 Gangway Profile

Introduction

The following graphic depicts the profile of a gangway.

Figure 8-7 Gangway Profile

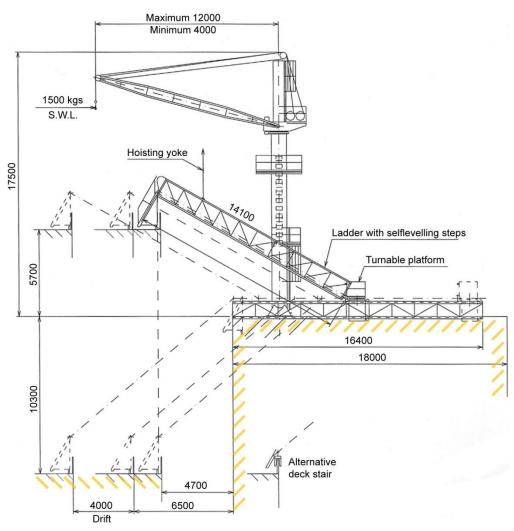


8.6.2 Gangway Plan

Introduction

The following graphic depicts a gangway plan.

Figure 8-8 Gangway Plan

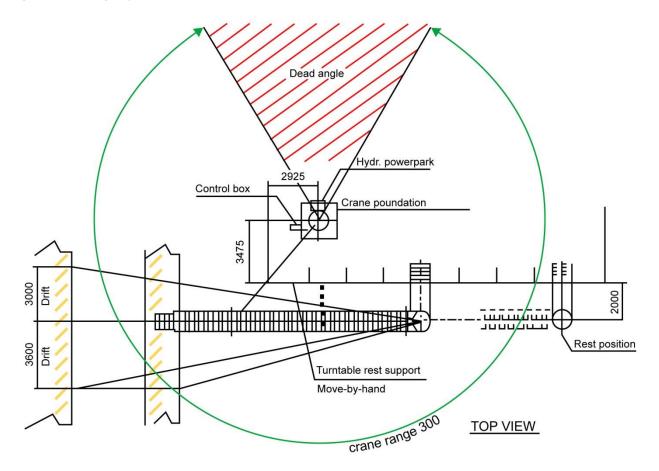


8.6.3 Gangway Spring Arrangements

Introduction

The following graphic depicts gangway spring arrangements.

Figure 8-9 Gangway Spring Arrangements

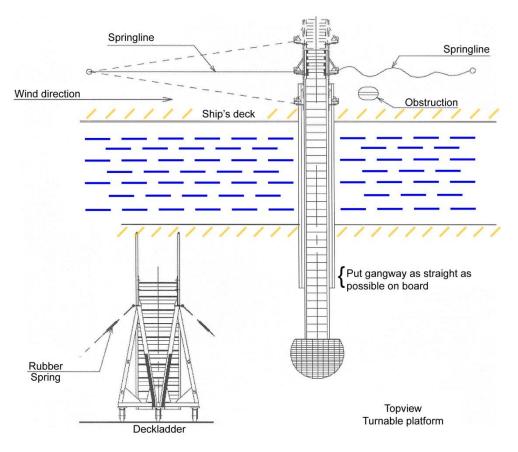

8.7 Ship/Terminal Connection – Pin Configurations

Introduction

This section is primarily intended to provide a general overview of the Ship/Terminal (commonly referred to as ship/shore) communication system arrangements.

In this section

This section contains the following information:

- SeaTechnik Fiber Optic
- SeaTechnik Electric Wire Link
- Nitta Moore Pneumatic Hose Connection

8.7.1 SeaTechnik – Fiber Optic

Introduction

This section provides information on the Terminal fiber optic ship/shore communication systems.

Note: This is a 6-pin connector type system manufactured by SeaTechnik.

Pin-out configuration


Table 8-32 lists the pin numbers and their signal.

The pin out configuration is shown in Figure 8-10. If the configuration is changed, it must be swapped at both, the Ship (LNGc) and Terminal side, at the equipment patch point.

Table 8-32 Communications	System	Pin Signals
---------------------------	--------	-------------

PIN NUMBER	SIGNAL
1.	Telephone channels 1 to 4 from ship to shore
2.	Telephone channels 1 to 4 from ship to shore
3.	ESD channels from ship to shore
4.	ESD channels from ship to shore
5.	Spare
6.	Spare

Figure 8-10 Pin-out Configuration

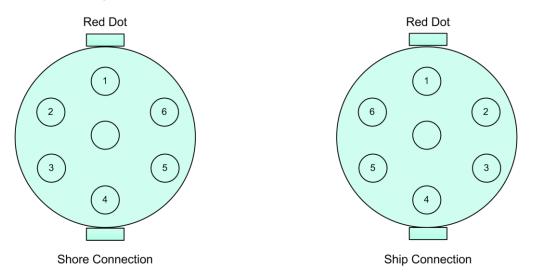

Pins 1 and 2 contain four telephone channels each. These channels are multiplexed together, prior to conversion to or from the optical signal. The telephone channels are allocated as shown in the pin configuration in Table 8-33.

PIN ASSIGNMENT	SIGNAL	
1.	ata channel (mooring line tension)	
2.	Hot line telephone	
3.	Public telephone	
4.	Internal telephone	

 Table 8-33
 Communication
 System
 Pins
 Telephone
 Configuration

8.7.2 SeaTechnik – Electric Wire Link

Introduction

This section provides information on the Terminal electrical ship/shore communication systems.

Table 8-34 Alignment with the Vendor Specifications

ITEM	SPECIFICATIONS
Manufacturer SeaTechnik, Pyle National, 37 pin	
Connector type	37-way (conductor) electrical umbilical cable with Pyle National male end connectors at each end of the cable. Connector pins (contacts) are heavy gold cable.

Pyle National compatible electric system

The Safety link electric secure socket layer (SSL) system for emergency shutdown systems (ESDs) and telecommunications is normally intended for installation within the main Safety link cabinet as an addon system with the fiber optic (FO) system (that is, a back-up system). Some systems are comprised of an electric system only.

When both systems are available, the two systems are completely separate and the electric system incorporates a changeover panel, the System Status Module. Some earlier systems may have a System Selector Module. The actual system selection is carried out within the System Status Module by means of a switch fitted to the module front panel.

It is not possible for both electrical and FO ship/shore connections to be made simultaneously, and for obvious safety reasons, both systems cannot be operated simultaneously.

The system conforms to the so-called "Pyle National" standard in use on most North Atlantic basin LNG terminals, and is designed to match to the specification for the project terminals which are so fitted.

The system relies on flameproof receptacle-type connectors compatible with AF-series Pyle National for connection at the ship end. The 37-way (Heavy Duty Environment resisting) HDE-Type Cenelec certified Pyle National connector carries both telecommunications and ESD on-off signals. Intrinsically safe (IS) barriers or Ex I Activation (Ex'ia') relay isolators are installed in all ship-shore and shore-ship ESD circuits. This provides a back-up protection in the event of an emergency break- away/disconnection. In this event, the ship may be released from the jetty head by remote controlled mooring hooks and the loading arms by the powered emergency release couplings (PERCS). As it might not be possible to release the shipboard or Terminal Pyle plug manually, the live circuits exposed to the hazardous area are prevented from creating an incendive spark if the cable is broken by Ex'ia' relay isolators / IS barriers. However, the telephone circuits at 48 VDC / 78 VAC cannot be protected by Ex'ia' techniques, but are energized only from Terminal voltage and are generally isolated by relay contacts at the Terminal side, actuated by the emergency break-away/disconnection control. A set of relays within the system status module (STM) provide the isolation on disconnection.

Configuration of 37-way connector

Table 8-35 shows the standard pin configuration for the PYLE connector.

PINS	FUNCTION	IS CCT	SHORE/ SHIP	SHIP/ SHORE
1, 2	Sound powered telephone	No*	X*	Х*
3, 4	Spare	No		
5, 6	Hot phone	No	Х	Х
7, 8	Public / private automatic branch exchange (PABX) telephone	No	Х	Х
9, 10	PABX telephone	No	Х	Х
11, 12	4-20 mA signal vapor line pressure	Yes*		Х*
13, 14	ESD Terminal to LNGc (volt free contact on Terminal open for	Yes	Х	
	ESD)			
15, 16	ESD LNGc to Terminal (volt free contact on LNGc open for ESD)	Yes		Х
17, 18	Continuity check link on LNGc	Yes		
19, 20	Continuity check link on LNGc	Yes		
21, 22	Terminal to LNGc Terminal tank high level (HL) ESD trip	Yes*	Х*	
23, 24	ESD Terminal to LNGc	Yes*	Х*	
25, 26	ESD Terminal to LNGc loading arm first stage	Yes*	Х*	
27, 28	ESD Terminal to LNGc loading arm second stage	Yes*	Х*	
29, 30	IS 24 VDC, 35 mA maximum for Terminal Electrical Trades	Yes		
	Union (ETU)			
31, 32, 33	Mooring load monitor (MLM) data connection using RS-232	Yes	Х	X
	signaling interface and IS barrier			
33, 34	Spare	No*	Х*	X*
35, 36	IS 24 VDC, 35 mA maximum for LNGc ETU	Yes		
37	Spare	No*	Х*	X*

Table 8-35 37-Pin Electrical (Cable (Pyle National)	Configuration
--------------------------------	-----------------------	---------------

Note: * Optional functions

The ship is normally fitted with an identical Pyle system for the telecommunications and ESD circuits. In practice, the ship provides a 50 m umbilical cable which has a Pyle plug fitted to each end of the cable. One end connects into the Pyle receptacle inside one of the shipside boxes found on the ship, the other end of the cable connects to the receptacle on the shore. This umbilical cable connection then completes the circuits between the SSL systems on the ship and shore.

ESD operation ship to Terminal is by the opening of a volt free contact on board the ship which trips the ESD relay on the shore system. ESD operation Terminal to ship is by the opening of a volt free contact on the shore system which trips the ESD relay on board the ship.

Receptacles


The receptacle is fitted with a 1 1/2 in normal pipe thread (NPT) connection for the Ex'd' gland.


Connection to the cable installed at the receptacle is by heat shrink solder-less crimp splice connectors for the 37-way receptacle.

The connector and receptacle are not intended for connection/disconnection while energized.

The principal dimensions are shown in Figure 8-11.

Figure 8-11 View on Receptacle Type Pyle National Compatible Receptacle Contacts Numbered in Spiral Arrangement

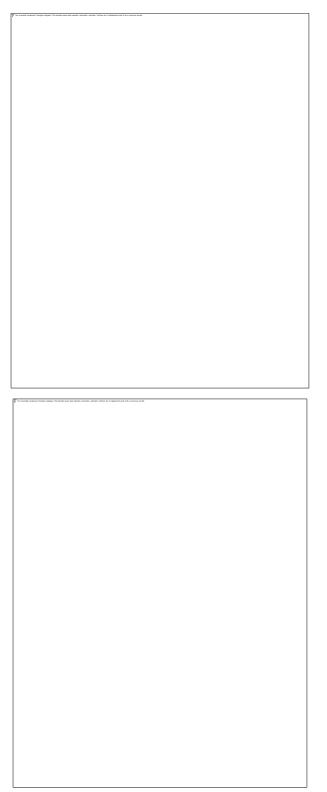

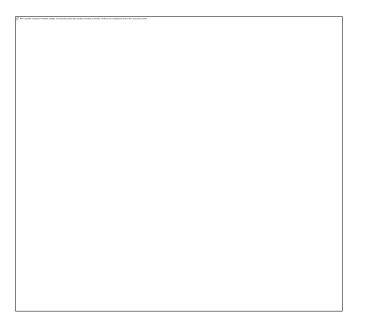

8.7.3 Nitta Moore – Pneumatic Hose Connection

Introduction

This section provides information on the Terminal pneumatic ESD link.

Specifications

The following table lists the basic specifications for the Nitta Moore – pneumatic hose connection.

 Table 8-36
 Nitta Moore – Pneumatic Hose Connection

ITEM	SPECIFICATIONS
Manufacture/model	Nitta Moore SVHN8 series
Connector type	½ in. BSP Snaptite male connector with adapter link female-female
Air pressure	 Normal pressure: 3.5 barg
	 Activation pressure: 3.0 barg

8.8 General Information – LNGc Mooring and Offloading Operations

Introduction

This section provides general information provided to LNGcs relating to the operations at the Terminal, including mooring and offloading LNG.

Terminal and anchorage locations

The Adriatic LNG Terminal is located approximately 10 nautical miles ENE of Porto Levante.

Note: For details see Chapter 5.4

Restricted and exclusion areas

A 1.1 nautical mile radius Exclusion Zone exists around the Terminal within which navigation and fishing activities are prohibited. Access to the Exclusion Zone is restricted exclusively to vessels associated with law enforcement agencies, LNG Carriers calling at the Terminal and service vessels either working for or authorized by the Terminal to be in the zone.

There is also a 1.5 nautical mile radius area to be avoided (ATBA) around the Terminal where anchoring is not permitted.

LNGc size limitations

The Terminal is designed to provide a safe mooring for LNGcs satisfying the following size limitations reported inside ALNG "Terminal Regulations"

Note: All LNGc must conduct LNG cargo discharge and ballast operations simultaneously in order to minimize the exposed wind area of the LNGc while moored.

LNGc miscellaneous requirements

LNGc must have fitted 22 m polyester or nylon tails at the head, stern, and breast lines and 11 m polyester or nylon tails on the spring lines.

In case of distance from LNGC manifold and handrails is below 3 mtrs, LNGc must be fitted with fully collapsible starboard (STBD) side handrails at the LNG manifold to allow connection of loading arms using the Terminal cable guidance system.

LNGc domestic matters

Table 8-37 LNGc Domestic Matters	

DOMESTIC MATTER	DESCRIPTION
Bunkers and potable	There are no bunkering or potable water facilities at the Terminal. Bunkering
water	activities are not permitted at the Terminal not within the Terminal Exclusion Zone
	or ATBA.
Garbage facilities	There are no garbage reception facilities on the Terminal.
Repairs	Repairs, except those as agreed with the Terminal to facilitate safe or continued
	operations while at the Terminal, are prohibited.
Medical care	While there are limited medical facilities available on the Terminal, emergency
	medical evacuation to shore may be organized by ALNG at the expense of the LNGc

Vessel documentation

It is the LNGc Vessel Master's responsibility to ensure that the LNGc has current versions of the following documents:

- Ordinance 63/2008 edited by Chioggia Coast Guard (Maritime Safety Regulations)
- Terminal Regulations Booklet
- ALNG Marine Operations Manual, Chapter 8.0, "LNGc Operations"

Reference: <u>https://www.adriaticlng.it/en/market-area/services/maritime-services</u> for these documents

The Master must confirm to the Terminal and LNGc Agent, receipt of the Terminal and Maritime Safety Regulations and acceptance of terms and conditions including towage service prior to arrival and berthing operations at the Terminal.

It is the Master's responsibility to produce the following documents if requested by the Terminal Representative:

- ALNG *Marine Operations Manual* Chapter 8.0, "LNGc Operations"
- LNGc Emergency Procedures

VHF channels

VHF channels available on a 24 hour basis are:

- Channel 16 (emergency only)
- Channel 08 (operations)

Pilotage

Pilotage is compulsory using the designated Pilotage service. VHF contact should be established with the "Chioggia Pilot station" on Channel 14 (Chioggia Pilot dedicated channel) when within range. The boarding position for the Pilot and Terminal representative is 3.5 nautical miles west north west of the Terminal. The Pilot should remain on board until unberthing is completed.

Tug assistance vessels

LNGc are required to berth and unberth with the designated and approved tugs.

Four tugs are required to remain in close proximity to the Terminal throughout the LNGc stay at the berth and be available in case of early departure requirements of emergency situations. It is requested watch keeping on VHF ch 08.

The tugs in the immediate vicinity to the LNGc and Terminal maintain a security watch to the offshore side of the LNGc

Line handling service

LNG are assisted by the designated line handling boats and mooring crews. Line handling boats and crews together with mooring crews on the Terminal, stationed at each end, transfer and secure the mooring lines.

Cargo documentation

On completion of offloading the LNG to the Terminal, the Marine Specialist transmits the necessary documentation to ALNG. The following table lists the documentation that is completed and sent to ALNG.

Note: Additional documentation may be requested as required.

Table 8-38 Cargo Documentation Sent to ALNG (Marine Specialist / OP.Supt / Law & market dpt)

DOCUMENT	ORIGINATED BY	√/NO.
Attachment 11.3, Ship/Shore Safety Checklist	ALNG	
Attachment 11.4, Cargo Handling Agreement	ALNG	
Attachment 11.5, Communication Agreement	ALNG	
Attachment 11.6, Emergency Contacts and Signals	ALNG	
Attachment 11.8, Emergency Stop Report	ALNG	
Attachment 11.10, ISPS Declaration of Security	ALNG	
Attachment 11.12, Master's Letter of Acknowledgement	ALNG	
Timesheet for discharge port (Terminal timesheet)	ALNG	
Gas Sampling Analysis	ALNG	
Calculation of British thermal unit (BTU) quantity of LNG	ALNG	
Gas Sample Receipt	ALNG	
Summary Report	ALNG	
Weather summary (Wilkins)	ALNG	
Time Log	Independent surveyor	
Opening Custody Transfer	Independent surveyor	
Closing Custody Transfer	Independent surveyor	
Secondary Custody Transfer	Independent surveyor	
Report of Quantity	Independent surveyor	
Notes of Protest	Independent surveyor	
Notice of Readiness	LNGC	
Timesheet for discharging port	LNGC	
Custody Transfer Measurement (CTM) before offloading	LNGc	
CTM after offloading	LNGC	
Certificate of Unloading	LNGc	
Load port gas sample receipts	LNGC	
Notes of Protest	LNGC	
Crew list	LNGC	
Accuracy Certificate	LNGc	

8.9 Pre-Transfer Meeting Agenda

Overview

This section contains an example of Pre-Transfer Meeting Agenda Form.

		tic LNG	i	PRE TRANSFER MEETING AGENDA
Ship				Voyage: Date:
•	Safaty			
<u> </u>	L. Safety Safety Check by ALNG and Ship staff Handrail lowering for cable-guided connection system Orner Transfer Meeting Unloading Schedule Weather forecasts Partial fill operations Muster point location			R' Items re-check every 4 hrs. by ship staff and shore staff. Safety Check to send by fax to Port Authority before commencing unloading. Review of forecasts, confirm operation go ahead. Confirm emergency departure plan in place. if it is request to collapse the Handrail, it will be lowered or removed one by one, and reinstalled immediately after each arm connection. During handrail is collapsed no person crosses the area of sea side. Ensure the open area of the handrail by temporary lashing. In case of Man overboard from handrails or loading arms, recovering responsibility is upon LNG'c Master. Carrier's personnel must use safety harness in addition to the life jacket when lowering/raising the handrail. In case of general alarm where a muster is required personnel will muster at the location where they are is personnel on the terminal will muster at terminal, terminal personnel on ship will muster on Lng'o)
B.C	ommunications			1
	Commission Pyle, F.O., Pneumatic Cable. ESD function ship shore Mooring Tension Monitoring System Communication Checks: UHF, VHF Ch 08-16, phone line		g System	Terminal personnel and LNG Carrier's personnel connect the Fiber Optic, Electrical link and pneumatic lin as soon as the gangway has been set and remove before gangway removal.
C. 0	perations			
1	Vapor/ Liquid Arms Connection	Shore 1 2 3 4	Ship	3 x 16" Liquid, 1 x 16" Vapor. - Steam to Engine off prior connection. - Arm angles to be monitored hourly.
2	Vanor/ Liquid Arm N2 Purge (O2 < 2%) &		2 < 2%) &	Loading Arms pressure test up to 5.0 bar.
3				Vapor manifold shut / No Gas Burning (if gas burning BOG counter reading print-out taken at same time of Opening CTMS)
4	ESD Trip Test (Wa	arm condition	1)	1 - Ship to Terminal 2 - Terminal to Ship
5				Approx. time 90-120 mins, start with fully recirculation cooling pump reaching 0,5 bar on manifolds, avoiding eventual overpressure at first stage, proceeding by instruction from Terminal.Double shut by- pass value open 15%, manifold pressure 2.0 bar. As per terminal representative
£	ESD Trip Test (Cold	condition)		1 - Ship to Terminal 2 - Terminal to Ship
7	LNG Cargo Un-Loading:	P/P 1 & 2 2 & 3 3 & 4 4 & 5 5 & 6 6 & 7 7 & 8	Interval 10 min 5 min 5 min 5 min 5 min 5 min 5 min	Rate increased over approximately 60 minutes to full rate. Maximum rate 13600m3/hr Maximum manifold pressure 4.2 barg Shore back pressure 1.6 – 2.0 barg Advise Loading Master when opening vapour returm Terminal CRO and Loading Master to be advised before of any rate reduction during full rate Sampling to commence when at full rate.
8			9	Loading Master/ Terminal/ Cargo Surveyor to be advised 1 hr. before commencing ramping down. Notify Loading Master of each pump stop. Notify Loading Master when discharge completed Mutual agree liquid flow stopped and closing of manifold ESD valves.
9	9 Loading Arms Draining			Draining to terminal side first with N2. Closing CTMS after arms draining completed and before N2 purge.
10	10 Closing CTMS			Stop burning gas. (if gas burning BOG counter reading print-out taken at same time of Closing CTMS) Vapor Manifold closed.
11	Loading Arm Discor	nnection		Steam to Main Engine to be kept closed until all Arms are disconnected and gangway removed
12	Gangway			To be removed as soon as terminal staff, tension monitor (orange box) and Terminal tools (Black bag) is come back to the Terminal side.

ALNG Loading Master:

Master:

9 LNGC VETTING AND ACCEPTANCE

Overview

Introduction

This chapter provides guidance for, and describes the processes and activities involved in the approval process (vetting and accepting) of Liquefied Natural Gas Carriers (LNGc) nominated to offload liquefied natural gas (LNG) to the ALNG Terminal.

This chapter does not apply to other marine vessels such as tugs, crew supply vessels (CSVs), and so forth.

The Marine Specialist, in conjunction with the Law & Market Group and Logistic Superintendent, is responsible for the activities involved in the documental vetting and acceptance process.

This chapter also includes example documentation and forms used for the documental vetting and acceptance process.

In this chapter

This chapter contains the following information:

- 9.1 General Information on LNGC Approval Procedures
- 9.2 Compatibility Approval Steps
 - 9.2.1 Step 1 Preparatory Information
 - 9.2.2 Step 2 Ship/Shore Interface Study
 - 9.2.3 Step 3 Ship Safety Inspections
 - 9.2.4 Step 4 Unloading Test and Ship Compatibility Approval
 - 9.2.5 Step 5 LNGC Compatibility Approval Follow-up
- 9.3 SIRE Inspections
 - 9.3.1 Overview of SIRE and Application to LNG
 - 9.3.2 SIRE Inspections
 - 9.3.3 Incident Reporting
- 9.4 Ship/Shore Compatibility
- 9.5 Documentation
- 9.6 Sample Documents and Forms

9.1 General Information on LNGC Approval Procedures

Introduction

This section provides an overview of the steps and procedures involved in the approval (documental vetting and acceptance) process for each single LNGc nominated to call at the Terminal for the first time.

The purpose of these procedures is to establish a structured process that evaluates an LNGc capability to safely and efficiently deliver the cargo at Adriatic LNG Terminal.

After a User nominates an LNGc, two activities occur in the pre-approval (*Marine Technical Acceptance*) process leading to approval or rejection of the proposed LNGc.

This is referred to as the approval process and consists of two discrete activities:

- **Compatibility with the Terminal** This is a check of the physical characteristics of the LNGC against the Terminal's and cargo requirements (*Terminal Compatibility process*).
- **Quality assurance of the vessel and the vessel operator** This is an assessment of the capability of the LNGc to perform to predefined safety and environmental standards (*Quality Assurance process*).

Only LNGc which have successfully gone through both streams of the approval process is approved by ALNG for unloading LNG at the Terminal.

Note: *Vessel performance is monitored to ensure that the required performance levels are being maintained.*

The approval procedures established by ALNG principally rely on:

- Existing international rules and regulations, implemented by the flag state of the LNGc or the port state of the Terminal.
- Industry forum recommendations such as Oil Companies International Marine Forum (OCIMF) and Society of International Gas Tanker and Terminal Operators (SIGTTO).

These procedures, including inspections, also address specific aspects pertaining to:

- Safety and security at the berth
- LNG cargo particularities and LNGC during unloading operations
- Crew qualifications
- Understanding the Terminal safety and operational procedures

Tasks

The steps, or tasks, involved in the vetting and acceptance process for LNGc calling at the Terminal is shown in Figure 9-1.

Figure 9-1 LNGC Vetting and Approval Process

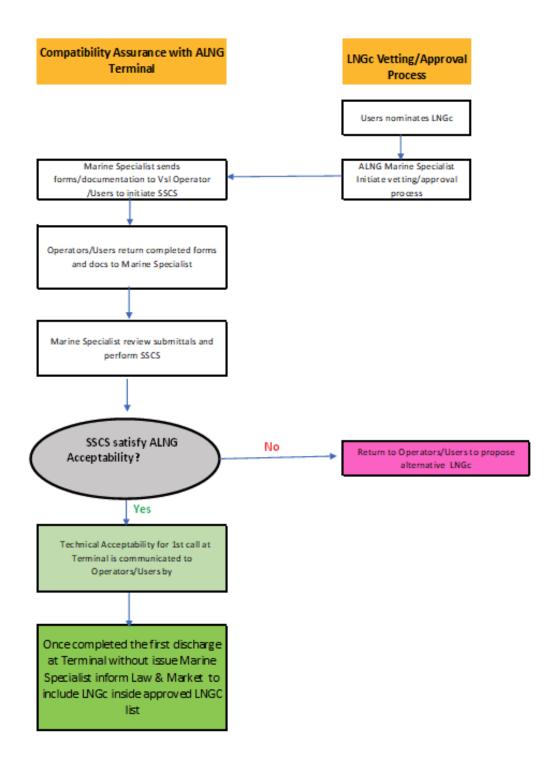


Table 9-1 shows the vetting and acceptance tasks for LNGCs.

TASK	WHO DOES IT?	DESCRIPTION
1.	User	An external User/Operator proposes, to ALNG's Law & Market group, a potential LNGc to deliver and offload LNG to the ALNG Terminal.
2.	ALNG Law & Market	ALNG Law & Market requests the Marine Specialist (copy to Logistic Superintendent) to send the appropriate e-mail to Operator which include as attachment SSCS (Ship Shore Compatibility Study),Coast Guard Ordnance 63/2008 and Terminal Regulation Last Edition. Mail will include a specific set of documents to Operator.
3.	Marine Specialist	The documents are sent to User/Operator as information for the LNGc operator. ALNG requests that the operator complete the applicable documents and return them to ALNG along with other documents specific to the proposed LNGC
4.	User/Operator	Operator completes the required documentation and sends it, and other requested or relevant information, to the Marine Specialist for use in determining if the LNGc is acceptable or not. Note : At this time, the operator may request a visit to the Terminal. If they do visit ALNG, the Marine Specialist holds discussions with them at this time to further explain ALNG requirements and to clarify any items in question.
5.	Marine Specialist	 The submitted documentation is reviewed and if acceptable to ALNG, User/Operator and ALNG Law & Market group are notified by the Marine Specialist that the LNGc is acceptable for her first call at Terminal. (Acceptance can include any indication regarding conditions or item that need to be addressed or rectified prior arrival at Terminal) <i>Note: The acceptance may specify some conditions or items requiring rectification.</i> If the LNGc is not acceptable, User/Operator and ALNG Law & Market are so notified along with reasons for the LNGc not being acceptable.

9.2 Compatibility Approval Steps

Introduction

This section provides detail on the steps used to approve compatibility.

Each LNGc proposed for unloading at the ALNG Terminal undergoes a compatibility (with the Terminal) assurance process (vessel vetting), which is an assessment of the LNGc. The process steps are listed in the following table.

TASK	ACTION	
1.	Exchange preparatory information.	
2.	Ship-shore interface study.	
3.	Ship safety verification at first arrival before berthing (not mandatory)	
4.	Unloading test and approval.	
5.	Ship approval follow-up.	

9.2.1 Step 1 – Preparatory Information

Objective

The main objective of Step 1 is to gather all necessary material (for example, information, data, drawings) to conduct the ship/shore interface study (compatibility study).

Information provided by ALNG

When ALNG receives a request to unload LNG at the Terminal from a LNGc not listed on the ALNG Ship Data Entry List, ALNG provides the documents described in the following table to the requestor.

Table 9-2 Documents Sent by ALNG

DOCUMENT	DESCRIPTION
SIGTTO Ship/Shore Questionnaire for	This document provides details on mooring and manifold
Compatibility of Liquefied Gas Ships with	arrangements, loading arm and gangway data, and other
Loading/Unloading Jetties	Terminal aspects required to conduct a Ship/Shore compatibility
	study.
Terminal Regulations and Information Booklet	This document includes information and procedures (shore part)
	pertaining to safety and operational requirements at the
	Terminal that is necessary to fill out the International Maritime
	Organization (IMO) checklist at the Unloading Port.
Ordinance 63/2008 Edited by Chioggia Coast	This document describes the Coast Guard rules applicable to
Guard	vessel calling at Terminal

Note: Users and Operators can find additional data informations at: <u>https://www.adriaticIng.it/en/market-area/services/maritime-services</u>

Information submitted by the User

Listed below are the information that the user must submit to ALNG before the Ship/Shore Interface Study is performed as part of the approval procedure application associated with User's application:

Table 9-3 Information Users/Operators Submit to ALNG

ITEM	DESCRIPTION
Ship/Shore Interface Plan	 This document, if available (for example, new ships contain this item), is provided as per the <i>SIGTTO Paper #5</i>, "Communication Necessary for Matching Ship to Berth". If it is not available, the user submits the following documents: General Arrangement Manifold layout Mooring arrangements Parallel body flat body line (parallel mid body) of the LNGC drawing Details of the landing area for the shore gangway Reference: <i>SIGTTO Paper #5</i>
SIGTTO Ship/Shore	The user must submit a completed SIGTTO Ship/Shore Questionnaire for
Questionnaire	Compatability of Liquified Gas Ships with Loading/Unloading Jetties.
Ship Questionnaire (VPQ)	The questionnaire is completed according to the SIGTTO form Ship Information Questionnaire for Gas Carrier, 1998, 2nd edition.
Certified Custody Transfer Measurement System description	Description of the LNGc custody transfer system and certificate of accuracy.
Tank Gauge Tables	User must provide approved copies.
Ship Operational and	Procedures pertaining to the International Safety Management (ISM) code
Safety Procedures while	addresses:
Alongside	 Mooring
	Cargo transfer
	 Fire fighting Complete the information for the ship part necessary to complete the IMO checklist.
List of Survey Status	This is issued by the Classification Society for an LNGc.
Inspection Reports	 The user must provide the latest copies of these inspection reports: Classification Society Port State Control (Paris Memorandum of Understanding [MOU])
Certificate of Entry	The Certificate of Entry must be with a registered Protection and Indemnity (P&I) Club.
Approval Letter	An approval letter from the Classification Society for the LNGc to operate in the partial fill condition while at the ALNG Terminal. Classification approval must include the allowable wave height, considering the tank fill level, with respect to LNGc heading and wave period.

9.2.2 Step 2 – Ship/Shore Interface Study

Introduction

In order to verify both the technical compatibility and the operational aspects, it is important to determine that both the LNGc and the ALNG Terminal are familiar with each other's operating procedures. This is typically possible after reviewing all documents exchanged under Step 1.

Document analysis

After examining the information received in Step 1, ALNG performs an interface study to establish technical acceptability of the LNGc at the Terminal. The interface study conclusions are provided to the User/Operators or the User's/Operator's designated representative.

In particular, ALNG checks the following minimum criteria:

- Physical and technical compatibility with the Terminal dimensions
- Nautical and safety aspects
- Compliance with Terminal communication link and emergency shutdown (ESD) system
- Certification of gauge tables1 covering all cargo tanks in the LNGc and Custody Transfer Measurement System2

Notes:

- 1. Certification of gauge tables are approved by the relevant authorities and by ALNG before the first unloading. This certification must be carried out by a qualified organization (for example, the Japanese NKKK [Saybolt NKKK, Japan maritime classification society]).
- 2. Custody Transfer Measurement System specifications and methods must comply with Attachment G of the Operating Company Access Code (OCAC), which is consistent with the recommendations of the GIIGNL LNG Custody Transfer Handbook (currently the Second Edition, October 2001).

Mooring arrangements

The LNGc Operator prepares a proposed mooring arrangement and mooring calculation called OPTIMOOR.

Upon receiving the OPTIMOOR mooring arrangement, ALNG issues, for operational purposes only, a drawing of the proposed mooring arrangement for the specific LNGc and circulate it to:

- Chioggia Pilot
- Chioggia Line Handlers
- Terminal OIM/Ops.Supervisor
- Terminal CRO

Preliminary ship/shore interface meeting (applicable only for Long Term Charter)

Following the completion of the document analysis, a Preliminary Ship/Shore Interface Meeting may be called. Representatives of the LNGc Owner, Charterer, and ALNG Terminal attend this meeting, in order to examine berthing, Ship-Shore Interfaces, safety, and communications items in relation to the LNGC and the Terminal.

Marine Operations Manual - LNGC Vetting and Acceptance

The minimum agenda of the Preliminary Meeting is:

- Review of Interface Study conclusions.
- Review of all parameters of the Ship Shore Safety Plan completion. This includes the documents dealing with safety and security, such as firefighting, cargo transfer, and mooring. All this is checked and, if necessary, adapted.
- Cargo tank custody transfer management.
- Agent assignment and tasks.

Note: Any LNGC that successfully completes Steps 1 and 2 is considered a "compatibility pre approved" LNGC for its initial voyage to the Unloading Port, subject to a successful vetting analysis (see Section 10.3, "Approval Process").

Preliminary meeting topics

The following table provides an informative list of discussion topics to address during a preliminary meeting.

ΤΟΡΙΟ	DESCRIPTION		
LNG Custody	Items to address for this topic are:		
Transfer Checklist	 Buyer/seller obligations and rights 		
	 Risk coverage (insurance) 		
	 Standards and units of measure 		
	 LNG quality specification (compatibility with pipeline gas quality limitations) 		
	Woobie index		
	 Higher heating value (HHV) 		
	 Nitrogen content (less than 1 mol %?) 		
	Contaminants		
	 Sulfur and mercury compounds 		
	 Impurities 		
	 Quality determination method 		
	 Boil-off has handling 		
	LNG measurement		
	Actions under deviation		
LNGC	Items to address for this topic are:		
	 General arrangement of ships deck, clearly indicating mooring winches, bollards, and so on 		
	 Permanent communication channels onboard, for example: 		
	 International Marine Satellite (INMARSAT) telephone numbers 		
	o Fax numbers email		
	• Exact geometric volume of each cargo tank necessary for custody transfer		
	calculations		
	 Additional information about the LNGC including maximum dimensions of LNGC 		
Port	Items to address for this topic are:		
User/Operator	 Port Authority, contact person(s) 		
	Ships agent		
	 Transportation to and from LNGC, (storing and crew changes) 		
	Procedures for arranging of Pilots		

Marine Operations Manual - LNGC Vetting and Acceptance

TOPIC	DESCRIPTION		
	Mooring crews		
	 Tugs 		
Pilotage and berth	Items to address for this topic are:		
approach • Communications			
	Pilot boarding		
	 Number of tugs 		
	 Mooring arrangements 		
Ship/Shore safety	This topic concerns emergency procedures and operational interfaces:		
interface	 Contingency planning with a representative of the Carrier Operator. 		
	Communications.		
Instrumentation	Discuss the location and connector specifications for the umbilical communication		
interfaces	systems (for example, Pyle National connector or pneumatic ESD [or both] or optical		
	connector [or both]) for ESD systems and the mooring tension monitoring system.		
Mechanical	Items to address for this topic are:		
interfaces	 Loading arm arrangements, including: 		
	 Flange location and size 		
	 Mesh requirements 		
	 Cable guided system 		
	 Gangway location size and arrangement 		
Ship/Shore Safety	Check and confirm:		
Checklist	Safety interfaces		
	Procedures		
	Equipment		
	 Safety tests (For example, the ESD test before start of unloading operation) 		
Cargo transfer	Discuss cargo transfer arrangements:		
arrangements	Offloading rates		
	Cool-down		
	Vapor return		
Other information	Any other relevant information that exists meeting time.		

9.2.3 Step 3 – Ship Safety Inspections

Introduction

ALNG may require, **but not mandatory**, at its own discretion, an LNGc inspection prior to the first berthing. This inspection is performed by an ALNG endorsed inspector and is done according to the inspection guidelines accepted by ALNG.

ALNG acceptance of an LNGc following such an inspection is without prejudice to the responsibility of the parties, as specified in the relevant transaction agreements, to comply with applicable rules and regulations or for any consequences of noncompliance with respect to the LNGc.

These inspection guidelines are consistent with the Oil Companies International Marine Forum (OCIMF) inspection guidelines and SIGTTOs latest recommendations for crew safety standard and training on LNGCs.

The following table describes the ship safety inspection process.

STEP	WHO DOES IT?	ACTION
1.	Inspector	The Inspector hands over a list of remarks or deficiencies (or both),
		arising from such inspection, if any, to the Master of the LNGC at an
		exit meeting held onboard the LNGc.
2.	ALNG	Sends the list of remarks or deficiencies (or both) to the user.
3.	User	The User forwards them to the LNGc Operator or the Charterer (or
		both).
4.	ALNG	Upon receipt and review of the implementations of corrective actions,
		ALNG decides whether to receive the LNGC at the Terminal.
5.	User/Operator	The user/operator promptly notifies ALNG or ensures that ALNG is
		notified, if any of its LNGc, pre-approved or approved according to
		this vetting procedure, have been rejected or have failed a ship safety
		inspection at another LNG terminal.
6.	User/Operator	The user provides ALNG with all relevant technical details and
		information in that respect.

Table 9-5 Ship Safety Inspection Process

9.2.4 Step 4 – Unloading Test and Ship Compatibility Approval

Introduction

Depending on the outcome of the previous steps, an LNGC is deemed either technically approved or approved pending corrective action, for a single cargo unloading, subject to successful voyage screening which constitutes the Unloading Test. Otherwise, the LNGc is rejected.

Unloading test

If the LNGc is approved pursuant to steps 1, 2 and 3, a single cargo unloading is permitted and conducted.

During unloading, the LNGc undergoes the Unloading Test. This determines whether the LNGc crew understands the ALNG Terminal interface and establishes ship/shore compatibility.

Before unloading the LNG cargo, a pre-discharge meeting is held on-board. During this meeting, the following occurs:

- A review of the *Terminal Regulations and Information Booklet* is completed in order to ensure an understanding of the Terminal requirements, including:
 - o Mooring
 - Firefighting
 - Cargo transfer
 - Cargo tank management
 - Unloading communication
 - Operational procedures
- A duly completed *Terminal Regulations and Information Booklet* is signed by the LNGC's Master and ALNG's representative.
- The LNGC's Master and ALNG's representative check and sign the IMO Ship/Shore Safety Checklist and Guidelines.

Upon completion of these actions, the LNG cargo transfer can take place.

LNGc compatibility approval procedure conclusion

Depending on the findings of the Unloading Test, ALNG determines if an LNGc is technically compatible and suitable for unloading at the Terminal. ALNG advises if:

- The LNGc is approved for a 36 months approval period, without being subjected to further Unloading Tests.
- The LNGc is accepted in the future for another Unloading Test pending implementation of corrective action, to the LNGC, requested by ALNG.
- The LNGc is not accepted in the future at the ALNG Terminal (without completion of the full approval procedure).

9.2.5 Step 5 – LNGC Compatibility Approval Follow-up

Introduction

Before and during each call at the ALNG Terminal, the User/Operator must provide timely assistance to ALNG, to clarify and solve any urgent issues that arise before or during each call of one of User's LNGc.

The User/Operator must keep ALNG informed of any modifications to the LNGc, or any changes in its condition or maintenance status related to technical, safety or managerial issues. Based on these modifications, ALNG assesses if the LNGc requires a new approval.

ALNG may require additional safety and technical inspections, in order to check the continued compliance of the LNGc with safety and operational requirements of the Terminal. These inspections may occur during the berthing time at the or at any other time and place.

9.3 SIRE Inspections

Introduction

This section provides an overview of the inspection process, feedback reports, and incident reporting requirements.

In this section

This section contains the following information:

- Overview of SIRE and Application to LNG
- SIRE Inspections
- Incident Reporting
- Terminal Feedback Reports

9.3.1 Overview of SIRE and Application to LNG

Introduction

SIGTTO recommends that the SIRE inspection process be used for quality inspections of LNGc

SIRE is an established, nonprofit, proven system, based on the marine expertise and experience of OCIMF members.

The SIRE Vessel Inspection Questionnaire (HVPQ) is a continuously improved document that provides a structured and factual reporting process.

SIRE inspectors are accredited to ensure that they have an appropriate level of experience and qualification.

Reference: SIGTTO, Ship Vetting and its Application to LNG

9.3.2 SIRE Inspections

SIRE inspection

The LNGc Operator (Operator) ensures that a current SIRE Vessel Inspection Questionnaire for the LNGc is available. The Operator is responsible for arranging an inspection at least every 12 months. The Operator must promptly submit any responses relating to observations raised during the inspection to the OCIMF SIRE system. This enables the comments to be considered during any subsequent LNGc vetting.

The Operator ensures that the LNGc is presented in a suitable condition for inspection. In assessing the suitability of the LNGc, Vetting Companies considers both the current and previous inspection results.

Reference to: OCIMF SIRE HVPQ (*Harmonised Vessel Particulars Questionnaire v5*)

9.3.3 Incident Reporting

Requirements

In line with TMSA guidance, LNGC Owners and Operators must maintain an internal incident and nearmiss reporting and recording system. Using this system, they can record "lessons learned" and take necessary preventative actions.

The Operator must promptly advise ALNG and User of any incidents or accidents sustained by or on the LNGc. The reporting requirement is for all activities that the LNGc undertakes (not just those activities that are exclusive to ALNG).

Vetting Company should evaluates such information in conjunction with ALNG as part of the vetting requirements.

All incidents reported to ALNG or to Vetting Companies by the Operator, or obtained through media or other industry sources are recorded.



IMPORTANT

Operators must undertake their own internal investigation to determine prime and root causes of the incident, and take corrective action to prevent recurrence.

Following an incident, the LNGc may be placed on hold (for example, prevented from visiting the ALNG Terminal) until ALNG reviews the incident report and makes a determination that the LNGC remains accepted.

9.4 Ship/Shore Compatibility

Introduction

This section provides details of Terminal compatibility information and specific additional requirements for LNGCs calling at the ALNG Terminal.

Requirements

There are specific requirements that apply to LNGCs calling at the ALNG Terminal.

ALNG includes these requirements as part of the LNGC compatibility review process and ALNG acceptance. The requirements are:

- Head, Stern, and Breast line wire or high molecular polyethylene (HMPE) mooring lines must be fitted with 22 meter polyester or nylon mooring tails at spring lines. Certificates and inspection data must be available to ALNG's Representative on request. LNGC Operators are required to confirm that this requirement is met prior to approval.
- Fully Collapsible or removable starboard (STBD) side handrails must be fitted at manifold to allow connection of loading arms using cable guidance system.
- ALNG requires that all LNGCs have approval from the Classification Society to operate in the partial fill condition while at the ALNG Terminal. ALNG requires owners to forward a copy of this approval.
- LNGC must be fitted with 60 mesh manifold loading strainers, as per SIGTTO Recommendations for the Installation of Cargo Strainers on LNG Carriers – 2nd Edition 1992.

Reference: SIGTTO *Recommendations for the Installation of Cargo Strainers on LNG Carriers*, 2nd Edition 1992

Terminal design

The Terminal is designed to provide a safe mooring for LNGCs satisfying the following size limitations:

Table 9-6 Terminal Design Size Limitations

Maximum arrival displacement	145,000 metric tonnes
Maximum length overall (LOA)	320 meters
Minimum LOA	Approximately 215 meters
Maximum Beam	50 meters
Maximum Moulded Depth	27 meters
Maximum Loaded Draft	13 meters

All LNGCs must conduct LNG cargo discharge and ballast operations simultaneously in order to minimize the exposed wind area of the LNGC while moored.

Domestic matters

Ship/Shore compatibility domestic matters include:

Table 9-7 Ship/Shore Compatibility Domestic Matters

DOMESTIC MATTER	DESCRIPTION	
Bunkers and potable	There are no bunkering or potable water facilities at the Terminal. Bunkering	
water	activities are not permitted at the Terminal or within the Terminal Exclusion Zone	
	or area to be avoided (ATBA).	
Garbage facilities	There are no garbage reception facilities at the Terminal.	
Repairs	Repairs, except those as agreed with the Terminal to facilitate safe or continued	
	operations while at the Terminal, are prohibited.	
Medical care	While there are limited medical facilities available on the Terminal, emergency	
	medical evacuation to shore may be organized by ALNG at the expense of the	
	LNGC.	

VHF channels

VHF channels available on a 24 hour basis are:

- Channel 16 (emergency only)
- Channel 08 (operations)

Pilotage

Pilotage is compulsory using the designated Pilotage service. Very high frequency (VHF) contact should be established with the "Chioggia Pilot station" on Channel 14 when within range. The boarding position for the Pilot and Terminal representative is 3.5 nautical miles West North West of the Terminal. The Pilot remains on board until unberthing.

Tug assistance vessels

LNGCs are required to berth and unberth with the designated and approved tugs.

Four Tugs are also required to remain in close proximity to the Terminal throughout the LNGC stay at the berth and be available in case of early departure requirements or emergency situations.

The tugs in immediate vicinity to the LNGC and Terminal maintain a security watch to the offshore side of the LNGC.

Line handling service

LNGCs are assisted by the designated line handling boats and mooring crews. Line handling boats and crews together with mooring crews on the Terminal stationed at each end transfer and secure the mooring lines.

A mooring crew remains on the Terminal during the LNGC call at the Terminal to release the vessel and be available in case of emergency or requirement to renew secure a mooring line.

Bilge discharge

The discharge of bilge effluents, oil, or any mixture containing oil to sea is strictly prohibited.

Bilge overboard valves must be visibly locked shut.

Ballast discharge

In accordance with port Regulations, only clean segregated ballast is discharged from the LNGC when at the Terminal.

9.5 Documentation

Introduction

This section provides general information about documentation provided to, and received from, the LNGCs relating to the vetting and acceptance process and the operations at the Terminal, including mooring and offloading LNG.

Operations at the Terminal

The following ALNG documents and local ordinances are typically furnished to LNGCs for their familiarization with the operations at the Terminal and local authority requirements:

- ALNG Marine Operations Manual, Chapter 8, "LNGC Operations"
- ALNG Terminal Regulations and Information Booklet
- Chioggia Harbor Master Ordinanza No 63/2008

Note: Additional documentation and information may be provided as appropriate or needed.

Reference: Section 10.7, "Sample Documentation and Forms"

Vetting documentation

Specific information and completed documentation, on all prospective LNGC vessels, is required by ALNG. These include, but are not limited to, the following:

- ALNG SIGTTO Compatibility Questionnaire
- OCIMF Vessel Particular Questionnaire
- Description of the LNGC custody transfer system and certificate of accuracy
- LNGC tank gauge tables
- Ship operational and safety procedures while alongside
- Latest Classification Society procedures while alongside
- P&I Club certificate of entry
- Departure plan (membrane vessels only)

Reference: ALNG Terminal Regulations and Information Booklet

- Copy of latest inspections; Port State control
- Ship/Shore interface plan

Note: If Ship/Shore interface plan is not available, the following must be provided for the LNGC:

- General arrangement
- Manifold layout
- Mooring arrangement
- Parallel body flat body line of the LNGC
- Details of the landing area for the Terminal (shore) gangway
- Optimoor Analysis

Reference: Section 10.7, "Sample Documents and Forms"

OPTIMOOR analysis

To help determine if vessels can be safely moored at the ALNG Terminal (and if special limitations are necessary), ALNG requires all LNGCs, prior to acceptance of the vessel, to perform an assessment of mooring arrangements to assess the adequacy of vessel mooring equipment for the ALNG Terminal.

OPTIMOOR is a mooring analysis computer program that can be used by the LNGC operator to perform this analysis. It is based on the OCIMF recommendations and procedures and includes OCIMF wind and current coefficients for tanker moorings.

The program can assess the need for and effectiveness of auxiliary mooring lines, wind or current limitations can be imposed, and tide tables can be input to anticipate line tending requirements.

Advantages and problems of various mooring arrangements can be demonstrated. The time-forward feature with tide, draft, and trim changes can illustrate how to anticipate line tending and what is the best tending action.

9.6 Sample Documents and Forms

Example documents and forms

This section includes the following examples of documents and forms relating to the vetting/acceptance process:

- ALNG SIGTTO Compatibility Questionnaire
- OCIMF Vessel Particular Questionnaire
- Description of the LNGC custody transfer system and certificate of accuracy
- LNGC tank gauge tables
- Ship operational and safety procedures while alongside
- Latest Classification Society procedures while alongside
- P&I Club certificate of entry
- Departure plan (membrane vessels only)
- Copy of latest inspections; Port State control
- Ship/Shore interface plan
- General arrangement
- Manifold layout
- Mooring arrangement
- Parallel body flat body line of the LNGC
- Details of the landing area for the Terminal (shore) gangway
- OPTIMOOR analysis

GLOSSARY

Terms, abbreviations, and acronyms

The following terms, abbreviations, and acronyms are used throughout this document.

TERM	DESCRIPTION
ABS	American Bureau of Shipping
AIS	Automatic Identification System
ALNG	Terminale Gnl Adriatico Srl
ATBA	Area To Be Avoided
Bar	1 bar = 100 kPa = 14.5 psi (pressure)
Barg	Bar gauge (pressure)
BOG	Boil-Off Gas
BOSIET	Basic Offshore Safety Induction and Emergency Training
BTU	British thermal unit
BV	Bureau Veritas
°C	degrees Celsius
CACS	Critical Alarms, Controls, and Shutdowns
CFR	Code of Federal Regulations
CIST	Company Internal Safety Training
COLREG	Convention on International Regulations for Preventing Collisions at Sea
СР	Cathodic Protection
CRO	Control Room Operator
CSC	Convention of Safe Containers
CSV	Crew Supply Vessel
СТМ	Custody Transfer Measurement
CTS	Custody Transfer System
DGPS	Differential Global Positioning System
D.L.	Legislative Decree
DNV	Det Norske Veritas
DP	Dynamic Position
DPO	Dynamic Position Operator
DSC	Digital Selective Calling
DSV	Diving Support Vessel
ECDIS	Electronic Chart Display and Information System
ENE	East Northeast
EPC	Engineering, Procurement, and Construction Contractor
EPIRB	Emergency Position Indicating Radio Beacon
ERP	Emergency Response Plan
ERRV	Emergency Response and Rescue Vessel
ERS	Emergency Release System
ESD	Emergency Shutdown
ETA	Estimated Time of Arrival
ETD	Estimated Time of Departure
ETU	Electrical Trades Union
F&O	Financial and Operating

TERM	DESCRIPTION
FA	First Aid
FiFi	FireFighting
FMC	FMC Technologies
FMEA	Failure Modes and Effects Analysis
FO	Fiber Optic
FRC	Fast Rescue Craft
FROG	A personnel transfer system device manufactured by Reflex Marine
GBS	Gravity Based Structure
GIIGNL	Groupe International des Importateurs de Gaz Naturel Liquéfié
GL	Germanischer Lloyd
GMC	Global Marine Center
GMDSS	Global Maritime Distress and Safety System
GP	Global Practice
GPI	General Performance Indicator
GPS	Global Positioning System
GRT	Gross registered tonnage
GSM	Global System for Mobile Communications
GT	Gross Tonnage
НАССР	Hazard Analysis and Critical Control Point
HDE	Heavy Duty Environment resisting
HF/SSB	High Frequency / Single Side Band
HHV	Higher Heating Value
HL	High Level
НМРЕ	High Molecular Polyethylene
H ₂ S	Hydrogen Sulfide
ID	Identification
IIMM	Istituto Idrografico della Marina Militare Italiana
ILO	International Labor Organization
IMCA	International Marine Contractors Association
IMO	International Maritime Organization
IMT	International Marine Transportation, Ltd.
in	inch
INMARSAT	International Marine Satellite (communications)
IS	Intrinsically Safe
ISM	International Safety Management
ISO	International Organization for Standardization
ISPS	International Code for the Security of Ships and Port Facilities
ISSC	International Ship Security Certificate
JSA	Job Safety Analysis
kg	kilogram
kHz	kilohertz
km	kilometers
kPa	kilopascal
KPI	key performance indicator
LHV	line handlers vessel

LNGliquefied natural gasLNGCLNG carrier (vessel)LOALength OverallLPLow PressureLPSALoss Prevention Self-AssessmentLRSLloyd's Register of ShippingLSALifesaving ApplianceLTILost Time Incidentmmeterm³/hcubic meters per hourMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMFMedium frequencyMHzMooring Load Monitormmmillimeter	
LOALength OverallLPLow PressureLPSALoss Prevention Self-AssessmentLRSLloyd's Register of ShippingLSALifesaving ApplianceLTILost Time Incidentmmeterm³/hcubic meters per hourmAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMHzMedium frequencyMLMMooring Load Monitor	
LPLow PressureLPSALoss Prevention Self-AssessmentLRSLloyd's Register of ShippingLSALifesaving ApplianceLTILost Time Incidentmmeterm³/hcubic meters per hourmAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMFMedium frequencyMHzMooring Load Monitor	
LPSALoss Prevention Self-AssessmentLRSLloyd's Register of ShippingLSALifesaving ApplianceLTILost Time Incidentmmeterm³/hcubic meters per hourmAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMooring Load Monitor	
LPSALoss Prevention Self-AssessmentLRSLloyd's Register of ShippingLSALifesaving ApplianceLTILost Time Incidentmmeterm³/hcubic meters per hourmAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMooring Load Monitor	
LRSLloyd's Register of ShippingLSALifesaving ApplianceLTILost Time Incidentmmeterm³/hcubic meters per hourmAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMFMedium frequencyMHzMooring Load Monitor	
LSALifesaving ApplianceLTILost Time Incidentmmeterm³/hcubic meters per hourmAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMegahertzMLMMooring Load Monitor	
LTILost Time Incidentmmeterm³/hcubic meters per hourmAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMegahertzMLMMooring Load Monitor	
m³/hcubic meters per hourmAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMegahertzMLMMooring Load Monitor	
mAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMegahertzMLMMooring Load Monitor	
mAmilliampereMAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMegahertzMLMMooring Load Monitor	
MAROPSMarine OperationsMARPOLInternational Convention for the Prevention of Pollution from ShipsMESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMegahertzMLMMooring Load Monitor	
MARPOL International Convention for the Prevention of Pollution from Ships MESQAC-OV The Marine Environmental, Safety, and Quality Assurance Criteria for Offsh Vessels Vessels MF Medium frequency MHz Megahertz MLM Mooring Load Monitor	
MESQAC-OVThe Marine Environmental, Safety, and Quality Assurance Criteria for Offsh VesselsMFMedium frequencyMHzMegahertzMLMMooring Load Monitor	
VesselsMFMedium frequencyMHzMegahertzMLMMooring Load Monitor	ore
MHz Megahertz MLM Mooring Load Monitor	
MHz Megahertz MLM Mooring Load Monitor	
MLM Mooring Load Monitor	
MMSA Marine Master Service Agreement	
MOB Man Overboard	
MOC Management of Change	
mol mole	
MOM Marine Operations Manual	
MOU Memorandum of Understanding	
MSC Maritime Safety Committee	
MSDS Material Safety Data Sheet	
MSF Marine Safety Forum	
MSI Marine Safety Information	
MTI Medical Treatment Incident	
MTSA U.S. Marine Transport Security Act	
N/A Not Applicable	
NAVTEX Navigation Transmission Exchange	
NI Nautical Institute	
NKKK Saybolt NKKK (Japan maritime classification society)	
NLI Near Loss Investigation	
NM Mautical Mile	
NPT Normal Pipe Thread	
NUC Not Under Command	
NWEA North West European Area	
OCAC Operating Company Access Code	
OCIMF Oil Companies International Marine Forum	
OGP International Association of Oil and Gas Producers	
OIM Offshore Installation Manager	
OLT Operations Leadership Team	

TERM	DESCRIPTION
OOW	Officer on Watch
OPEX	Operating Expenditure
OPITO	Offshore Petroleum Industry Training Organization
OSC	On-scene Commander
OSHA	Occupational Safety and Health Administration
OSR	Oil Spill Response
OST	Operations Support Technician
OSV	Offshore Supply Vessel
OVID	Offshore Vessel Inspection Database
OVIQ	Offshore Vessel Inspection Questionnaire
OVMSA	Offshore Vessel Management Self-Assessment
P&B	Planning and Budgeting
P&I	Protection and Indemnity
P&ID	Piping and Instrumentation Diagram
PABX	Private Automatic Branch Exchange
PERC	Powered Emergency Release Coupling
PFD	Personal Flotation Device
PFSO	Port Facility Security Officer
PI	Performance Indicator
PMS	Planned Maintenance System
POB	Personnel Onboard
PPE	Personal Protective Equipment
ppm	Parts Per Million
PSI	Pounds per Square Inch
РТО	Power Take-Off
PTW	Permit to Work
PU	Production Unit
QC/DC	Quick Connect/Disconnect
RINA	Registro Italino Navale
ROV	Remotely Operated Vehicle
RV	Rendezvous
RWI	Restricted Work Incident
SAR	Search and Rescue
SART	Search And Rescue Transponder
SHEMS	Safety, Security, Health, and Environmental Management Systems
SIGTTO	Society of International Gas Tanker and Terminal Operators
SIMOPS	Simultaneous Operations
SIRE	Ship Inspection and Reporting System
SME	Subject Matter Expert
SMPEP	Shipboard Marine Pollution Emergency Plan
SMS	Safety Management System
SOLAS	International Convention for the Safety of Life at Sea
SOPEP	Shipboard Oil Pollution Emergency Plan
SSB	Single Side Band
SSL	Secure Socket Layer
L	1

TERM	DESCRIPTION
STBD	Starboard
STCW	International Standards of Training, Certification, and Watchkeeping
STM	System Status Module
SWL	Safe Working Load
ТВА	To be Agreed
TMS	Tether Management System
TMSA	Tanker Management Self-Assessment Program
TRI	Total Recordable Incident
TV	Television
UHF	Ultra-High Frequency
UK	United Kingdom
UMS	Unmanned space
U.S.	United States
V	volt
VAC	Volts Alternating Current
VDC	Volts Direct Current
VHF	Very High Frequency
VIQ	Vessel Inspection Questionnaire
VLS	Voyage Log System
vol	volume
VPQ	Vessel Particulars Questionnaire
WP&B	work program and budget
STBD	Starboard
STCW	International Standards of Training, Certification, and Watchkeeping
STM	System Status Module
SWL	Safe Working Load
ТВА	To be Agreed
TMS	Tether Management System
TMSA	Tanker Management Self-Assessment Program
TRI	Total Recordable Incident
TV	Television
UHF	Ultra-High Frequency
UK	United Kingdom
UMS	Unmanned space
U.S.	United States
V	volt
VAC	Volts Alternating Current